


# SHARP SERVICE MANUAL

No. S1805MDR2////



## MD-R2

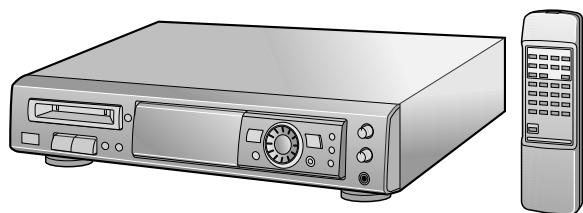

- In the interests of user-safety the set should be restored to its original condition and only parts identical to those specified should be used.

### CONTENTS

	Page
IMPORTANT SERVICE NOTES .....	2
SPECIFICATIONS .....	2
NAMES OF PARTS .....	3
OPERATION MANUAL .....	4
QUICK GUIDE .....	7
DISASSEMBLY .....	8
REMOVING AND REINSTALLING THE MAIN PARTS .....	10
ADJUSTMENT .....	12
EXPLANATION OF ERROR DISPLAY .....	24
EXPLANATION OF MECHANISM ERROR .....	25
BLOCK DIAGRAM .....	28
SCHEMATIC DIAGRAM/WIRING SIDE OF P.W.BOARD .....	30
VOLTAGE (MD MAIN PWB) .....	42
NOTES ON SCHEMATIC DIAGRAM .....	43
WAVEFORMS OF MD CIRCUIT .....	44
TROUBLE SHOOTING .....	46
FUNCTION TABLE OF IC .....	51
PARTS GUIDE/EXPLODED VIEW	
PACKING OF THE SET	

FOR A COMPLETE DESCRIPTION OF THE OPERATION OF THIS UNIT, PLEASE REFER TO THE OPERATION MANUAL.


## IMPORTANT SERVICE NOTES

### BEFORE RETURNING THE AUDIO PRODUCT

(Fire & Shock Hazard)

Before returning the audio product to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the audio product.
2. Inspect all protective devices such as insulating materials, cabinet, terminal board, adjustment and compartment covers or shields, mechanical insulators etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.
  - \* Plug the AC line cord directly into a 120 volt AC outlet.
  - \* Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15 $\mu$ F capacitor in series with all exposed metal cabinet parts and a known earth ground, such as conduit or electrical ground connected to earth ground.
  - \* Use a VTVM or VOM with 1000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor (See diagram).
  - \* Connect the resistor connection to all exposed metal parts having a return path to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.

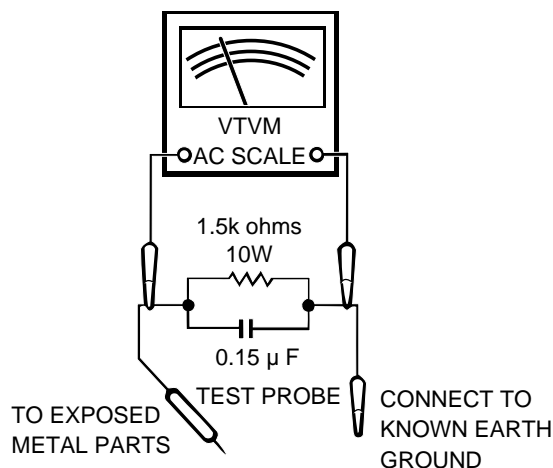

All check must be repeated with the AC line cord plug connection reversed.

Any reading of 0.3 volt RMS (this corresponds to 0.2 milliamp. AC.) or more is excessive and indicates a potential shock hazard which must be corrected before returning the audio product to the owner.

## SPECIFICATIONS

### ● General

<b>Type:</b>	MiniDisc deck
<b>Signle readout:</b>	Non-contact, 3-bean semi-conductor laser pick-up
<b>Audio channels:</b>	Stereo 2 channels/monaural (long-play mode) 1 channel
<b>Frequency response:</b>	4 - 20,000 Hz (+0/-1 dB)
<b>Rotation speed:</b>	Approximately 400 to 900 rpm
<b>Error correction:</b>	ACIRC (Advanced Cross Interleave Reed-Solomon Code)
<b>Coding:</b>	ATRAC (Adaptive TRAnsform Acoustic Coding)
<b>Recording method:</b>	Magnetic modulation overwrite method

### Input sockets

Socket name	Socket shape	Input impedance	Reference input level	Minimum input level
<b>LINE IN</b>	Pin jack	Over 22 kohms	680 mVrms	170 mVrms
<b>OPTICAL IN (Optical)</b>	Square optical connector	_____	_____	_____
<b>COAXIAL (Coaxial)</b>	Pin jack	75 ohms	500 mVp-p	_____

### ● Timer/clock

<b>Type:</b>	Digital clock with date function
<b>Timer:</b>	ON/OFF, once a day

<b>A/D,D/A converter:</b>	1-bit
<b>Sampling frequency:</b>	44.1kHz
<b>Wow and flutter:</b>	Unmeasurable (less than $\pm 0.001\%$ W.peak)
<b>Signal/noise ratio:</b>	100 dB or better during playback (line output)
<b>Power source:</b>	AC 120 V, 60 Hz
<b>Power consumption:</b>	17 W
<b>Dimensions:</b>	Width: 16-15/16" (430 mm) Height: 3-11/16" (93 mm) Depth: 11-15/16" (302 mm)
<b>Weight:</b>	8.0 lbs (3.6 kg)

### Output sockets

Socket name	Socket shape	Output level	Load impedance
<b>PHONES (Headphones)</b>	1/4" (6.3 mm) stereo jack	15 mV	32 ohms
<b>LINE OUT</b>	Pin jack	2 Vrms	50 kohms
<b>OPTICAL OUT (Optical)</b>	Square optical connector	_____	_____


### ● Remote control

<b>Power:</b>	DC 3V ("AA" (UM/SUM-3, R6, HP-7 or similar) battery included x 2)
---------------	---

Specifications for this model are subject to change without prior notice.

## NAME OF PARTS

## ■ Front panel

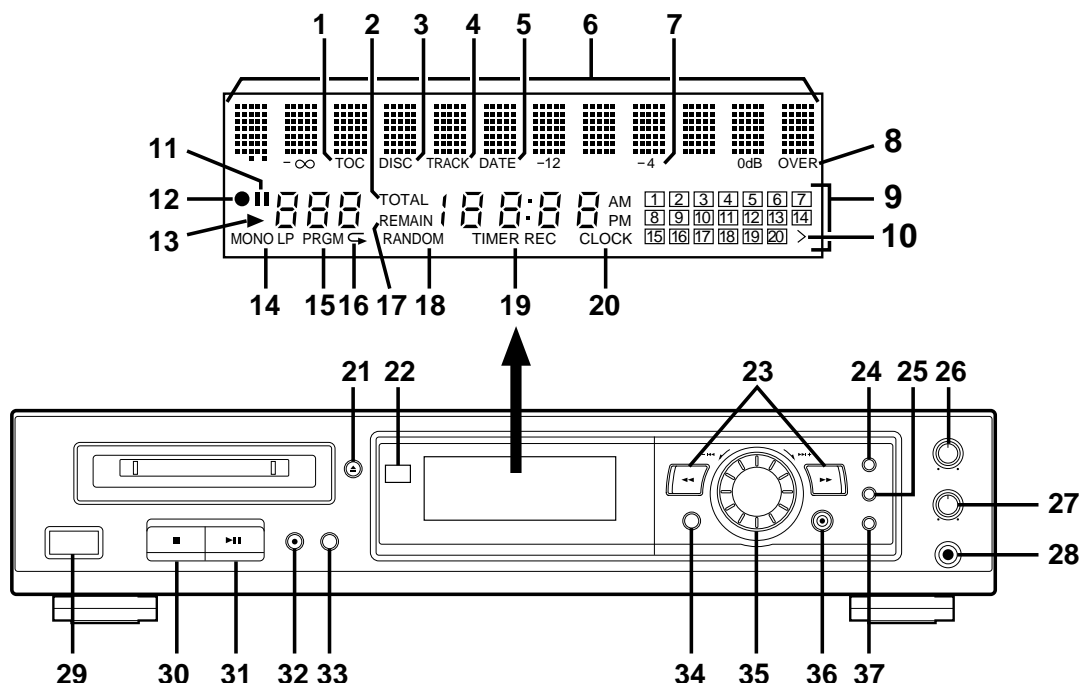


1. TOC Indicator: TOC
2. Total Time Indicator
3. Disc Name Indicator
4. Track Name Indicator
5. Date Indicator
6. Level Meter/Character Information Display
7. Recording Level Indicator
8. Recording Level Too High Indicator
9. Music Calendar
10. More Tracks Indicator
11. Pause Indicator: **||**
12. Record Indicator: **●**
13. Play Indicator: **▶**
14. Monaural Long-Play Mode Indicator
15. Program Indicator
16. Repeat Indicator: **↶**
17. Remaining Time Indicator
18. Random Play Indicator
19. Timer Playback/Timer recording Indicator

20. Clock Indicator
21. Eject Button: **▲**
22. Remote Sensor
23. Cue/Review Button: **◀◀/▶▶**
24. Display/Character Button
25. Name/TOC Edit Button
26. Record Level Control
27. Headphone Level Control
28. Headphone Jack
29. Power Button
30. Stop Button: **■**
31. Play/Pause Button: **▶ ||**
32. Record Button: **●**
33. Input Select Button
34. Program Button
35. Jog Dial (Next/Previous)
36. Enter Button
37. Delete/Clear/Timer Button


## ■ Rear panel

1. AC Power Cord
2. Coaxial Input Jack (Digital)
3. Optical Input/Output Jacks (Digital)
4. Line Input/Output Jacks (Analogue)
5. Reset Button

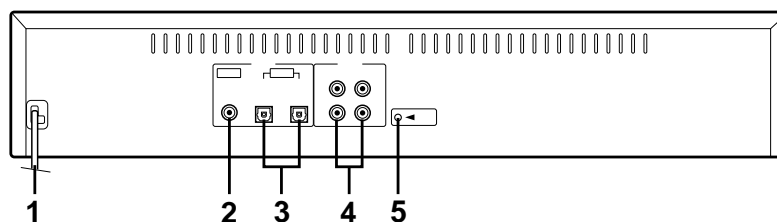

## ■ Names of controls

1. Remote Control Transmitter Window
2. Direct Key Buttons
3. Play Mode Button
4. Music Scan Button
5. Input Select Button
6. Display Button
7. Time Button
8. Auto Mark Button
9. Track Down/Review Button: ◀◀◀/◀◀
10. Track Up/Cue Button: ▶▶▶/▶▶
11. Power Button
12. Program Button
13. Clear Button
14. Synchro Record Button: ●
15. Record Cancel Button
16. Record Mode Button
17. Record Button: ●
18. Play/Pause Button: ▶||
19. Stop Button: ■

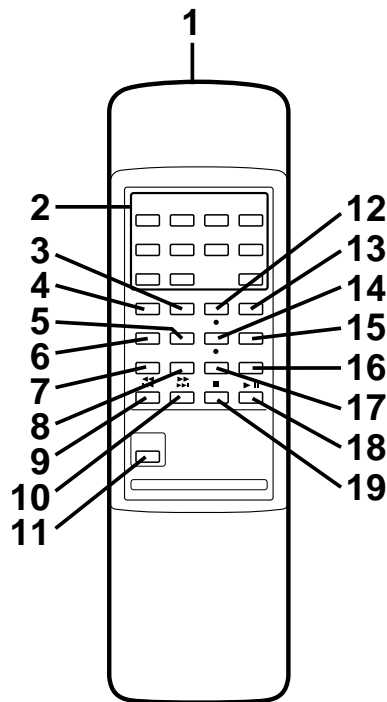


## OPERATION MANUAL


### SETTING THE CLOCK

When recording, the date and time are recorded on the Minidisc.

#### ■ Setting the date

- 1 Press the POWER button to turn the power on and press the TIMER button.
- 2 Within 10 seconds, turn the jog dial until "TIME ADJUST" appears.
- 3 Within 10 seconds, press the ENTER button.
  - The unit will enter the date setting mode.
- 4 Set the "year" using the jog dial.
  - When you turn the jog dial and let go, the year will change up or down by one.
  - The year 2000 or later is set as follows:
    - [00] indicates the year 2000
    - [01] indicates the year 2001
  - The range of dates that can be entered is from January 1, 1997 to December 31, 2099.
- 5 Press the ENTER button to set the "year".
- 6 Set the "month" repeating steps 4 and 5.
- 7 Set the "day" repeating steps 4 and 5.
  - The unit will enter the time setting mode.

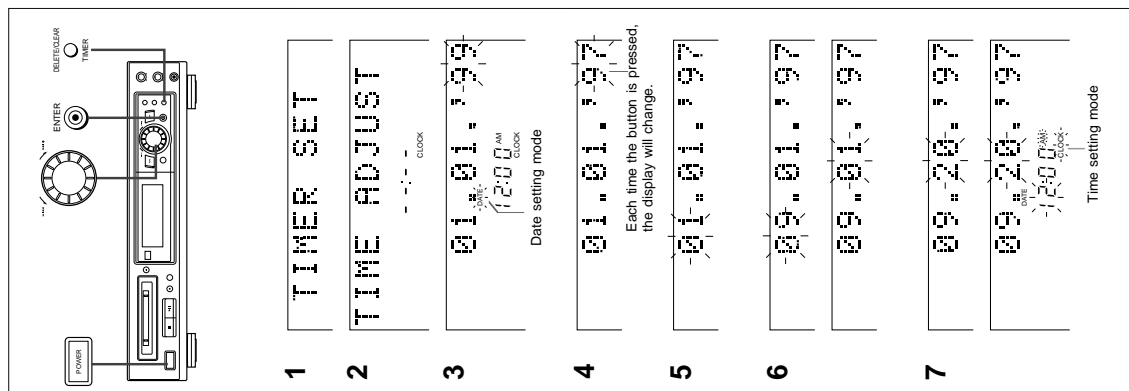

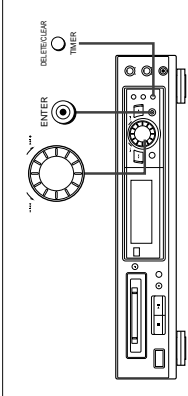

**8**

**9**

**10**

**11**

■ **Setting the time**

After step 7, described in the "Setting the date" section

- 8** Set the "hour" using the jog dial.
- When you turn the jog dial and let go, the hour will change up or down by one. When you turn and hold it, the hour will change continuously.
  - The clock uses the 12-hour system. Pay attention to the AM or PM indicator in the display.  
AM 0:00 → midnight, PM 0:00 → noon
- 9** Press the ENTER button to set the "hour".
- 10** Adjust the "minute" using the jog dial.
- 11** Press the ENTER button to set the "minute".
- When the ENTER button is pressed, the clock will show the correct time.

**Checking the date and time**

After pressing the TIMER button, turn the jog dial until the date and time are displayed.

**Resetting the date and time**

See "Setting the clock".

- Once you have set the date and time, "TIME ADJUST" will not be displayed in step 2. Turn the jog dial to make the date and time appear.
- If you do not need to change the settings, just press the ENTER button without turning the jog dial again.

**TROUBLESHOOTING**

■ **Moisture condensation**

In the following cases, condensation may form inside the unit.

- Shortly after turning on a heater.
- When the unit is placed in a room where there is excessive steam or moisture.
- When the unit is moved from a cool place to a warm place.

**When the unit has condensation inside, the disc signals cannot be read, and the product may not function properly.**

- If this happens, remove the disc, and open the disc holder. The condensation should evaporate in approximately 1 hour. The unit will then function properly.

■ **If a power failure occurs during recording**


If the AC power plug is disconnected from the AC outlet or a power failure occurs during recording (before the TOC information has been recorded on the disc), the audio portion being recorded at that time will be erased. When a recording is being added to a MiniDisc which already has a recording on it, if the TOC is not updated before the power failure, the added recording will be erased.

- If a power failure occurs or the AC power cord is disconnected for about 10 minutes, when power is restored, TOC will be written on the disc.

■ **If a problem occurs**

If this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction or the display may not function correctly. If such a problem occurs, do the following:

- Unplug the AC power cord from the AC outlet.
- Wait about 20 - 30 seconds and then plug the AC power lead back into the AC outlet.
- Press the reset button on the back of the unit.

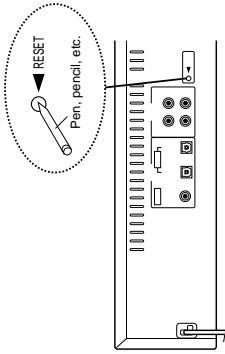

- When the reset button is pressed, all of the settings in memory will be erased.
- If strange sounds, smells or smoke come out of the unit, or if a foreign object falls into the unit, turn off the power, unplug the AC power cord from the AC outlet, immediately. Contact your nearest authorized Sharp service.

**(Continued)****■ If a problem occurs**

If this unit functions abnormally during operation, first check the following items. If the unit continues to function abnormally, or if an abnormality appears other than listed below, turn off the player's power and disconnect the AC power plug, then consult your SHARP dealer or service personnel.

**General**

SYMPTOM	POSSIBLE CAUSE	REMEDY
The clock is wrong.	Did a power failure occur?	Try setting it again.
When a button is pressed, the unit does not respond.	_____	Turn the power off and on again, and then retry the operation.
Radios make unusual noise or the picture on the TV screen is distorted.	When a radio or TV which uses an indoor antenna is placed near the unit, the picture on the TV screen may be distorted or the radio may not function properly.	It is recommended that you use an outdoor antenna.

**Audio**

SYMPTOM	POSSIBLE CAUSE	REMEDY
A recording cannot be made.	Is the MiniDisc protected against accidental erasure?	Slide the accidental erase prevention tab back to its original position.
	Did you try to make recording on a playback-only MiniDisc?	Replace it with a recordable disc.
	Can you see the "TOC FULL" message in the display?	Put in another recordable disc with recording space on it.
Even though a disc has been loaded, "no disc" or "Error" is displayed.	Is the disc scratched?	Replace the disc.
Playback stops in the middle of a track, or playback is not performed properly.	Is the unit located near excessive vibrations?	Place the unit on a firm, level surface free from vibration.
	Is the unit located near excessive vibrations?	Place the unit on a firm, level surface free from vibration.
Playback sounds are skipped.	Has condensation formed inside the unit?	Remove the disc and leave the power turned on. The unit should function properly in about 1 hour.

**Remote control**







SYMPTOM	POSSIBLE CAUSE	REMEDY
The remote control does not function or does not operate properly.	The batteries (polarity) are not inserted properly.	Insert properly.
	The batteries inside the remote control are dead.	Replace the batteries.
	The remote control is operated from an incorrect distance or angle.	Operate it within a range of 8' (0.2 m) to 20' (6 m) and within an angle of 15° to either side of center.
	No disc has been loaded.	Load a disc.
The power cannot be turned on from the remote control.	Is the AC power cord plugged in?	Connect the AC power cord.

**(Continued)**


When an error message is displayed, proceed as follows:

Error messages	Meaning	Remedy
<b>BLANK MD</b>	● Nothing is recorded. (Neither music nor a disc name have been recorded on this MD.)	● Replace the disc with a recorded disc.
<b>Can't COPY</b>	● You tried to record from a disc which you are not allowed to copy.	● Replace it with another disc which you can copy from (regular CD).
<b>Can't EDIT</b>	● A track cannot be edited.	● Change the stop position of the track and then try editing it.
<b>Can't REC</b>	● Recording cannot be performed correctly due to vibration.	● Move the unit away from the source of vibration.
<b>DEFECT</b>	● Since this disc has scratches on it, the recording operation was skipped.	● Replace the disc with another recordable disc.
<b>Din UNLOCK</b>	● Incorrect digital signals are input.	● Connect correct digital signals. ● Use the analog input jack.
<b>DISC ERR</b>	● The disc is damaged or there is no TOC on the disc.	● Reload the disc or replace it.
<b>DISC FULL</b>	● The disc is out of recording space.	● Replace the disc with another recordable disc.
<b>FOCUS ERROR</b>	● The proper focus cannot be obtained.	● Reload the MiniDisc.
<b>MD ERROR</b>	● The unit has determined that it is out of order by performing a self-diagnosis.	● Ask the store where you purchased this unit, about repairs.
<b>MECHA ERR*</b>	● There is a mechanical problem and the disc is not working properly.	● Turn off the power, and press the button.
<b>NAME FULL</b>	● The number of characters for the disc name or track name exceeds 100.	● Shorten the disc or track name.
<b>NO DISC</b>	● A MiniDisc has not been loaded. ● The MiniDisc data cannot be read.	● Load a MiniDisc. ● Reload the MiniDisc.
<b>NOT AUDIO</b>	● The data recorded on this disc is not audio data.	● Select another track. ● Replace the MiniDisc.
<b>PLAYBACK MD</b>	● You tried to record on a playback-only disc. ● The data of disc names and track names are not able to move from playback-only discs.	● Replace it with a recordable MiniDisc. ● Edit only the sound.
<b>PROTECTED</b>	● The MiniDisc is write protected.	● Move the write protection tab back to its original position.
<b>TEMP OVER</b>	● The temperature is too high.	● Turn off the power, and wait for a while.
<b>TOC ERR*</b>	● The disc has a large amount of damage. ● TOC information cannot be read. ● The MD does not meet the specifications for MDs.	● Replace the disc with another disc.
<b>TOC FULL*</b>	● There is no space left for recording character information (track names, disc names, etc.)	● Replace it with another recordable disc.
<b>TOC W ERROR</b>	● The unit has determined that it is abnormal by performing a self-diagnosis.	● Ask the store where you purchased this unit, about repairs.
<b>U TOC ERR*</b>	● The TOC information on this disc does not meet the MD specifications or it cannot be read.	● Replace it with another disc. ● Erase all the data, and try recording.
<b>U TOC W ERR</b>	● The TOC information could not be created properly due to a mechanical shock or to scratches on the disc.	● Turn off the power, and try to write the TOC again. (Remove any source of shock or vibration while writing.)
<b>? DISC</b>	● The data contains an error.	● Replace the disc with another disc.
<b>0 0:00</b>	● Music is not being recorded.	● Replace the disc with a recorded disc.


\*: Number or symbol

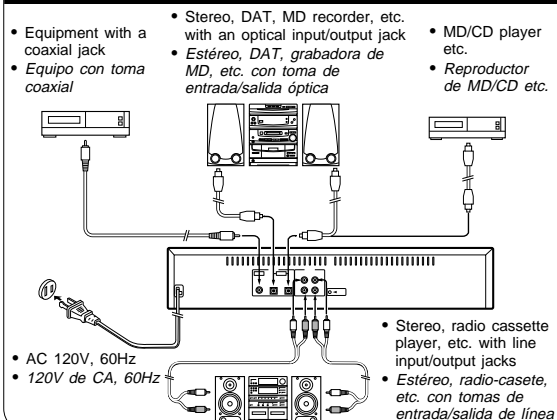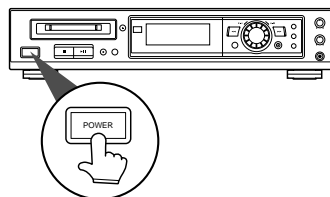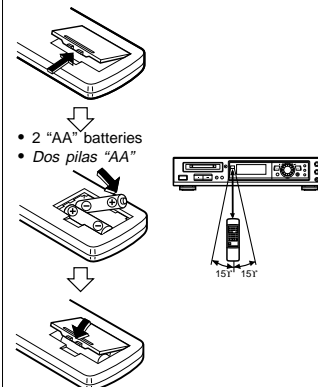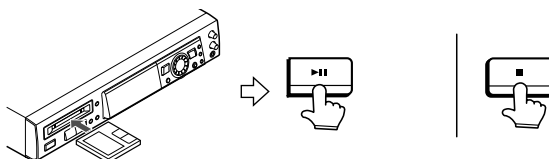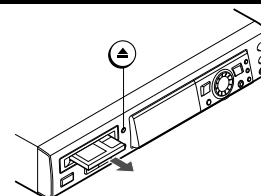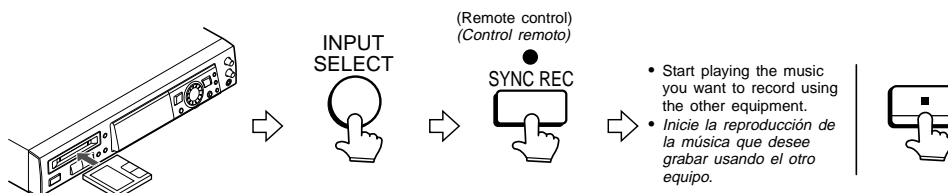**SHARP****MINIDISC DECK  
MD-R2****Quick-Guide  
Guía rápida****Connection  
Conexión****Turning the power on and off  
Conexión y desconexión de la alimentación****Remote control  
Control remoto****Playing a MiniDisc  
Reproducción de un minidisco****To remove a MiniDisc  
Para extraer un minidisco****Recording  
Grabación****Editing  
Edición****DIVIDE  
DIVISIÓN**


- Play the track which you want to divide into two.
- Reproduzca la pista que desee dividir en dos.

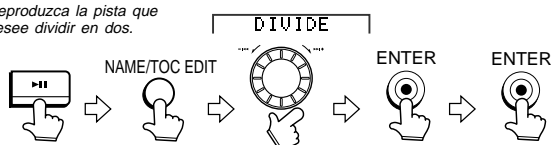**ERASE  
BORRADO**


- Select the track to be erased.
- Seleccione la pista que desee borrar.

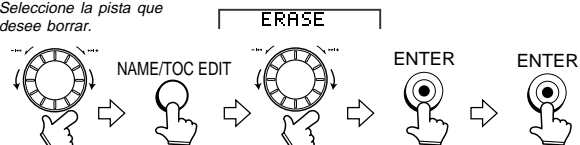**COMBINE  
COMBINACIÓN**

- Select the second of the two tracks you want to combine.
- Seleccione la segunda de las dos pistas que desea combinar.

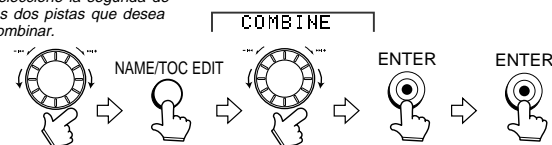**MOVE  
DESPLAZAMIENTO**

- Select the track you want to move.
- Seleccione la pista que desee desplazar.

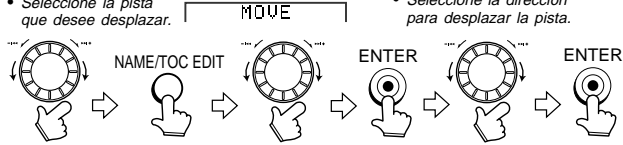

## DISASSEMBLY

**Caution on Disassembly**

Follow the below-mentioned notes when disassembling the unit and reassembling it, to keep it safe and ensure excellent performance:

1. Take the minidisc out of the unit.
2. When disassembling the machine, be sure to withdraw the power plug from the socket in advance.
3. When disassemble the parts, remove the nylon band or wire holder as necessary.

To assemble after repair, be sure to arrange the wires as they were.

If a screw of different length is fitted to the MD mechanism (the screw of the part to be fitted to the MD mechanism chassis), it may contact the optical pickup, resulting in malfunction.

4. When repairing, pay due attention to electrostatic charges of IC.

STEP	REMOVAL	PROCEDURE	FIGURE
1	Top Cabinet	1. Screw ..... (A1) x5	8-1
2	Rear Panel	1. Screw ..... (B1) x5	8-2
3	MD Unit	1. Screw ..... (C1) x4 2. Flat Cable ..... (C2) x1 3. Socket ..... (C3) x1	8-2
4	Front Panel	1. Screw ..... (D1) x5 2. Flat Cable ..... (D2) x1 3. Socket ..... (D3) x1	8-2
5	Main PWB (with Transformer)	1. Screw ..... (E1) x6	8-2
6	Jog Dial	1. Knob ..... (F1) x1 2. Nut ..... (F2) x1	8-3
7	Display PWB	1. Screw ..... (G1) x10 2. Knob ..... (G2) x2	8-3
8	Headphones PWB	1. Screw ..... (H1) x1	8-3
9	Switch PWB	1. Screw ..... (J1) x5	8-3
10	MD Mechanism Unit	1. Screw ..... (K1) x4	8-4
11	MD Main PWB	1. Screw ..... (L1) x2 2. Socket ..... (L2) x6	9-1
12	MD Mechanism	1. Screw ..... (M1) x4	9-2

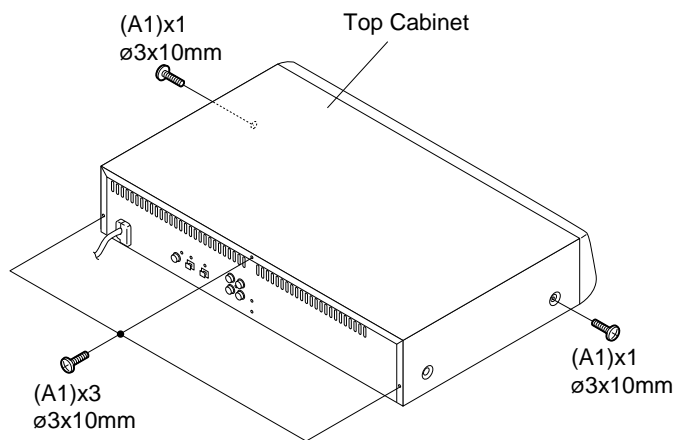


Figure 8-1

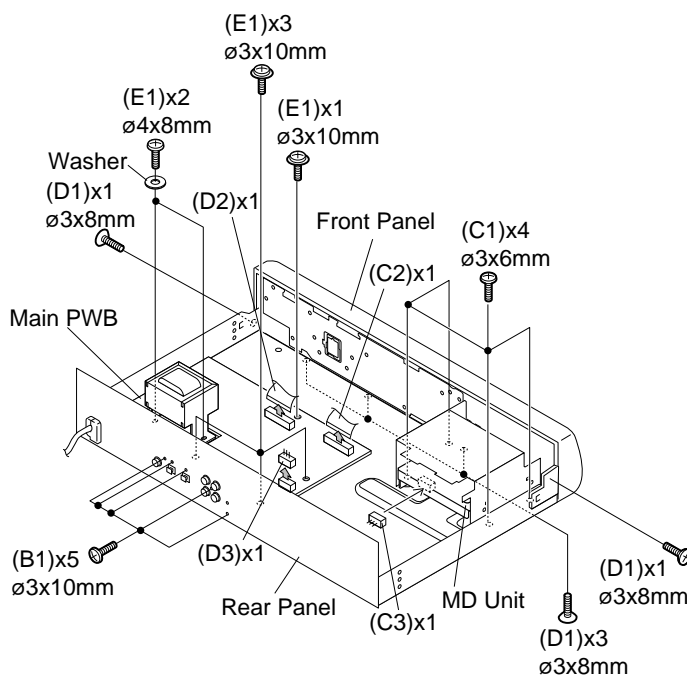


Figure 8-2

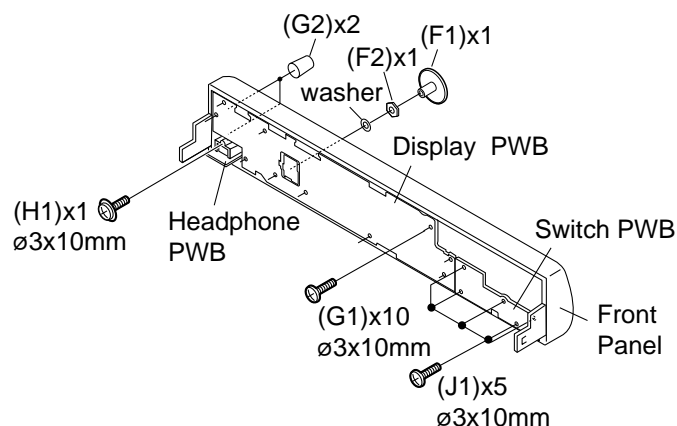


Figure 8-3

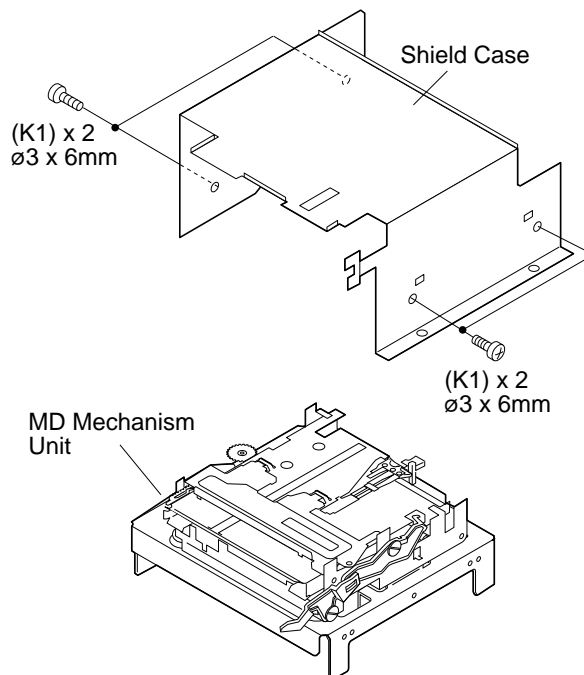


Figure 8-4



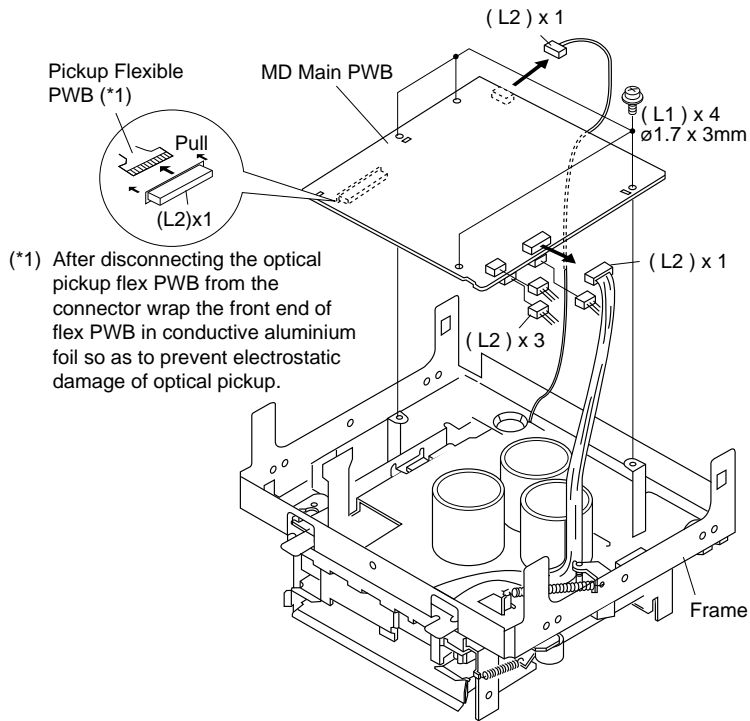


Figure 9-1

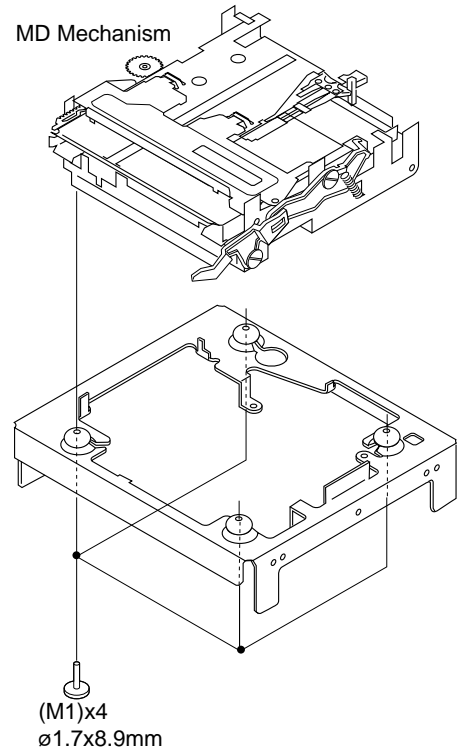


Figure 9-2

### • Jog knob replacement procedure

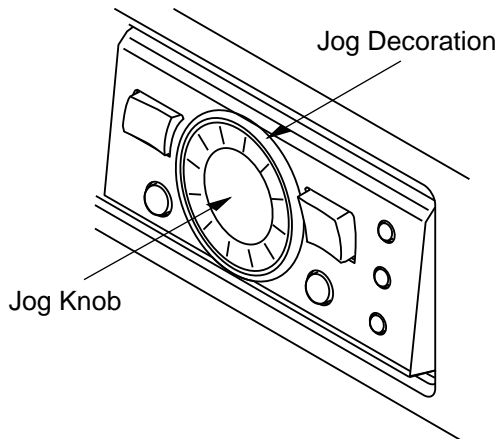


Figure 9-3

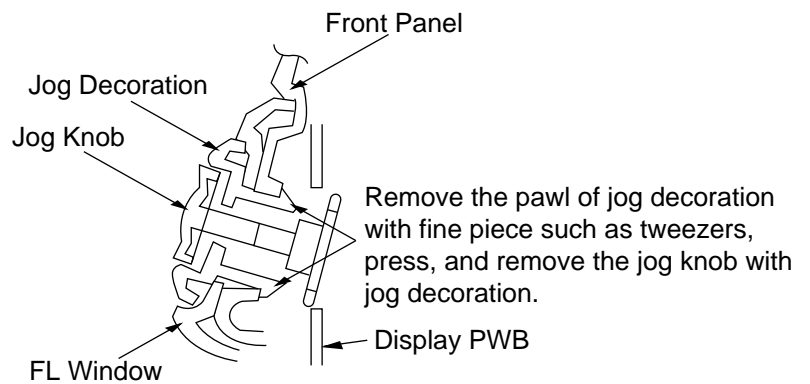


Figure 9-4

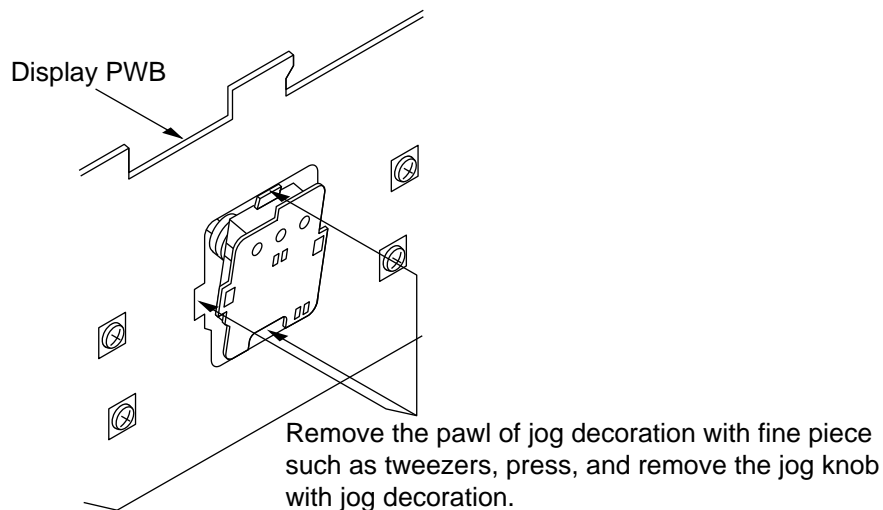


Figure 9-5

## REMOVING AND REINSTALLING THE MAIN PARTS

### MD MECHANISM SECTION

Perform steps 1 to 3 of the disassembly method to remove the MD mechanism.

#### How to remove the magnetic head

(See Fig. 10-1)

1. Remove the screws (A1) x 1 pc.

Caution:

Take utmost care so that the magnetic head is not damaged when it is mounted.

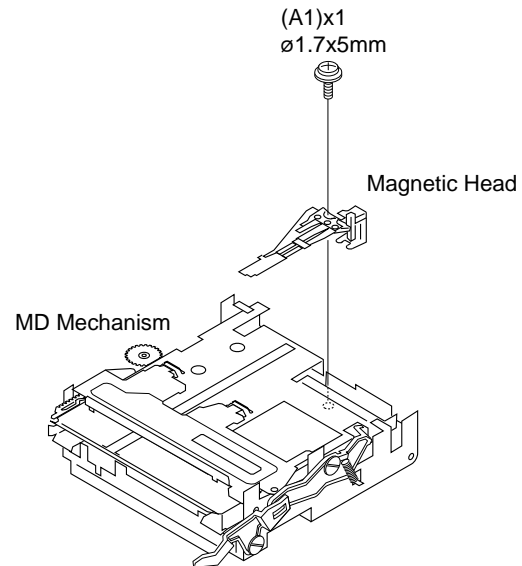


Figure 10-1

#### How to remove the cartridge holder

(See Fig. 10-2)

1. Open the roller arm lever in the arrow direction, and lower the clamping lever to the rear side.
2. Apply +5V to the red line side of blue connector of loading motor, push the rack gear in the arrow direction to move the cam plate lever until tick is heard.
3. Remove the screw (B1) x1 pc., and the spring (B2) x1 pc., fitted to the holder arm, and shift the cartridge holder to the left side to remove it.

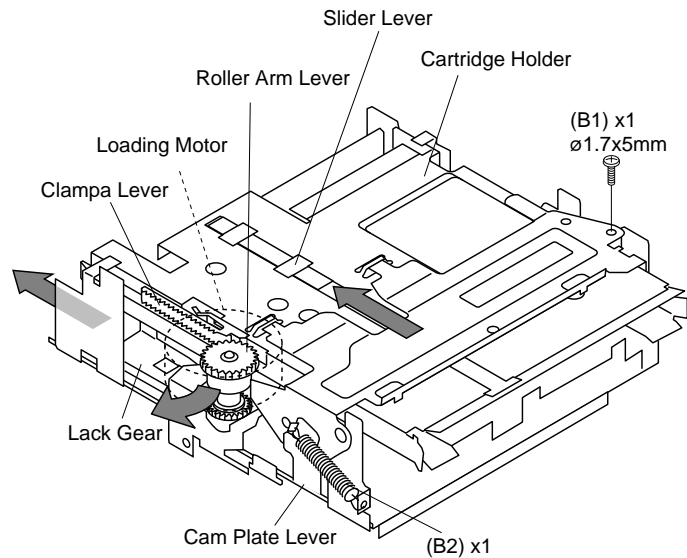


Figure 10-2

#### How to remove the mechanism switch PWB

(See Fig. 10-3)

1. Remove the screws (C1) x 2 pcs., and remove the mechanism switch PWB.

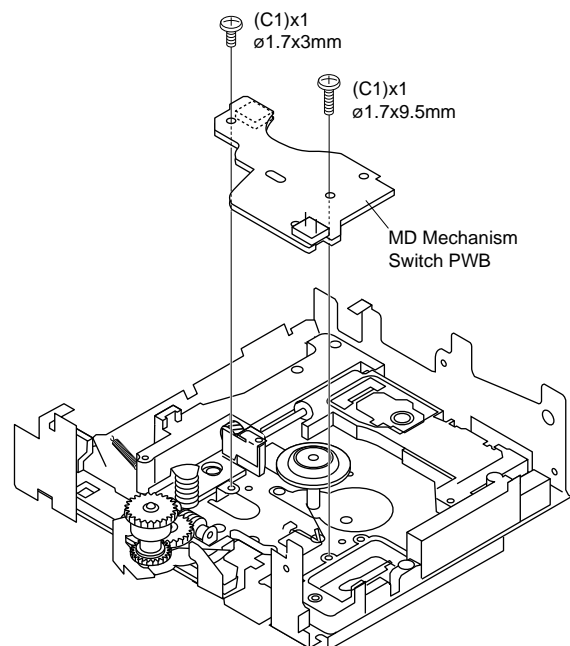



Figure 10-3

### How to remove the sled motor/loading motor (See Fig. 11-1)

1. Remove the screws (D1) x 1 pcs., and remove the sled motor/loading motor.

**Caution:**

Be careful so that the gear is not damaged.  
(The damaged gear emits noise during searching.)

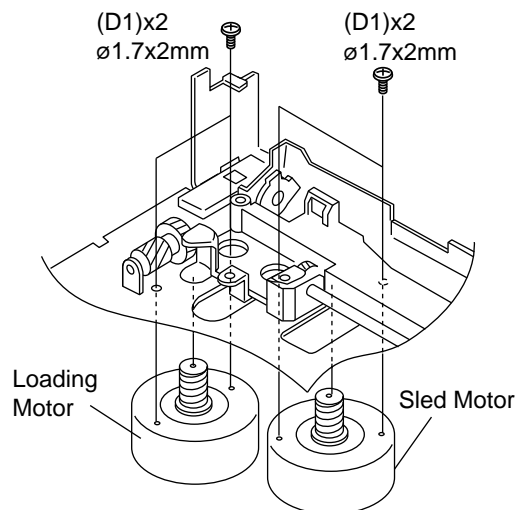


**Figure 11-1**

### How to remove the spindle motor (See Fig. 11-2)

1. Remove the screws (E1) x 3 pcs., and remove the spindle motor.

**Caution:**

Be careful so that the turntable is not damaged.

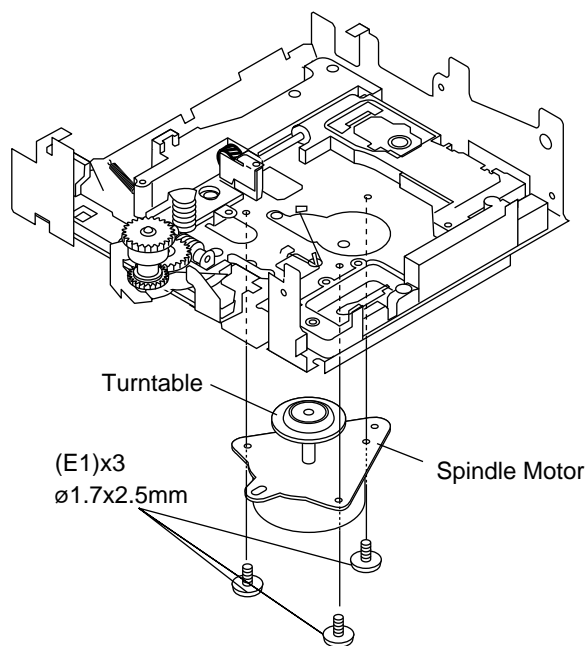


**Figure 11-2**

### How to remove the optical pickup (See Fig. 11-3)

1. Remove the screws (F1) x 3 pcs.

**Caution:**

Be careful so that the gear is not damaged.  
(The damaged gear emits noise during searching.)

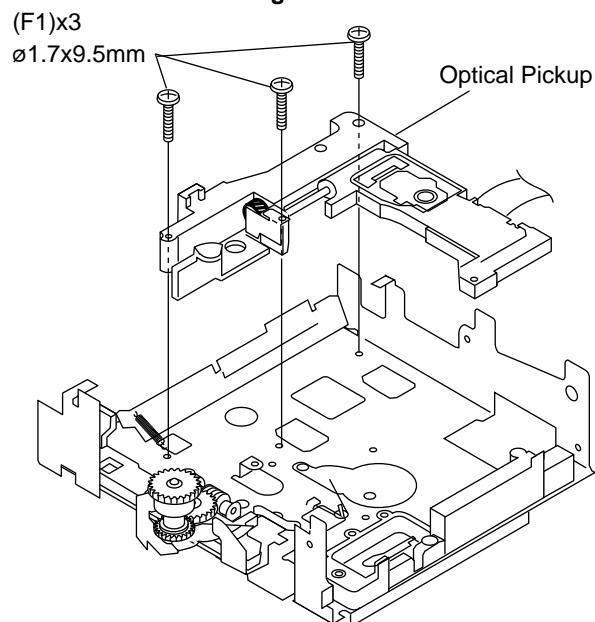

**Figure 11-3**

## ADJUSTMENT

### TEST MODE

1) Mode there are 5 kinds TEST MODE as below.

MODE	PUSH KEY	
A) MD TEST MODE	ENTER	PLAY
B) AUDIO TEST MODE	CUE	REVIEW
C) KEY TEST MODE	CUE	ENTER
D) RECORDING TEST MODE	ENTER	REC
E) MD TEST2 MODE (DATA MONITOR MODE)	ENTER	STOP

2) How to start and quit TEST MODE.

AC Supply On or push RESET KEY after push two keys.

In all TEST MODE. Power Off (POWER KEY) is quit TEST MODE.

3) TEST MODE description.

#### A) MD TEST MODE (ENTER+PLAY)

Disp. Will be "AUT YOBI". In this mode push ENTER KEY in mean product alignment's auto adjust mode.

(Disp. Will be "AUTO AJST". In this mode push PLAY KEY in mean auto adjust mode by disc condition.

Then push PLAY KEY again. It start play and display will be "a\_\_C\_\_". The 4 digits after "a" are address.

After "C" are error rate.)

PUSH KEY NAME	ACTION
ENTER	Servo adjust mode or menu from adjust mode.
TIMER	REC. and P.B. mode or to menu from REC.mode.
NAME	Other menu select.
REC	Reverse menu select.
PLAY	Selected menu execution.
STOP	Execute stop.
CUE	Slide motor (PIC) move to out-side.
REVIEW	Slide motor (PIC) move to in-side.
JOG. UP *1	Manual alignment +1, loading motor on (OUT).
JOG. DOWN *1	Manual alignment -1, loading motor on (IN).
POWER	Test mode quit and power off.
EJECT	Disc eject.

\*1. Jog. Up/Jog. Down key effect for loading motor control when display panel "tsm\_\_\_\_e\_\_". (Push STOP KEY some times to disp. "tsm\_\_\_\_e\_\_".)

NOTE. MD test are necessary mode only for MD Unit.

#### B) Audio test mode (CUE+REVIEW)

This mode is key examination mode for a set with in MD-unit.

Automatically set recording mode.

Digital opt. Digital coax and analog are effective.

Test mode start is REC KEY push after disc toc. Read.

REC KEY push

1) Record form analog function by 3 sec time.

2) Record form digital opt. Function by 3 sec time.

3) Record from digital coax. Function by 3 sec time.

4) Record stop.

Note. 1) If digital function is din unlock. Skip to follwing next function.

2) Digital synchronize level is -50 dB.

Analog synchronize level is -47 dB.

#### C) Key test mode (CUE+ENTER)

This mode is key examination mode for a set with out MD-unit.

This mode indicate destination as below dot display.

## KEY TEST

KEY NAME	ILLUMINATE SEGMENT	KEY NAME	ILLUMINATE SEGMENT
TIMER	10 ROW DOT	INPUT SELECT	TOC
DISPLAY	11 ROW DOT	EJECT	7 ROW DOT
REVIEW	ALL	PLAY	4 ROW DOT
CUE	PM	STOP	5 ROW DOT
ENTER	8 ROW DOT	REC	6 ROW DOT
JOG. UP	17 (M.C.)	NAME	9 ROW DOT
JOG. DOWN	18 (M.C.)	TIME	AM
PROGRAM	PRGM		

## D) Recording test mode (ENTER+REC)

This mode is auto recording repeat mode.

After disc full. Erase all and rec start again.

## MD SECTION

## 1. Preparation for adjustment

## Test disc

	Type	Test disc	Part No.
1	High reflection disc	TGYS1 (SONY)	RRCDT0101AFZZ
2	Low reflection disc	Recording minidisc	UDSKM0001AFZZ
3	—————	Head Adjusting transparent	RRCDT0103AFZZ

## Extension Cable (See Fig. 26-4)

	Type	Part No.
1	Extension PWB for servicing	RUNTK0457AFZZ
2	Extension Connector (2 Pin)	QCNWK0059AFZZ
3	Extension Connector (6 Pin)	QCNWK0107AFZZ
4	Extension Cable (5 Pin)	QCNWK0109AFZZ
3	Extension Cable (28 Pin)	QCNWK0108AFZZ

## 2. Test mode

## Test mode setting method

- Holding down the ENTER button and MD▶■ (PLAY/PAUSE) button, press the RESET button.  
(State ① is changed to state ②.)
- Insert the playback disc 1 (high reflection disc) or recording disc 2 (low reflection disc). (State ③ is set.)  
Thus, the test mode state is set.

① tsm ○○○○e○○ : TEST MODE  
TEST STOP state

② EJECT  
TEST


③ AUT YOB  
TEST

○○ represents version of MD microcomputer.

(When the MD■ (STOP) button is ressed in the ③ state, the indication ① is restored. To restore ③ again, press the ENTER button.)

## Entering the specific mode

Whenever the CD▶■ (PLAY/PAUSE) button is pressed, the mode is changed.



## • Canceling the test mode

When the POWER button is pressed, the test mode is canceled, and the POWER OFF state is set.

## MD-R2

### • Test Mode

1. AUTO pre-adjustment mode	<ul style="list-style-type: none"> <li>Automatic pre-adjustment is performed. (After adjustment the grating adjustment mode is set.)</li> <li>The adjustment value is output with the aid of system controller interface.</li> </ul>
2. AUTO adjustment mode	<ul style="list-style-type: none"> <li>Automatic adjustment is performed.</li> <li>The adjustment value is output with the aid of system controller interface.</li> <li>Continuous playback is performed. (Error rate indication, jump test)</li> </ul>
3. RESULT sub-mode	<ul style="list-style-type: none"> <li>The measurement value, set value and calculated value are indicated.</li> <li>The set value is changed manually (in servo OFF state).</li> </ul>
4. RESULT mode (final adjustment)	<ul style="list-style-type: none"> <li>The set value (after calculation) is indicated.</li> <li>The set value is changed manually (in servo OFF state).</li> </ul>
5. MANUAL pre-adjustment mode	<ul style="list-style-type: none"> <li>RF side manual adjustment is performed.</li> <li>Focus and tracking signal ATT manual adjustment is performed.</li> <li>Focus and tracking signal offset setting is performed.</li> </ul>
6. MANUAL adjustment mode	<ul style="list-style-type: none"> <li>Focus and tracking signal ATT manual adjustment is performed.</li> </ul>
7. EEPROM setting mode	<ul style="list-style-type: none"> <li>Various coefficients of digital servo are changed manually.</li> <li>Each servo is set to ON individually.</li> <li>Temperature detection terminal voltage is measured, and the reference value is determined.</li> </ul>
8. TEST-PLAY mode	<ul style="list-style-type: none"> <li>Continuous playback from the specified address is performed.</li> <li>C1 error rate measurement, ADIP error rate measurement.</li> </ul>
9. TEST-REC mode	<ul style="list-style-type: none"> <li>Continuous recording from the specified address is performed.</li> <li>Change of record laser output (servo gain is also changed according to laser output)</li> </ul>
10. INNER mode	<ul style="list-style-type: none"> <li>The position where the INNER switch is turned on is measured.</li> </ul>
11. EJECT mode	<ul style="list-style-type: none"> <li>TEMP setting (of EEPROM setting)</li> <li>CONTROL setting (of EEPROM setting)</li> <li>Setting of laser power (record/playback power)</li> </ul>

### 1. AUTO pre-adjustment mode (Low reflection disc only)

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m O O O O e O O ]
Step 2	Press once the ENTER button.	AUTO pre-adjustment menu	[ A U T O ]
Step 3	Press once the MD PLAY button.	The slide moves to the innermost periphery, and automatic pre-adjustment is started. • During automatic adjustment *** changes as follows. HAo→RFg→SAg→SBg→PTG→PCH→GTG→GCH→RCG→SEG→RFG→SAG→HAO→HEO→TCO→LAO If adjustment is OK, Step 4. If adjustment is NG, Step 5.	[ *** : _ _ _ _ _ ]
	End of adjustment		
Step 4	Grating adjustment, adjustment value output Press once the MD STOP button.	STEP 2	[ _ C O M P L E T E _ ]
Step 5	Adjustment value output Press once the MD STOP button.	STEP 2 AUTO pre-adjustment menu	[ C a n ' t _ A D J . ]

• \*\*\* : Adjustment name

## 2. AUTO adjustment mode

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button two times.	AUTO adjustment menu	[ A U T O _ A J S T _ ]
Step 3	Press once the MD PLAY button.  End of adjustment	The slide moves to the innermost periphery, and automatic adjustment is started. • In case of high reflection disc *** changes as follows. PEG→HAG • In case of low reflection disc *** changes as follows. PEG→LAG→GCG→GEG→LAG If adjustment is OK, Step 4. If adjustment is NG, Step 7.	[ *** : _ _ _ _ _ ]
Step 4	Adjustment value output Press the MD PLAY button. Press the MD STOP button.	STEP 5 STEP 2	[ _ C O M P L E T E _ ]
Step 5	Continuous playback (pit section) Continuous playback (groove section)		[ s□□□□ c○○○○ ] [ a□□□□ c○○○○ ]
Step 6	Press the DISPLAY button. Press the MD STOP button.	Continuous playback (groove section) STEP 2 AUTO adjustment menu	[ a□□□□ a○○○○ ]
Step 7	Adjustment value output Press the MD STOP button.	STEP 2 AUTO adjustment menu	[ C a n ' t _ A D J . ]

• \*\*\* : Adjustment name, ○○ : Measurement value, □□□□ : Address

## 3. RESULT sub-mode

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button three times.	RESULT sub-menu	[ _ R S T _ Y O B I _ ]
Step 3	Press once the MD PLAY button.	Indication of set value	[ R F G : _ _ _ _ ● ]
Step 4	Press once the ENTER button.	Indication of set value	[ R C G : _ _ _ _ ● ]
Step 5	Press once the ENTER button.	Indication of set value	[ R T G : _ _ _ _ ● ]
Step 6	Press once the ENTER button.	Indication of set value	[ G T G : _ _ _ _ ● ]
Step 7	Press once the ENTER button.	Indication of set value	[ P C H : _ _ _ _ ●● ]
Step 8	Press once the ENTER button.	Indication of set value	[ G C H : _ _ _ _ ●● ]
Step 9	Press once the ENTER button.	Indication of set value	[ S A G : _ _ _ ●●● ]
Step 10	Press once the ENTER button.	Indication of set value	[ S B G : _ _ _ ●●● ]
Step 11	Press once the ENTER button.	Indication of set value	[ S E G : _ _ _ ●●● ]
Step 12	Press once the ENTER button.	Indication of set value	[ S F G : _ _ _ ●●● ]
Step 13	Press once the ENTER button.	Indication of measurement value	[ H A O : ○○○ _ _ _ ]
Step 14	Press once the ENTER button.	Indication of measurement value	[ H B O : ○○○ _ _ _ ]
Step 15	Press once the ENTER button.	Indication of measurement value	[ H E O : ○○○ _ _ _ ]
Step 16	Press once the ENTER button.	Indication of measurement value	[ H F O : ○○○ _ _ _ ]
Step 17	Press once the ENTER button.	Indication of measurement value	[ L A O : ○○○ _ _ _ ]
Step 18	Press once the ENTER button.	Indication of measurement value	[ L B O : ○○○ _ _ _ ]
Step 19	Press once the ENTER button.	Indication of measurement value	[ L E O : ○○○ _ _ _ ]
Step 20	Press once the ENTER button.	Indication of measurement value	[ L F O : ○○○ _ _ _ ]
Step 21	Press once the ENTER button.	Indication of measurement value	[ T C O : _ ○○ _ _ _ ]
Step 22	Press once the ENTER button.	Indication of adjustment error sequence No.	[ Y O B : _ □□ _ _ _ ]
Step 23	Press once the ENTER button.	Indication of adjustment status	[ D I F : _ □□ _ _ _ ]
Step 24	Press once the ENTER button.	Indication of pre-adjustment not completed (00)/completed (4B)	[ A D J : _ □□ _ _ _ ]
Step 25	Press once the MD STOP button.	RESULT sub-menu state	[ _ R S T _ Y O B I _ ]

• ○○ : Measurement value, ●● : Adjustment value, □□ : Other various informations

• Pressing the REC button causes reversing.

• When the jog key is turned upward while the setting is displayed, the setting increases, and a new setting is stored in RAM.

• When the jog key is turned downward while the setting is displayed, the setting decreases, and a new setting is stored in RAM.

## MD-R2

### 3. RESULT mode (final adjustment)

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button four times.	RESULT menu	[ _ R S T U L T _ _ _ ]
Step 3	Press once the MD PLAY button.	Indication of set value	[ H A G : _ _ _ ●●● ]
Step 4	Press once the ENTER button.	Indication of set value	[ H B G : _ _ _ ●●● ]
Step 5	Press once the ENTER button.	Indication of set value	[ L A G : _ _ _ ●●● ]
Step 6	Press once the ENTER button.	Indication of set value	[ L B G : _ _ _ ●●● ]
Step 7	Press once the ENTER button.	Indication of set value	[ P E G : _ _ _ ●●● ]
Step 8	Press once the ENTER button.	Indication of set value	[ P F G : _ _ _ ●●● ]
Step 9	Press once the ENTER button.	Indication of set value	[ G E G : _ _ _ ●●● ]
Step 10	Press once the ENTER button.	Indication of set value	[ G F G : _ _ _ ●●● ]
Step 11	Press once the ENTER button.	Indication of set value	[ G C G : _ _ _ ●● ]
Step 12	Press once the MD STOP button.	RESULT menu state	[ _ R E S U L T _ _ _ ]

- : Set value
- Pressing the REC button causes reversing.
- When the jog key is turned upward while the setting is displayed, the setting increases, and a new setting is stored in RAM.
- When the jog key is turned downward while the setting is displayed, the setting decreases, and a new setting is stored in RAM.

### 5. MANUAL auxiliary adjustment mode (only low reflection disc)

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button five times.	MANUAL auxiliary adjustment mode	[ _ M N U _ Y O B I _ ]
Step 3	Press once the MD PLAY button.	Initial setting → Temperature measuring mode	[ T M P : _ △△ _ _ _ ]
Step 4	Press once the ENTER button.	Offset "0" setting → A signal offset tentative measurement	[ H A o : △△△ _ _ _ ]
Step 5	Press once the ENTER button.	B signal offset tentative measurement	[ H B o : △△△ _ _ _ ]
Step 6	Press once the ENTER button.	E signal offset tentative measurement	[ H E o : △△△ _ _ _ ]
Step 7	Press once the ENTER button.	F signal offset tentative measurement	[ H F o : △△△ _ _ _ ]
Step 8	Press once the ENTER button.	Offset tentative measurement → Laser ON	[ L O N : _ _ _ _ _ ]
Step 9	Press once the ENTER button.	Innermost periphery move → RF side FG rough adjustment	[ R F g : △△△ _ _ ● ]
Step 10	Press once the ENTER button.	Focus ATT (A signal) tentative setting	[ S A g : △△△○○○ ]
Step 11	Press once the ENTER button.	Focus ATT (B signal) tentative setting	[ S B g : △△△○○○ ]
Step 12	Press once the ENTER button.	RF side pit section TG adjustment	[ P T G : △△△ _ _ ● ]
Step 13	Press once the ENTER button.	Pit section COUT level setting	[ P C H : △△△ _ ○○ ]
Step 14	Press once the ENTER button.	Outer periphery move → RF side groove TG adjustment	[ G T G : △△△ _ _ ● ]
Step 15	Press once the ENTER button.	Groove section COUT level setting	[ G C H : △△△ _ ○○ ]
Step 16	Press once the ENTER button.	RF side TCRS adjustment	[ R C G : △△△ _ _ ● ]
Step 17	Press once the ENTER button.	Tracking ATT (A signal) setting	[ S E G : △△△○○○ ]
Step 18	Press once the ENTER button.	Tracking ATT (B signal) setting	[ S F G : △△△○○○ ]
Step 19	Press once the ENTER button.	Indication of tracking EFMIO measurement	[ g M I : △△△ _ _ _ ]
Step 20	Press once the ENTER button.	RF side pit section FG adjustment	[ R F G : △△△ _ _ ● ]
Step 21	Press once the ENTER button.	Focus ATT (A signal) setting	[ S A G : △△△○○○ ]
Step 22	Press once the ENTER button.	Focus ATT (B signal) setting	[ S B G : △△△○○○ ]
Step 23	Press once the ENTER button.	Offset "0" setting → A signal offset measurement	[ H A O : △△△ _ _ _ ]
Step 24	Press once the ENTER button.	B signal offset measurement	[ H B O : △△△ _ _ _ ]
Step 25	Press once the ENTER button.	E signal offset measurement	[ H E O : △△△ _ _ _ ]
Step 26	Press once the ENTER button.	F signal offset measurement	[ H F O : △△△ _ _ _ ]
Step 27	Press once the ENTER button.	TCRS signal offset measurement	[ T C O : △△△ _ _ _ ]
Step 28	Press once the ENTER button.	A signal offset measurement	[ L A O : △△△ _ _ _ ]
Step 29	Press once the ENTER button.	B signal offset measurement	[ L B O : △△△ _ _ _ ]
Step 30	Press once the ENTER button.	E signal offset measurement	[ L E O : △△△ _ _ _ ]
Step 31	Press once the ENTER button.	F signal offset measurement	[ L F O : △△△ _ _ _ ]

- △△△ : Measurement value, ● : Set value, ○○○ : Account value



- If the jog key upward/downward is pressed during setting indication, the setting increases/decreases, and the new setting is stored in RAM.
- If the REC button is pressed, the setting returns step by step excepting the following case.  
 A signal offset (HAO) → Offset tentative setting → RF side FG adjustment (RFG)  
 RF side TCRS adjustment (RCG) → RF side groove TG adjustment (GTG)  
 RF side groove TG adjustment (GTG) → Innermost periphery move → RF side pit section adjustment (PTG)  
 RF side pit TG adjustment (PTG) → RF side FG rough adjustment (RFG) → Laser lighting (LON)  
 Laser lighting (LON) → Offset "0" setting → A signal offset tentative measurement (HAO)  
 If the measurement value is within the OK range, "※" appears on the 8th character.

## 6. MANUAL adjustment mode

### High reflection disc

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button six times.	MANUAL adjustment menu	[ _ M N U _ A J S T _ ]
Step 3	Press once the MD PLAY button.	Initial setting → Temperature measuring mode	[ T M P : _ △ △ _ _ _ ]
Step 4	Press once the ENTER button.	Laser ON	[ L O N : _ _ _ _ _ ]
Step 5	Press once the ENTER button.	Innermost periphery move → Tracking ATT (E signal) setting	[ P E G : △ △ △ ○ ○ ○ ]
Step 6	Press once the ENTER button.	Tracking ATT (F signal) setting	[ P F G : △ △ △ ○ ○ ○ ]
Step 7	Press once the ENTER button.	Indication of tracking EFMIO measurement	[ P M I : △ △ △ _ _ _ ]
Step 8	Press once the ENTER button.	Focus ATT (A signal) setting	[ H A G : △ △ △ ○ ○ ○ ]
Step 9	Press once the ENTER button.	Focus ATT (B signal) setting	[ H B G : △ △ △ ○ ○ ○ ]

- If the MD STOP button is pressed while the MANUAL adjustment menu is displayed, the state is changed to the TEST mode STOP state.
- If the REC button is pressed, the setting returns step.

### Low reflection disc

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button six times.	MANUAL adjustment menu	[ _ M N U _ A J S T _ ]
Step 3	Press once the MD PLAY button.	Initial setting → Temperature measuring mode	[ T M P : _ △ △ _ _ _ ]
Step 4	Press once the ENTER button.	Laser ON	[ L O N : _ _ _ _ _ ]
Step 5	Press once the ENTER button.	Innermost periphery move → Tracking ATT (E signal) setting	[ P E G : △ △ △ ○ ○ ○ ]
Step 6	Press once the ENTER button.	Tracking ATT (F signal) setting	[ P F G : △ △ △ ○ ○ ○ ]
Step 7	Press once the ENTER button.	Indication of tracking EFMIO measurement (pit section)	[ P M I : △ △ △ _ _ _ ]
Step 8	Press once the ENTER button.	Focus ATT (A signal) setting	[ L A g : △ △ △ ○ ○ ○ ]
Step 9	Press once the ENTER button.	Focus ATT (B signal) setting	[ L B g : △ △ △ ○ ○ ○ ]
Step 10	Press once the ENTER button.	Outside periphery move → Track cross setting	[ G C G : △ △ △ ○ ○ ○ ]
Step 11	Press once the ENTER button.	Tracking ATT (E signal) setting	[ G E G : △ △ △ ○ ○ ○ ]
Step 12	Press once the ENTER button.	Tracking ATT (F signal) setting	[ P F G : △ △ △ ○ ○ ○ ]
Step 13	Press once the ENTER button.	Indication of tracking EFMIO measurement (groove section)	[ G M I : △ △ △ _ _ _ ]
Step 14	Press once the ENTER button.	Focus ATT (A signal) setting	[ L A G : △ △ △ ○ ○ ○ ]
Step 15	Press once the ENTER button.	Focus ATT (B signal) setting	[ L B G : △ △ △ ○ ○ ○ ]

- If the MD STOP button is pressed while the MANUAL adjustment menu is displayed, the state is changed to the TEST mode STOP state.
- If the REC button is pressed, the setting returns step by step excepting the following case.  
 Track cross ATT setting (GTG) → Innermost periphery move → Focus ATT (B signal) setting (LBg)

## 7. EEPROM setting mode

### a) Focus setting

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button seventimes.	EEPROM setting menu	[ E E P R O M _ S E T ]
Step 3	Press once the MD PLAY button.	Focus setting menu	[ _ _ F o c u s _ _ _ ]
Step 4	Press once the MD PLAY button.	Focus system loop filter gain constant setting	[ F G _ _ _ _ _ ◆◆ ]
Step 5	Press once the ENTER button.	Focus system loop filter f characteristic constant 1 setting	[ F F 1 _ _ _ _ ◆◆ ]
Step 6	Press once the ENTER button.	Focus system loop filter f characteristic constant 2 setting	[ F F 2 _ _ _ _ ◆◆ ]
Step 7	Press once the ENTER button.	FZC oscillation histerisis level setting a	[ F Z H L E V _ _ ◆◆ ]
Step 8	Press once the ENTER button.	Comparison level setting (normal) in case of FOK generation	[ F O K L E V n _ ◆◆ ]

## MD-R2

Step No.	Setting Method	Remarks	Display
Step 9	Press once the ENTER button.	Comparison level setting in case of FOK generation (when focus is "ON")	[ F O K L E V f _ ◆◆ ]
Step 10	Press once the ENTER button.	LPF coefficient setting (normal) in case of FOK generation	[ F O K L P F n _ ◆◆ ]
Step 11	Press once the ENTER button.	LPF coefficient setting in case of FOK generation (when focus is "ON")	[ F O K L P F f _ ◆◆ ]
Step 12	Press once the ENTER button.	Waiting time setting in case of auto-focus retraction	[ W A I T f _ _ _ ◆◆ ]

- ◆◆ : Setting value
- Pressing the REC button causes reversing.
- When the jog key is turned upward while the setting is displayed, the setting increases, and a new setting is stored in LSI.
- When the jog key is turned downward while the setting is displayed, the setting increases, and a new setting is stored in LSI.

### b) Spindle setting

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m ○○○○ e ○○ ]
Step 2	Press the ENTER button seven times.	EEPROM setting menu	[ E E P R O M _ S E T ]
Step 3	Press once the MD PLAY button.	Focus setting menu	[ _ _ F o c u s _ _ ]
Step 4	Press once the ENTER button.	Spindle setting menu	[ _ S p i n d l e _ ]
Step 5	Press once the MD PLAY button.	Spindle system loop filter gain constant setting (Until tracking servo ON)	[ S P G _ _ _ _ _ ◆◆ ]
Step 6	Press once the ENTER button.	Spindle system loop filter gain constant setting (After tracking servo ON, inner periphery)	[ S P G _ i n _ _ ◆◆ ]
Step 7	Press once the ENTER button.	Spindle system loop filter gain constant setting (After tracking servo ON, center)	[ S P G _ m i d _ _ ◆◆ ]
Step 8	Press once the ENTER button.	Spindle system loop filter gain constant setting (After tracking servo ON, outside periphery)	[ S P G _ o u t _ _ ◆◆ ]
Step 9	Press once the ENTER button.	Spindle system loop filter f characteristic constant 1 setting	[ S P 1 _ _ _ _ _ ◆◆ ]
Step 10	Press once the ENTER button.	Spindle system loop filter f characteristic constant 2 setting	[ S P 2 _ _ _ _ _ ◆◆ ]
Step 11	Press once the ENTER button.	Spindle system loop filter f characteristic constant 3 setting	[ S P 3 _ _ _ _ _ ◆◆ ]
Step 12	Press once the ENTER button.	Spindle system loop filter f characteristic constant 4 setting	[ S P 4 _ _ _ _ _ ◆◆ ]
Step 13	Press once the ENTER button.	Spindle system loop filter f characteristic constant 5 setting	[ S P 5 _ _ _ _ _ ◆◆ ]
Step 14	Press once the ENTER button.	Spindle drive output limiter setting	[ S P D L I M _ _ ◆◆ ]

- ◆◆ : Setting value
- Pressing the REC button causes reversing.
- When the jog key is turned upward while the setting is displayed, the setting increases, and a new setting is stored in LSI.
- When the jog key is turned downward while the setting is displayed, the setting increases, and a new setting is stored in LSI.

### c) Tracking setting

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m ○○○○ e ○○ ]
Step 2	Press the ENTER button seven times.	EEPROM setting menu	[ E E P R O M _ S E T ]
Step 3	Press once the MD PLAY button.	Focus setting menu	[ _ _ F o c u s _ _ ]
Step 4	Press the ENTER button two times.	Tracking setting menu	[ _ T r a c k i n g _ ]
Step 5	Press once the MD PLAY button.	Tracking system loop filter gain constant setting	[ T G _ _ _ _ _ ◆◆ ]
Step 6	Press once the ENTER button.	Spindle system loop filter f characteristic constant 1 setting	[ T F 1 _ _ _ _ _ ◆◆ ]
Step 7	Press once the ENTER button.	Spindle system loop filter f characteristic constant 2 setting	[ T F 2 _ _ _ _ _ ◆◆ ]
Step 8	Press once the ENTER button.	Setting of tracking system servo mode 4	[ S V C N T 4 _ _ ◆◆ ]
Step 9	Press once the ENTER button.	Tracking deceleration pulse level setting (for one line jump)	[ T R B L V 0 _ _ ◆◆ ]
Step 10	Press once the ENTER button.	Tracking deceleration pulse level setting (for 10 line jump)	[ T R B L V t _ _ ◆◆ ]
Step 11	Press once the ENTER button.	Tracking kick pulse level setting (for one line jump)	[ T R K L V 0 _ _ ◆◆ ]
Step 12	Press once the ENTER button.	Tracking kick pulse level setting (for 10 line jump)	[ T R K L V t _ _ ◆◆ ]
Step 13	Press once the ENTER button.	Tracking drive pulse width setting (for one line jump)	[ T D P W o _ _ _ ◆◆ ]
Step 14	Press once the ENTER button.	Tracking drive pulse width setting (for 10 line jump)	[ T D P W t _ _ _ ◆◆ ]
Step 15	Press once the ENTER button.	Tracking slip stop time setting (for one line jump)	[ S L C T 0 _ _ _ ◆◆ ]
Step 16	Press once the ENTER button.	Tracking slip stop time setting (for 10 line jump)	[ S L C T t _ _ _ ◆◆ ]
Step 17	Press once the ENTER button.	Tracking slip stop time setting (move)	[ S L C T m _ _ ◆◆ ]

Step No.	Setting Method	Remarks	Display
Step 18	Press once the ENTER button.	TCRS comparison level 1 for high reflection	[ T C R S C I P _ ◆◆ ]
Step 19	Press once the ENTER button.	Comparison level in case of COUT generation (playback)	[ C O T L V p _ _ ◆◆ ]
Step 20	Press once the ENTER button.	Comparison level in case of COUT generation (pecord)	[ C O T L V r _ _ ◆◆ ]
Step 21	Press once the ENTER button.	Auto-move waiting time setting	[ W A I T m _ _ _ ◆◆ ]

- ◆◆ : Setting value
- Pressing the REC button causes reversing.
- When the jog key is turned upward while the setting is displayed, the setting increases, and a new setting is stored in LSI.
- When the jog key is turned downward while the setting is displayed, the setting increases, and a new setting is stored in LSI.

#### d) Sled setting

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m ○○○○ e ○○ ]
Step 2	Press the ENTER button seven times.	EEPROM setting menu	[ E E P R O M _ S E T ]
Step 3	Press once the MD PLAY button.	Focus setting menu	[ _ _ F o c u s _ _ ]
Step 4	Press the ENTER button three times.	Sled setting menu	[ _ _ _ S l e d _ _ ]
Step 5	Press once the MD PLAY button.	Slide system loop filter gain constant setting	[ S L G _ _ _ _ ◆◆ ]
Step 6	Press once the ENTER button.	Slide system loop filter f characteristic constant 2 setting	[ S L 2 _ _ _ _ ◆◆ ]
Step 7	Press once the ENTER button.	Sled output limiter setting	[ S L D L I M _ _ ◆◆ ]
Step 8	Press once the ENTER button.	Slide servo output dead zone level setting	[ S L D L E V _ _ ◆◆ ]
Step 9	Press once the ENTER button.	Slide kick pulse level setting (forced move)	[ S L K L V k _ _ ◆◆ ]
Step 10	Press once the ENTER button.	Slide kick pulse level setting (for 10 lines jump auxiliary use)	[ S L K L V t _ _ ◆◆ ]
Step 11	Press once the ENTER button.	Slide kick pulse level setting (move)	[ S L K L V m _ _ ◆◆ ]

- ◆◆ : Setting value
- Pressing the REC button causes reversing.
- When the jog key is turned upward while the setting is displayed, the setting increases, and a new setting is stored in LSI.
- When the jog key is turned downward while the setting is displayed, the setting increases, and a new setting is stored in LSI.

#### TEMP • Input temperature correction.

- Correct the TEMP. data according to the PWB ambient temperature, and input it.
- Since the temperature rise causes error of temperature sensing part (RF IC), the following requirements must be observed.
  - ① Perform the TEST mode without mechanical connection.
  - ② This operation must be performed quickly after power is supplied.

#### Data correction table

Ambient temperature (°C)	Temperature correction
12.2 ~ 15.8	-3
15.9 ~ 19.6	-2
19.7 ~ 23.2	-1
23.2 ~ 26.8	0
26.9 ~ 30.7	+1
30.8 ~ 34.3	+2
34.4 ~ 37.9	+3

EEPROM record value = Microcomputer measurement value +  
Correction

\* EEPROM record value

Value to be measured by the microcomputer at +25°C

\* Microcomputer measurement value

Value to be measured by the microcomputer at specific  
temperature

\* Correction value

Correction value for conversion to measurement value at  
+25°C (see the table shown left)

## MD-R2

### e) TEMP setting

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button seven times.	EEPROM setting menu	[ E E P R O M _ S E T ]
Step 3	Press once the MD PLAY button.	Focus setting menu	[ _ _ F o c u s _ _ _ ]
Step 4	Press the ENTER button four times.	TEMP setting menu	[ _ _ _ T e m p _ _ _ ]
Step 5	Press once the MD PLAY button.	TEMP reference value setting	[ T E M P _○○_◆◆ ]

Step No.	Setting Method	Remarks	Display
Step 1	EJECT state (or mechanism-less state)		[ _ _ E J E C T _ _ _ ]
Step 2	Press the DELETE/CLEAR button.	TEMP reference value setting	[ T E M P _○○_◆◆ ]

- ◆◆ : Setting value, ○○ : Measurement value
- When the jog key is turned upward while the setting is displayed, the setting increases, and a new setting is stored in LSI.
- When the jog key is turned downward while the setting is displayed, the setting increases, and a new setting is stored in LSI.

### f) CONTROL setting

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e○○ ]
Step 2	Press the ENTER button seven times.	EEPROM setting menu	[ E E P R O M _ S E T ]
Step 3	Press once the MD PLAY button.	Focus setting menu	[ _ _ F o c u s _ _ _ ]
Step 4	Press the ENTER button five times.	CONTROL setting menu	[ _ C o n t r o l _ _ ]
Step 5	Press once the MD PLAY button.	CONTROL 1 setting	[ C O N T R L 1 _◆◆ ]
Step 6	Press once the ENTER button.	CONTROL 2 setting	[ C O N T R L 2 _◆◆ ]
Step 7	Press once the ENTER button.	Setting of spin kick level in MOVE state	[ S P K L E V m _◆◆ ]
Step 8	Press once the ENTER button.	Setting of readjustment interval time (minutes)	[ A D J T T M _ _◆◆ ]
Step 9	Press once the ENTER button.	Setting of equalizer coefficients A and D (high reflection)	[ H D E Q A D _ _◆◆ ]
Step 10	Press once the ENTER button.	Setting of equalizer coefficients A and D (low reflection pit)	[ L D E Q A D _ _◆◆ ]
Step 11	Press once the ENTER button.	Setting of equalizer coefficients A and D (low reflection groove)	[ G D E Q A D _ _◆◆ ]
Step 12	Press once the ENTER button.	Setting of equalizer coefficients B and C (high reflection)	[ H D E Q B C _ _◆◆ ]
Step 13	Press once the ENTER button.	Setting of equalizer coefficients B and C (low reflection pit)	[ L D E Q B C _ _◆◆ ]
Step 14	Press once the ENTER button.	Setting of equalizer coefficients B and C (low reflection groove)	[ G D E Q B C _ _◆◆ ]
Step 15	Press once the ENTER button.	Setting of autolevel slicer gain (high reflection)	[ H A L S G _ _ _◆◆ ]
Step 16	Press once the ENTER button.	Setting of autolevel slicer gain (low reflection pit)	[ L A L S G _ _ _◆◆ ]
Step 17	Press once the ENTER button.	Setting of autolevel slicer gain (low reflection groove)	[ G A L S G _ _ _◆◆ ]
Step 18	Press once the ENTER button.	Setting of autolevel slicer offset (high reflection)	[ H A L S O F _ _◆◆ ]
Step 19	Press once the ENTER button.	Setting of autolevel slicer offset (low reflection pit)	[ L A L S O F S _◆◆ ]
Step 20	Press once the ENTER button.	Setting of autolevel slicer offset (low reflection groove)	[ G A L S O F S _◆◆ ]

Step No.	Setting Method	Remarks	Display
Step 1	EJECT state (or mechanism-less state)		[ _ _ E J E C T _ _ _ ]
Step 2	Press the NAME/TOC EDIT button.	CONTROL 1 setting	[ C O N T R L 1 _◆◆ ]
Step 3	Press once the ENTER button.	CONTROL 2 setting	[ C O N T R L 1 _◆◆ ]

- ◆◆ : Setting value
- When the jog key is turned upward while the setting is displayed, the setting increases, and a new setting is stored in LSI.
- When the jog key is turned downward while the setting is displayed, the setting increases, and a new setting is stored in LSI.
- CONTROL 1
  - Pit 7 : High frequency superposition ON/OFF in record mode (0:OFF, 1:IN)
  - Pit 6~4 : Play start SD number (30 to 100 sector, 10 sector step)
  - Pit 2~0 : High speed jump over-run (384 to 830 lines, 64 lines step)
- CONTROL 2
  - Pit 4~0 : EEPROM version (a~)

## 8. TEST-PLAY mode

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e ○○ ]
Step 2	Press the DELETE/CLEAR button.	TEST-PLAY menu	[ T E S T _ P L A Y _ ]
Step 3	Press once the DISPLAY button. Press once the MD PLAY button.	ADRES setting (Target address initial value is indicated) During search the search output pin 11 is set to "H", and it is returned to "L" when continuous playback is started.	[ A D R E S _ 0 0 5 0 ]
Step 4	Continuous playback (pit section) Continuous playback (groove section)	(Address + C1 error indication) (Address + C1 error indication)	[ s □□□□ c ○○○○ ] [ a □□□□ c ○○○○ ]
Step 5	Press once the DISPLAY/ CHARACTER button.	(Address + ADIP error indication)	[ a □□□□ a ○○○○ ]
Step 6	Press once the MD STOP button.	TEST-PLAY menu	[ T E S T _ P L A Y _ ]

- If the MD STOP button is pressed while the TEST-PLAY menu is displayed, TEST mode STOP state is set.
  - If the MD PLAY button is pressed while the TEST-PLAY menu is displayed, continuous playback is started from the current pickup position.
  - Whenever the DELETE/CLEAR button is pressed in the address setting mode, the address changes as follows.  
0 0 5 0 → 0 3 C 0 → 0 7 0 0 → 0 8 A 0 → 0 0 5 0 → .....
  - Whenever the DISPLAY/CHARACTER button is pressed in the address setting mode, the digit which is changed with -I◀◀/▶▶I+ changes as follows.  
0 0 5 0 → 0 0 5 0 → 0 0 5 0 → 0 0 5 0 → .....
  - The digit of address which has been specified with -I◀◀/▶▶I+ and DISPLAY/CHARACTER button in the address setting mode is set to +01H/-01H.  
\* If the -I◀◀/▶▶I+ button is held down, the setting changes continuously with 100 ms cycle.
  - If the TRACK EDIT button is pressed in the continuous playback mode, the number of jump lines changes as follows.  
1 line → 10 line → 400 line → 1 line → .....  
\* After the number of jump lines is indicated for one second, the address indication is restored. [ ▲▲▲ T R \_ J U M P ]
  - If the -I◀◀/▶▶I+ button is pressed in the continuous playback mode, the specified number of lines is jumped in the FWD/REV direction.  
\* If the -I◀◀/▶▶I+ button is held down, the setting changes with 100 ms cycle.
  - Whenever the CD STOP button is pressed in the continuous playback mode, the indication changes as follows.  
\* Pit section Continuous playback (SUBQ address indication + C1 error indication) remains.  
\* Groove section Continuous playback (ADIP address indication + C1 error indication) remains.  
↓  
Continuous playback (ADIP address indication + ADIP error indication) remains.  
↓  
Continuous playback (ADIP address indication + C1 error indication) remains.  
↓  
.....
- : Adress, ○○○○ : Error late, ▲▲▲ : Jump lines

## 9. TEST-REC mode

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m○○○○ e ○○ ]
Step 2	Press the DELETE/CLEAR button two times.	TEST-REC menu	[ T E S T _ R E C _ _ ]
Step 3	Press once the DISPLAY/ CHARACTER button.	ADRES setting (indication of address initial value)	[ a 0 0 5 0 _ p w ▽▽ ]
Step 4	Press once the MD PLAY button.	During search the search output pin 11 is set to "H", and it is (returned on "L" when continuous playback is started.Address + C1 error indication) Continuous recording	[ a □□□□ p w ▽▽ ]
Step 5	Press once the MD STOP button.	TEST-REC menu	[ T E S T _ R E C _ _ ]

- If the MD STOP button is pressed while the TEST-PLAY menu is displayed, TEST mode STOP state is set.
- If the MD PLAY button is pressed while the TEST-REC menu is displayed, continuous record is started from the current pickup position.
- Whenever the DELETE/CLEAR button is pressed in the address setting mode, the address changes as follows.  
0 0 5 0 → 0 3 C 0 → 0 7 0 0 → 0 8 A 0 → 0 0 5 0 → .....
- Whenever the DISPLAY/CHARACTER button is pressed in the address setting mode, the digit which is changed with -I◀◀/▶▶I+ changes as follows.  
0 0 5 0 → 0 0 5 0 → 0 0 5 0 → 0 0 5 0 → .....
- The digit of address which has been specified with -I◀◀/▶▶I+ and DISPLAY/CHARACTER button in the address setting mode is set to +01H/-01H.  
\* If the -I◀◀/▶▶I+ button is held down, the setting changes continuously with 100 ms cycle.
- If the JOG button is pressed in TEST-REC mode and continuous record mode, the laser record power changes.  
(Servo gain changes also according to the record power.)
- □□□□ : Adress, ▽▽ : Laser power cord

# MD-R2

## 10. INNER mode

Step No.	Setting Method	Remarks	Display
Step 1	Testmode STOP state		[ t s m ○ ○ ○ ○ e ○ ○ ]
Step 2	Press the NAME/TOC EDIT button.	INNER menu	[ _ _ I N N E R _ _ ]
Step 3	Press once the MD PLAY button.	INNER switch position measurement (SUBQ address and C1 error are also indicated.)	[ s □ □ □ □ c ○ ○ ○ ○ ]
Step 4	Press once the MD STOP button.	INNER menu	[ _ _ I N N E R _ _ ]

• □ □ □ □ : Address

• Press the MD STOP button while the INNER menu is displayed, to shift to the TEST mode STOP state.

## 11. EJECT mode

Step No.	Setting Method	Remarks	Display
Step 1	Testmode EJECT state		[ _ _ E J E C T _ _ ]
Step 2	Press once the DISPLAY/ CHARACTER button.	Max. power output state	[ x p w _ _ _ _ _ ]
Step 3	Press once the DISPLAY/ CHARACTER button.	Record power output state	[ r p w _ _ _ _ _ ]
Step 4	Press once the DISPLAY CHARACTER button.	Playback power output state	[ p p w _ _ _ _ _ ]
Step 5	Press the DELETE/CLEAR button.	TEMP setting of EEPROM setting (Refer to TEMP setting of EEPROM)	
Step 6	Press the NAME/TOC EDIT button.	CONTROL setting of EEPROM setting (Refer to CONTROL setting of EEPROM)	

### ● Lead-in switch position measurement mode

Note: Adjust the lead-in switch position to 5FF85 to FFD2.

1. Loosen the screw (A) x 2 pcs. which fix the mechanism switch PWB.
2. Retighten the screw, pressing the mechanism switch PWB in the arrow direction, and then measure the lead-in switch position again.  
After position adjustment fix with the three screws (A). (See Fig. 22.)

Note: After tightening the two screws on the PWB apply Screw Lock.

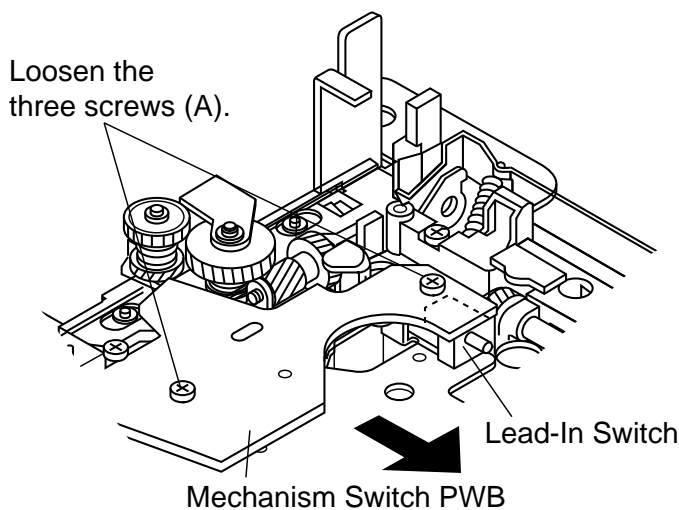



Figure 22

### ● Forced rotation of loading motor

While the display indication is test mode STOP state or EJECT state, the loading motor can be forcibly rotated by press the VOL UP/DOWN button.

## ● Mechanism Adjustment



### 1. Optical pickup grating inspecting method

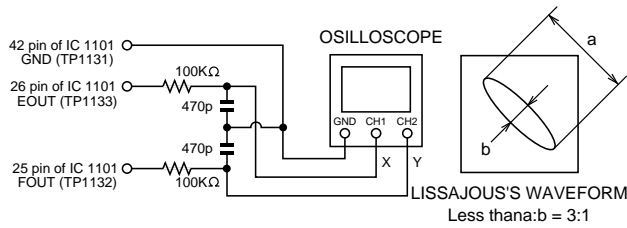

**Figure 23-1 Optical Pickup Grating Deviation Measuring Method**

After the automatic adjustment is performed in the AUTO mode (test mode) with the aid of high reflection MD disc ("COMPLETE" is displayed), the Lissajous's waveform (x-y) is adjusted.


1. Slightly loosen the 3 screws of spindle moto, and maken an adjustment, observing the Lissajous's waveform.
2. After adjustment tighten the screw in order of ①, ②, ③.

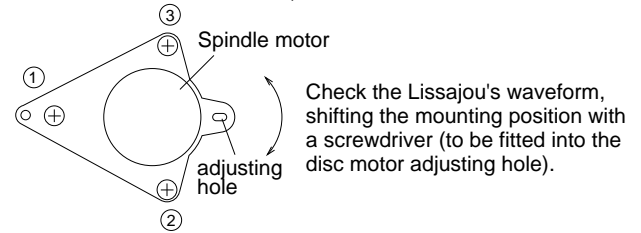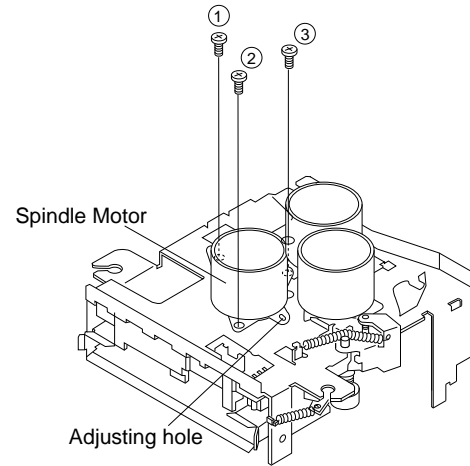

Check the Lissajou's waveform, shifting the mounting position with a screwdriver (to be fitted into the disc motor adjusting hole).


**Figure 23-2**

### 2. Jitter adjustment and checking method

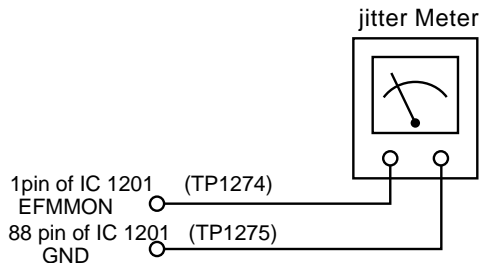

**Figure 23-3 Jitter connection diagram**

After performing automatic adjustment in AUTO mode of TEST mode using the low reflection MD disc, check this jitter in pit continuous playback and groove continuous playback mode.

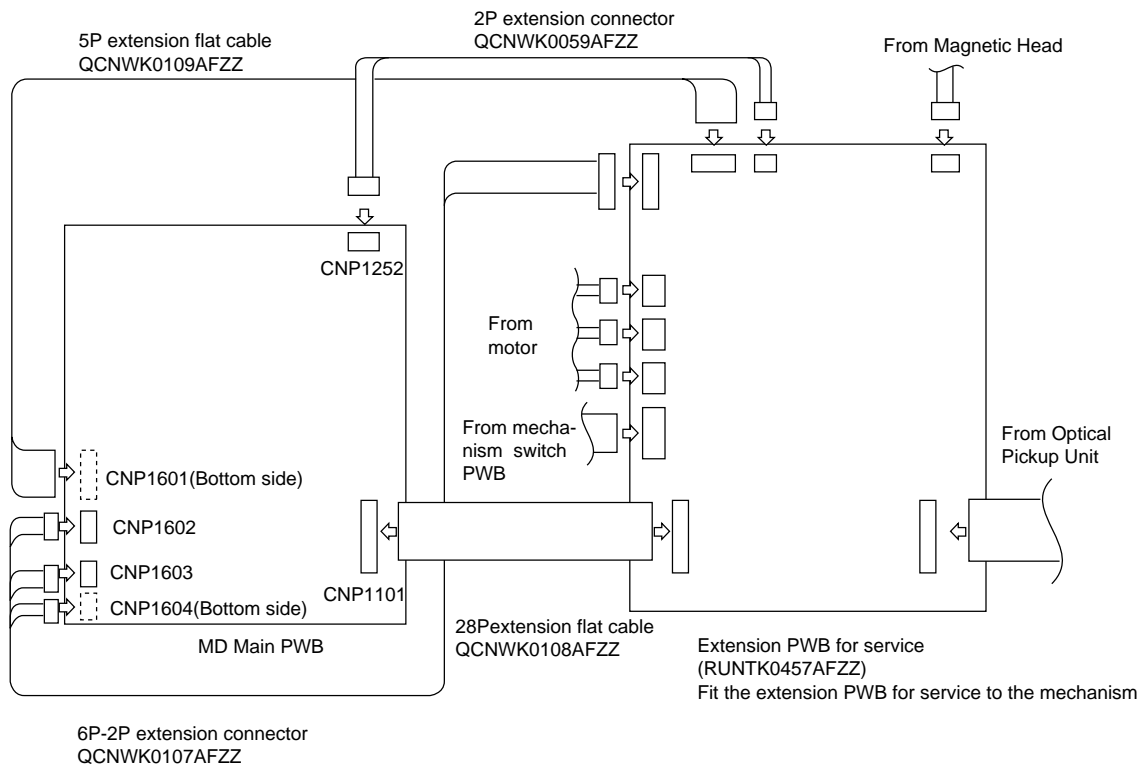

**Figure 23-4**

## EXPLANATION OF ERROR DISPLAY

Error display	Errors	Corrective action
Can't REC	<ul style="list-style-type: none"> <li>Defect occurred successively 10 times during REC-PLAY.</li> <li>As a result of occurrence of defect during REC-PLAY the recordable cluster became zero.</li> <li>Address is unreadable. REC state cannot be set for 20 seconds although retry is repeated.</li> </ul>	<ul style="list-style-type: none"> <li>Check that the disc is free from flaw, dust and fingerprint. Check whether there is any black spot. Check for disc disalignment and run-out.</li> </ul>
Can't COPY	<ul style="list-style-type: none"> <li>The following judgement is made according to the channel status of digital signal which was input from D-IN during REC-PAUSE or REC-PLAY.               <ol style="list-style-type: none"> <li>Other than audio signal</li> <li>Other than signals of home-use appliances</li> <li>Copy NG due to inversion of copy bit in CD.</li> </ol> </li> </ul>	<ul style="list-style-type: none"> <li>Check whether CD is copy-inhibited one. (An example: CD-R)</li> </ul>
Din UNLOCK	<ul style="list-style-type: none"> <li>The digital signal which was input from D-IN during REC-PAUSE, REC-PLAY or CD FUNC playback caused the following.               <ol style="list-style-type: none"> <li>PLL of digital IN was unlocked.</li> <li>Locking occurred in condition other than FS = 44.1 kHz</li> </ol> </li> </ul>	<ul style="list-style-type: none"> <li>Check whether there is any abnormality in the D-IN signal line.</li> </ul>
TOC FULL	<ul style="list-style-type: none"> <li>There were no areas to record music or character information.(music name, disc name, etc.) during REC-PLAY.</li> <li>When an attempt to start is made, recordable area does not remain.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the disc with a recording/ playback disc in which an area to register UTOC remains.</li> </ul>
UTOC ERR R	<ul style="list-style-type: none"> <li>ETNO &gt; LTNO</li> <li>FTNO ≠ 0 or 1</li> <li>UTOC recorded on disc could not be read.</li> </ul>	<ul style="list-style-type: none"> <li>UTOC data is not normal. Replace the disc with other disc.</li> </ul>
UTOC ERR A	<ul style="list-style-type: none"> <li>Start address &gt; End address</li> </ul>	<ul style="list-style-type: none"> <li>UTOC data is not normal. Replace the disc with other disc.</li> </ul>
UTOC ERR L0~4	<ul style="list-style-type: none"> <li>Any data of UTOC 0 to 4 looped.</li> </ul>	<ul style="list-style-type: none"> <li>UTOC data is not normal. Replace the disc with other disc.</li> </ul>
NOT AUDIO	<ul style="list-style-type: none"> <li>Nonaudio data was recorded in the track mode of currently selected TNO.</li> </ul>	<ul style="list-style-type: none"> <li>Select other TNO or replace the disc with other disc.</li> </ul>
? DISC	<ul style="list-style-type: none"> <li>Data "MINI" of system ID which has been written in TOC with ASCII code is not correct.</li> <li>The disc type written in TOC does not correspond to pre-mastered MD, recording MD and hybrid MD.</li> </ul>	<ul style="list-style-type: none"> <li>The loaded disc is not applicable. Replace the disc, and check.</li> </ul>
DISC FULL	<ul style="list-style-type: none"> <li>When an attempt to set REC-PAUSE was made, there were no recordable areas.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the disc with other recording disc in which recording area remains.</li> </ul>
PLAYBACK MD	<ul style="list-style-type: none"> <li>An attempt to set REC-PAUSE or to start editing was made on the playback-only disc.</li> </ul>	<ul style="list-style-type: none"> <li>The loaded disc is a Playback-only disc. Replace the disc with a recording disc.</li> </ul>
PROTECTED	<ul style="list-style-type: none"> <li>An attempt to record or edit was made on the record/playback disc with its careless erase preventing tab being in erase preventing state.</li> <li>An attempt was made to edit the track which was write-protected by information written in UTOC.</li> </ul>	<ul style="list-style-type: none"> <li>Return the careless erase preventing tab to its initial position, and redo.</li> <li>The track on which an attempt to edit was made is a write-protected track. Redo on another track.</li> </ul>
Can't EDIT	<ul style="list-style-type: none"> <li>Specific editing conditions were not satisfied.</li> </ul>	<ul style="list-style-type: none"> <li>The applied operation procedure is not proper. Redo, applying the correct procedure.</li> </ul>
TEMP OVER	<ul style="list-style-type: none"> <li>Owing to occurrence of some trouble internal temperature of set (MD unit) rose excessively.</li> </ul>	<ul style="list-style-type: none"> <li>Check by troubleshooting.</li> <li>Check whether the ambient temperature is too high.</li> </ul>
DISC ERR RD PA WR	<ul style="list-style-type: none"> <li>Read data was not correct or data could not be read correctly.</li> <li>Trouble occurred during recording if music data, resulting in record failure.</li> </ul>	<ul style="list-style-type: none"> <li>Data of TOC or UTOC is not normal or disc has flaw. Replace the disc with other disc.</li> </ul>
TOC ERR S TOC ERR R TOC ERR T	<ul style="list-style-type: none"> <li>TOC was read but data was not correct.</li> <li>TOC could not be read.</li> </ul>	<ul style="list-style-type: none"> <li>The TOC information recorded on disc does not conform to the MD standard. Replace the disc with other disc.</li> <li>The disc has flaw. Replace the disc with other disc.</li> </ul>
UTOC W ERR	<ul style="list-style-type: none"> <li>Trouble occurred during rewriting of UTOC, resulting in UTOC rewriting failure.</li> </ul>	<ul style="list-style-type: none"> <li>The disc has flaw. Replace the disc with other disc.</li> </ul>
FOCUS ERROR	<ul style="list-style-type: none"> <li>After the disc was loaded, focusing failure occurred.</li> </ul>	<ul style="list-style-type: none"> <li>Check that the disc is free from flaw, dust, fingerprint and black spot. Check for disc disalignment and run-out.</li> </ul>



Error display	Errors	Corrective action
BLANK MD	<ul style="list-style-type: none"> <li>• UTOC was read but total TNO and the number of characters of NAME was 0?</li> </ul>	<ul style="list-style-type: none"> <li>• Perform recording to check that the disc is recordable disc.</li> </ul>
DEFECT	<ul style="list-style-type: none"> <li>• Focusing error was caused by shock during REC-PLAY.</li> </ul>	<ul style="list-style-type: none"> <li>• Check that the disc is free from flaw, dust, fingerprint and black spot. Check for disc disalignment and run-out.</li> </ul>
TOC W ERROR	<ul style="list-style-type: none"> <li>• Although UTOC can be read but UTOC cannot be rewritten.</li> </ul>	<ul style="list-style-type: none"> <li>• Check that the record head contact is normal. Check that there is no broken wire between PWB and the recording head.</li> </ul>
MD ERROR	<ul style="list-style-type: none"> <li>• Data of EEPROM is not correct.</li> </ul>	<ul style="list-style-type: none"> <li>• Once reset, and redo. If error occurs persistently, replace EEPROM.</li> </ul>

## EXPLANATION OF MECHANISM ERROR

Error display	Errors
MECHA_ERR1_*	Ejection failure
MECHA_ERR2_*	Head-up failure
MECHA_ERR3_*	Head-down failure

HINF (IC1401 97 PIN)

\* = E Ejection completion position  $< 1.3 \text{ V}$

\* = MHorizontal midway position > 3.06 V

\* = L Load completed position 1.853~2.48 V

\* = D Head-down position 1.3~1.853 V

### ● E<sup>2</sup>-PROM (IC1402) writing procedure

### 1. Procedure to replace E<sup>2</sup>-PROM and to write the initial value of microcomputer in E<sup>2</sup>-PROM

- (1) Replace E<sup>2</sup>-PROM.
- (2) Refer to the latest E<sup>2</sup>-PROM data list.
- (3) Holding down the ENTER button and MD PLAY button, RESET button, and start up the test mode.
- (4) Indication of version.

[ t s m ○ ○ ○ ○ e ○ ○ ]

E<sup>2</sup>-PROM version (c to z)  
Microcomputer ROM version  
Model code

- (5) Press the ENTER button 7 times.  
[EEPROM SET]
- (6) Perform the operation shown in the "E<sup>2</sup>-PROM setting mode chart", compare the indication with the E<sup>2</sup>-PROM data list, and make a setting according to the E<sup>2</sup>-PROM data list, using JOG key.
- (7) Set the temperature reference value.  
(Refer to "Temperature reference setting procedure".)
- (8) The setting must conform to the E<sup>2</sup>-PROM data list.
- (9) Turn off power supply to write in E<sup>2</sup>-PROM.

## 2. Temperature reference value setting procedure (to be executed at room temperature within 21 to 29°C)

- (1) Test mode stop state.  
[ t s m○○○○ e ○○ ]
- (2) Correct temperature depending on ambient temperature according to the following table.

Ambient temperature (°C)	Temperature correction
12.2 ~ 15.8	-3
15.9 ~ 19.6	-2
19.7 ~ 23.2	-1
23.2 ~ 26.8	0
26.9 ~ 30.7	+1
30.8 ~ 34.3	+2
34.4 ~ 37.9	+3

An example: When ambient temperature is 22°C and measured temperature is 73°F

Temperature setting = 73 H - 01 H  
= 72 H

\* When the measured temperature fluctuates between two values, take lower one (if temperature fluctuates between 73H and 72H, take 72H).

- (3) Press the ENTER button 7 times.  
[ E E P R O M S E T ]
- (4) Press the MD PLAY button.  
[ F O C U S ]
- (5) Press the ENTER button 4 times.  
[ T e m p ]
- (6) Press once the MD PLAY button.  
[ T E M P ○○ ◆◆ ]  
○○ : Measured temperature, ◆◆ : Temperature setting
- (7) Set temperature to the value determined above, using the JOG button.
- (8) Press the MD STOP button.  
[ T e m p ]

## MD-R2

### ● E<sup>2</sup>-PROM Data List

#### Focus setting

Item indication	Initial Setting
F G ○○	9 7 H
FF 1 ○○	9 E H
FF 2 ○○	E 0 H
F Z H L E V ○○	E D H
F O K L E V n ○○	0 8 H
F O K L E V f ○○	0 8 H
F O K L P F n ○○	0 0 H
F O K L P F f ○○	8 8 H
W A I T f ○○	9 0 H

#### Spin setting

Item indication	Initial Setting
S P G ○○	2 0 H
S P G — i n ○○	B 8 H
S P G — m i d ○○	7 6 H
S P G — o u t ○○	5 0 H
S P 1 ○○	1 0 H
S P 2 ○○	8 7 H
S P 3 ○○	E 3 H
S P 4 ○○	E 3 H
S P 5 ○○	1 0 H
S P D L I M ○○	7 8 H

#### Tracking setting

Item indication	Initial Setting
T G ○○	4 5 H
T F 1 ○○	7 0 H
T F 2 ○○	E 0 H
S V C N T 4 ○○	0 1 H
T R B L V o ○○	5 3 H
T R B L V t ○○	6 0 H
T R K L V o ○○	4 C H
T R K L V t ○○	3 8 H
T D P W o ○○	8 9 H
T D P W t ○○	1 A H
S L C T o ○○	0 0 H
S L C T t ○○	4 0 H
S L C T m ○○	5 3 H
T C R S C I P ○○	1 6 H
C O T L V P ○○	1 4 H
C O T L V r ○○	2 8 H
W A I T m ○○	F F H

#### Slide setting

Item indication	Initial Setting
S L G ○○	3 5 H
S L 2 ○○	2 7 H
S L D L I M ○○	6 5 H
S L D L E V ○○	1 6 H
S L K L V k ○○	5 5 H
S L K L V t ○○	3 A H
S L K L V m ○○	5 5 H

#### Control setting

Item indication	Initial Setting
C O N T R L 1 ○○	8 0 H
C O N T R L 2 ○○	0 2 H
S P K L E V m ○○	2 6 H
A D J T T M ○○	1 4 H
H D E Q A D ○○	9 0 H
L D E Q A D ○○	8 F H
G D E Q A D ○○	9 1 H
M D E Q B C ○○	9 0 H
L D E Q B C ○○	8 F H
G D E Q B C ○○	8 A H
H A L S G ○○	2 1 H
L A L S G ○○	2 1 H
G A L S G ○○	2 1 H
H A L S O F S ○○	F E H
L A L S O F S ○○	0 0 H
G A L S O F S ○○	0 0 H

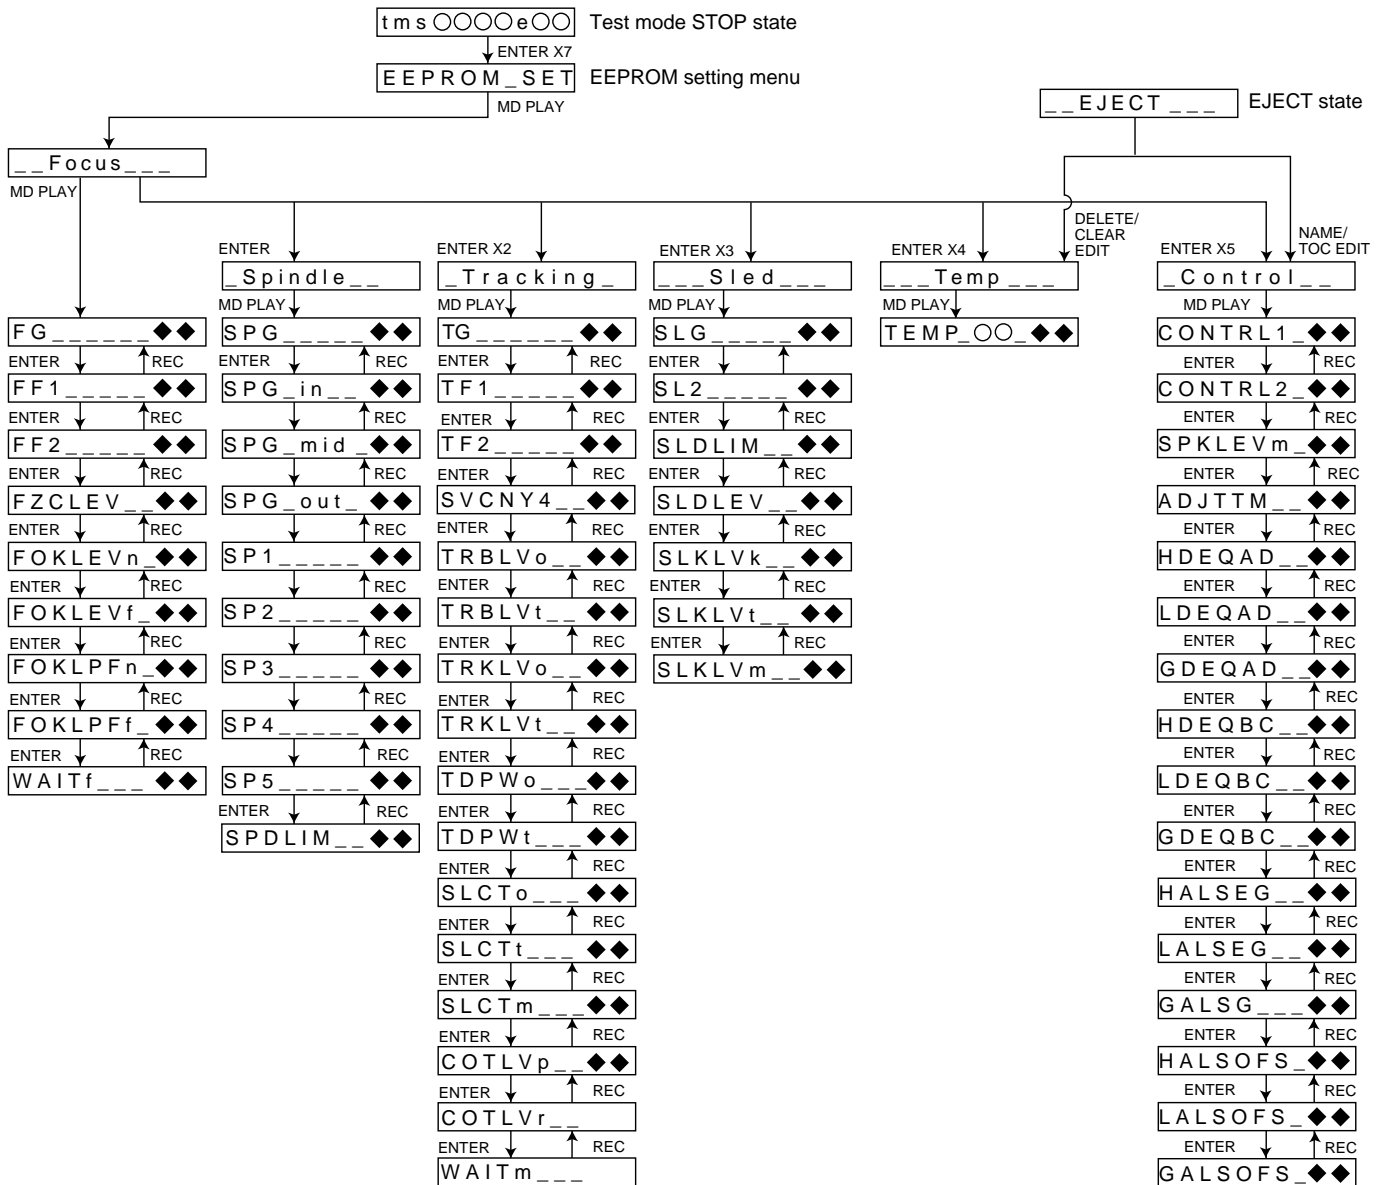
● E<sup>2</sup>-PROM Setting Mode Chart

Figure 27

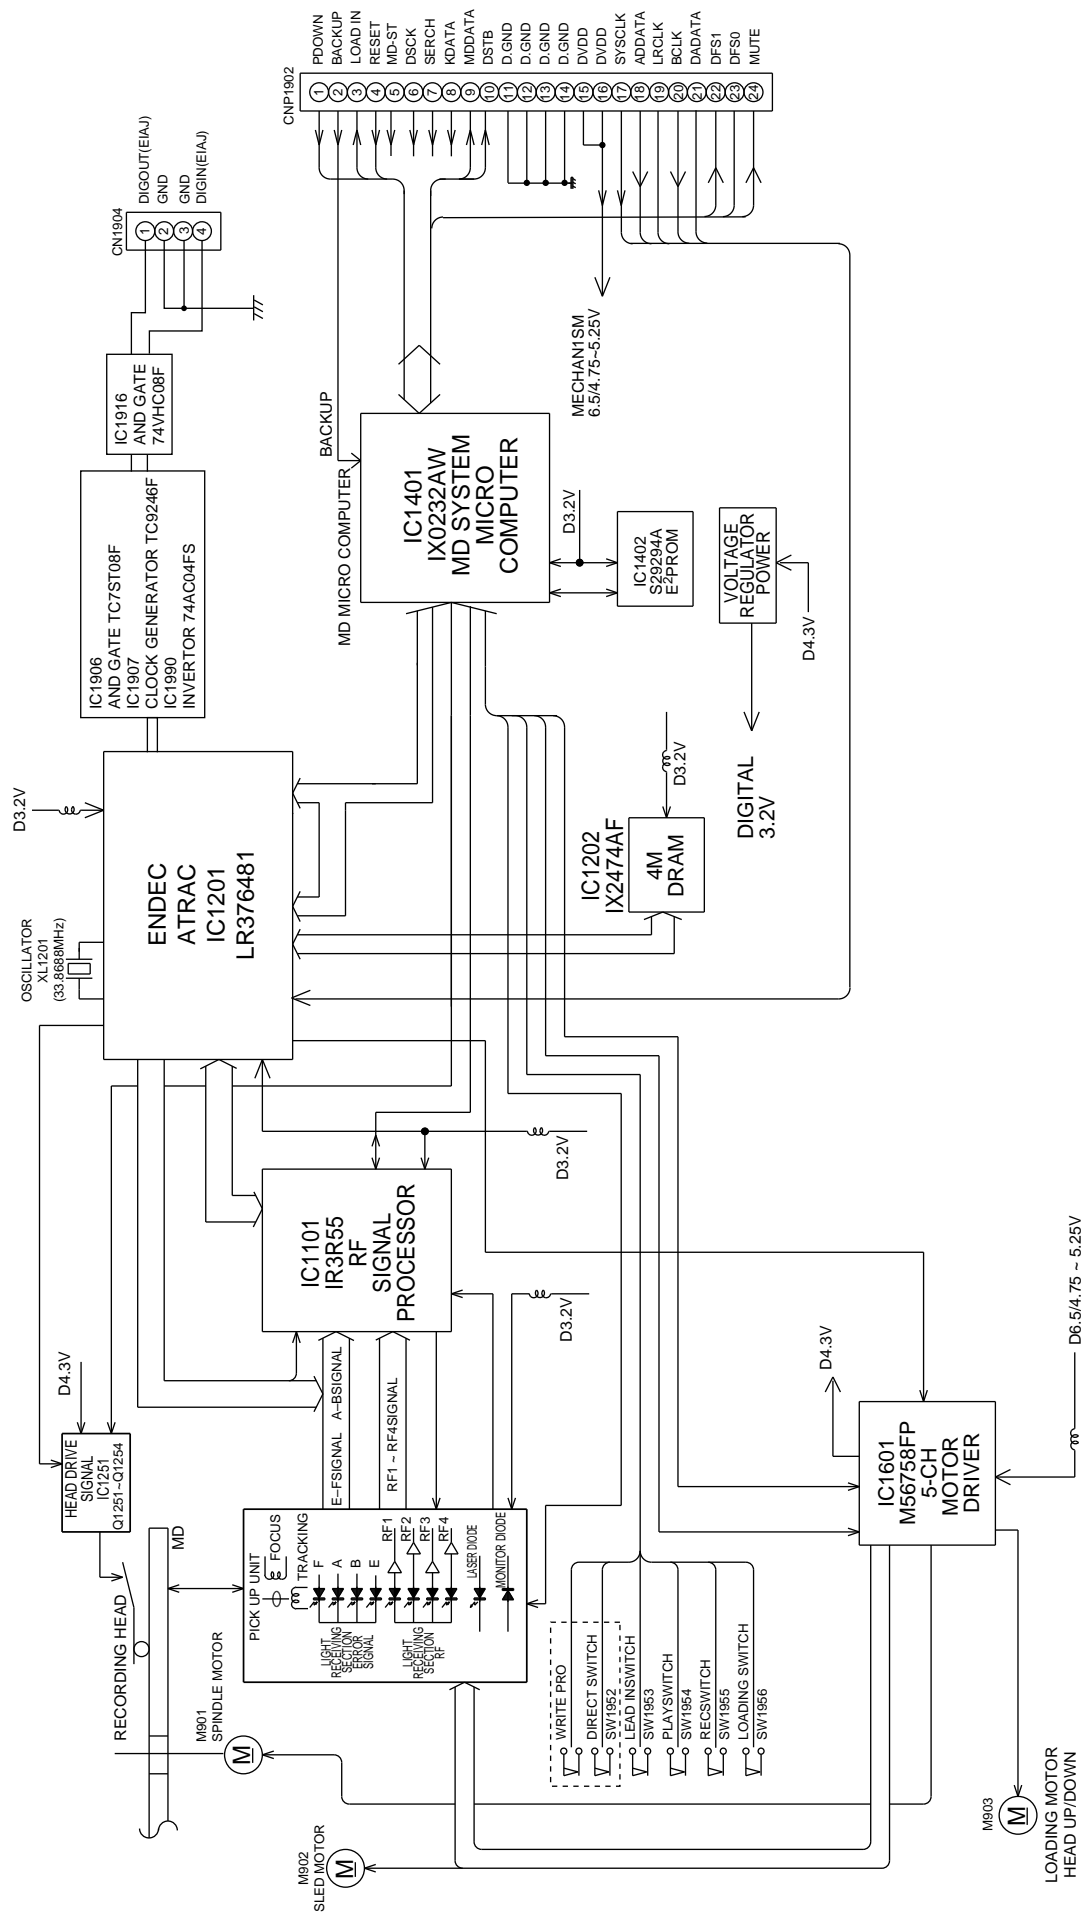


Figure 28 BLOCK DIAGRAM (1/2)


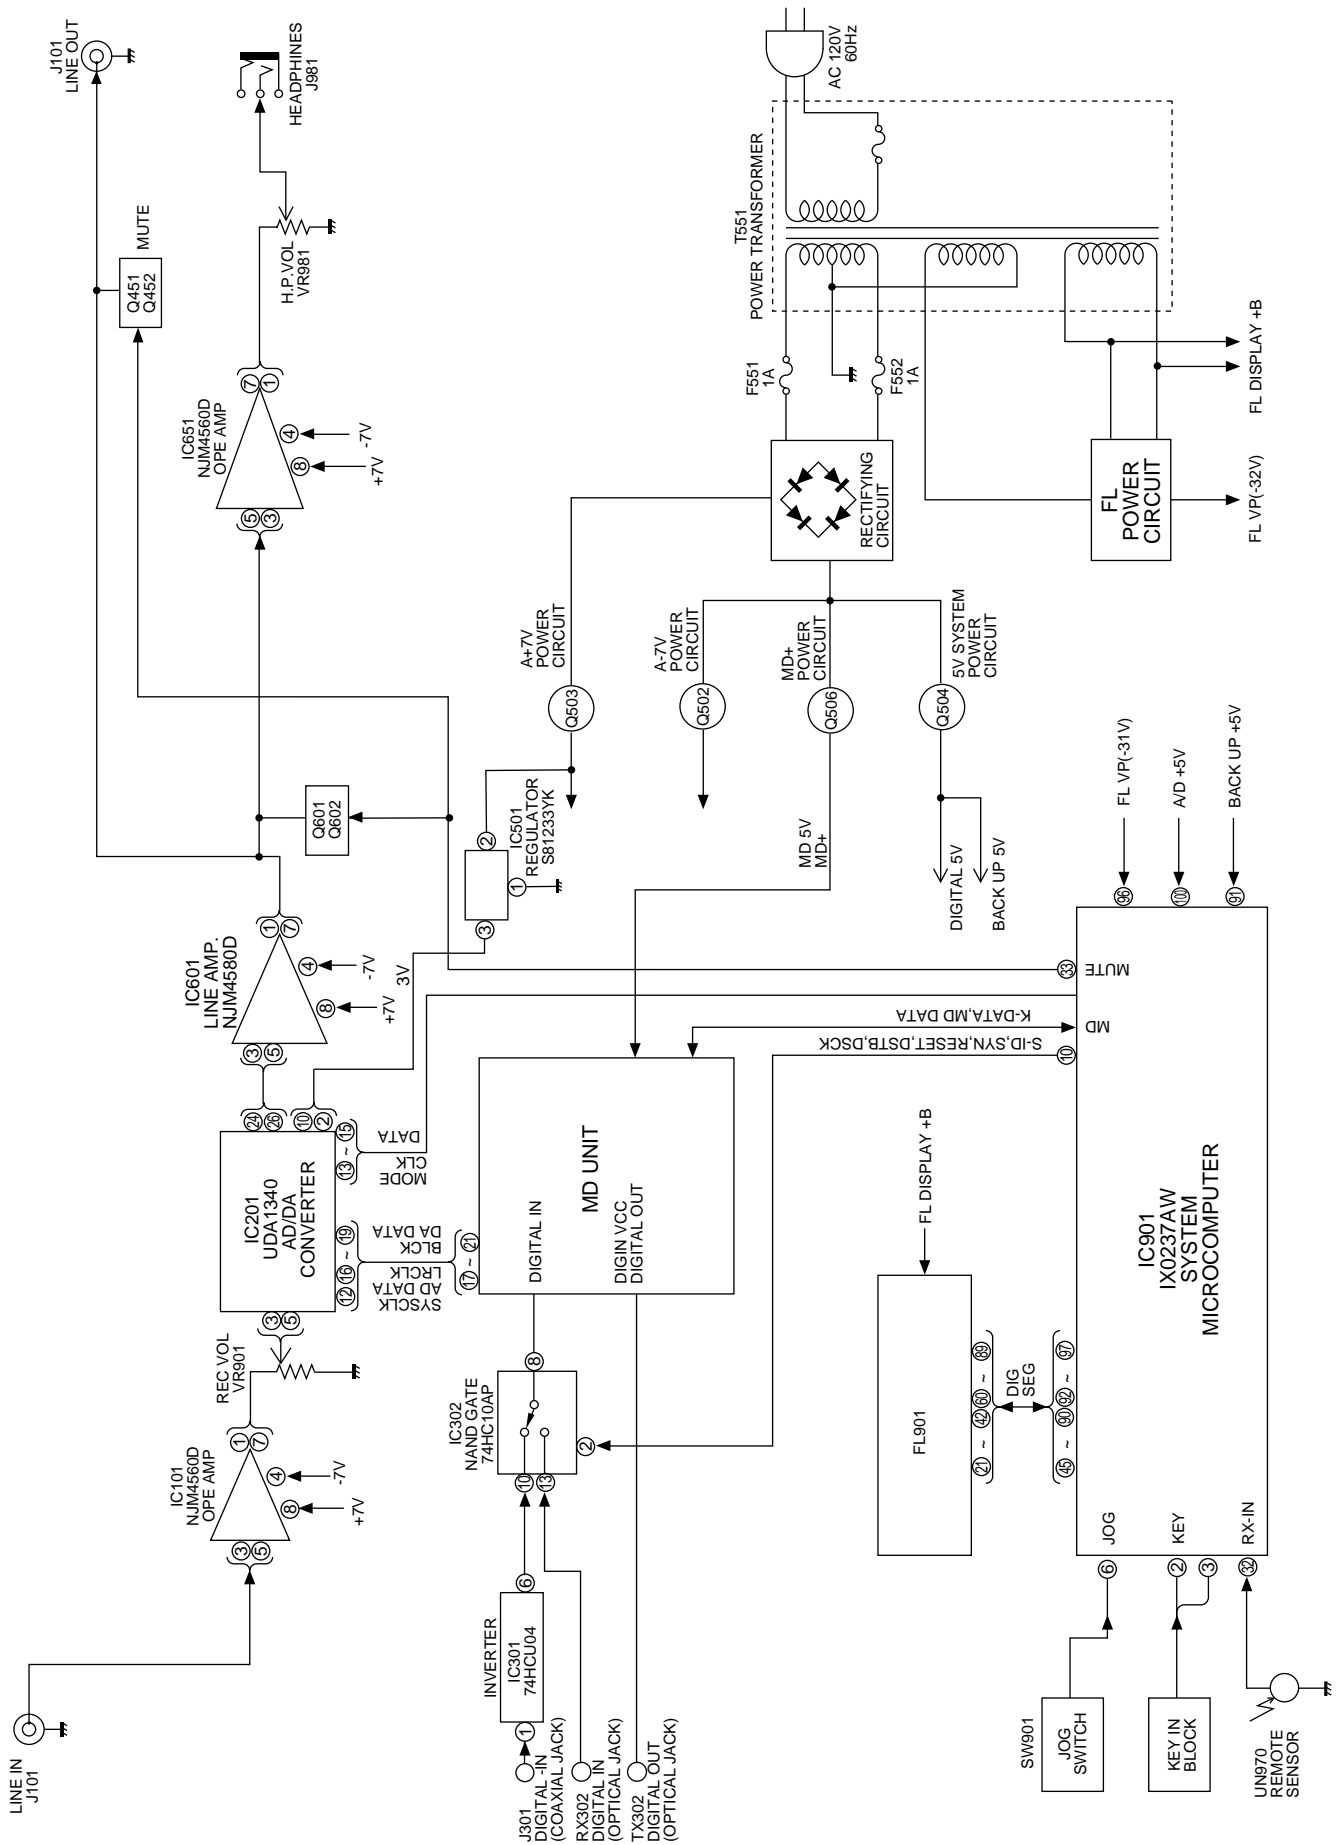



Figure 29 BLOCK DIAGRAM (2/2)

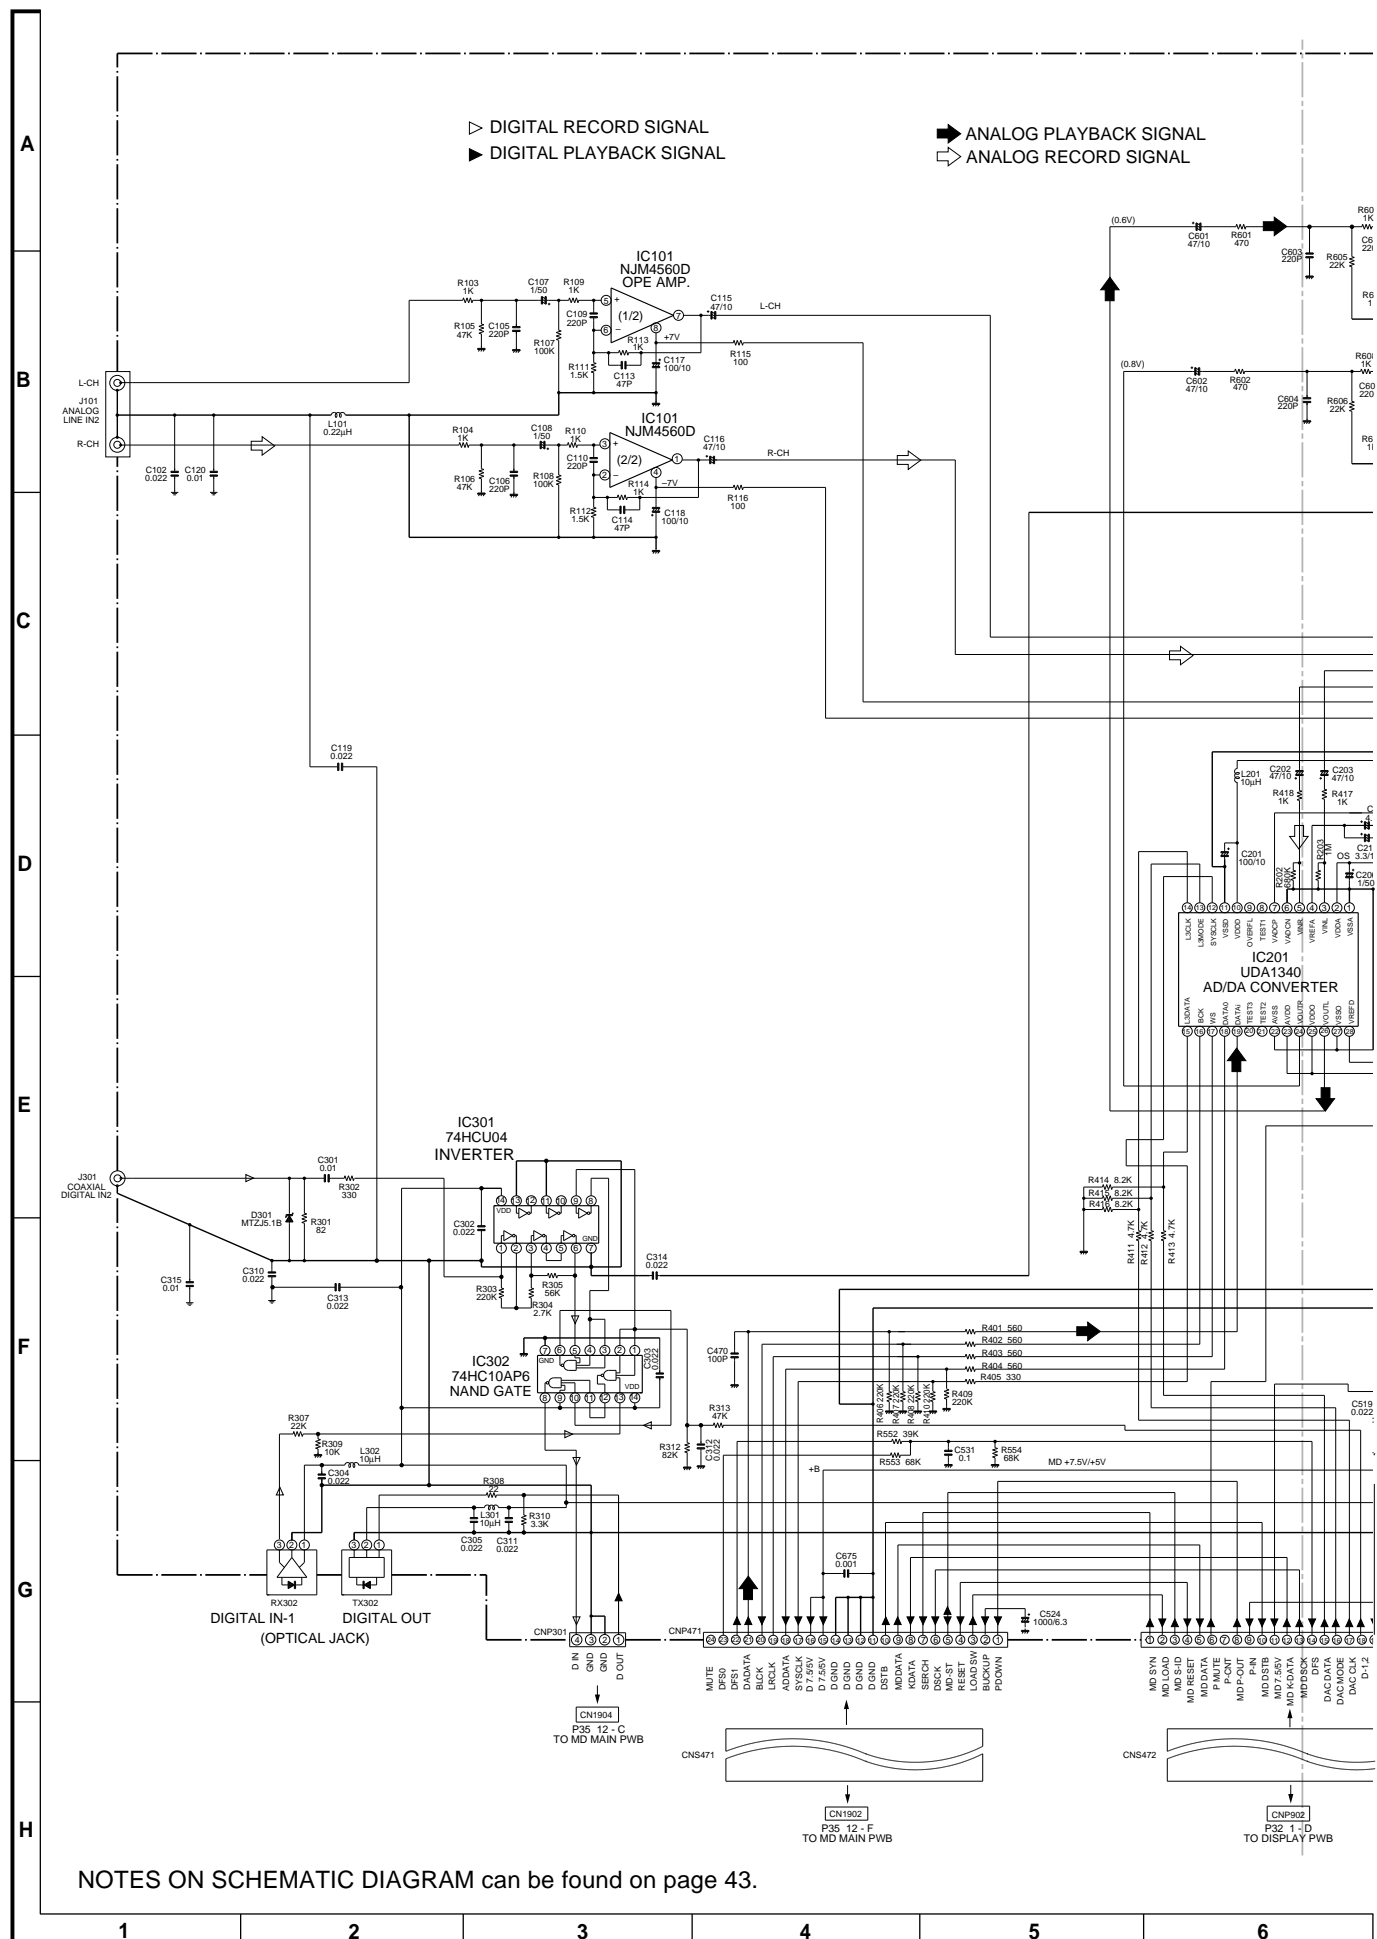

NOTES ON SCHEMATIC DIAGRAM can be found on page 43.

Figure 30 SCHEMATIC DIAGRAM (1/6)

- 31 -

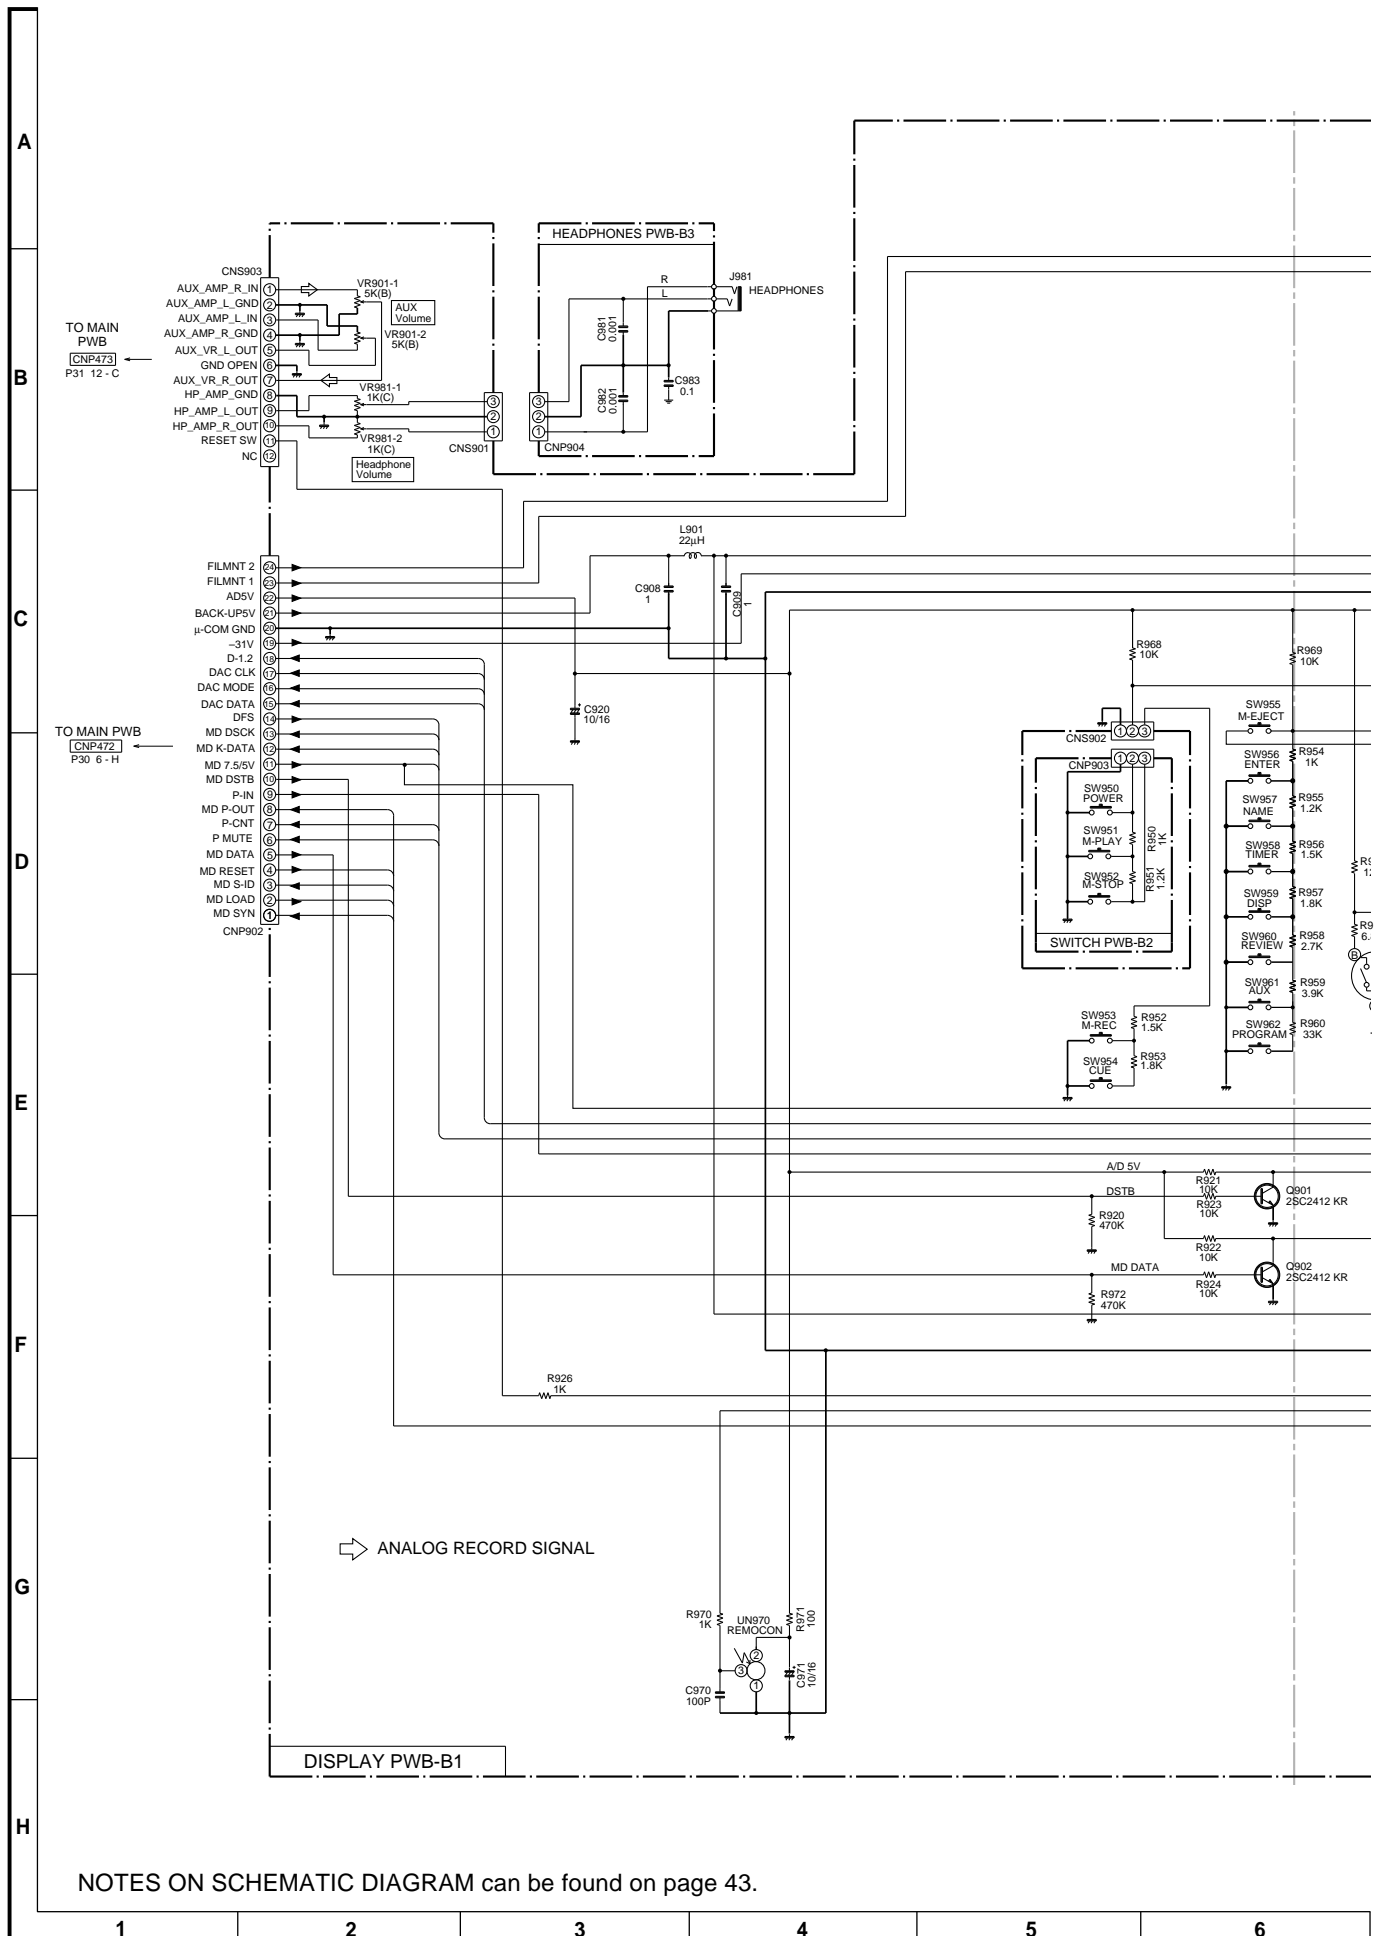

NOTES ON SCHEMATIC DIAGRAM can be found on page 43.

Figure 32 SCHEMATIC DIAGRAM (3/6)



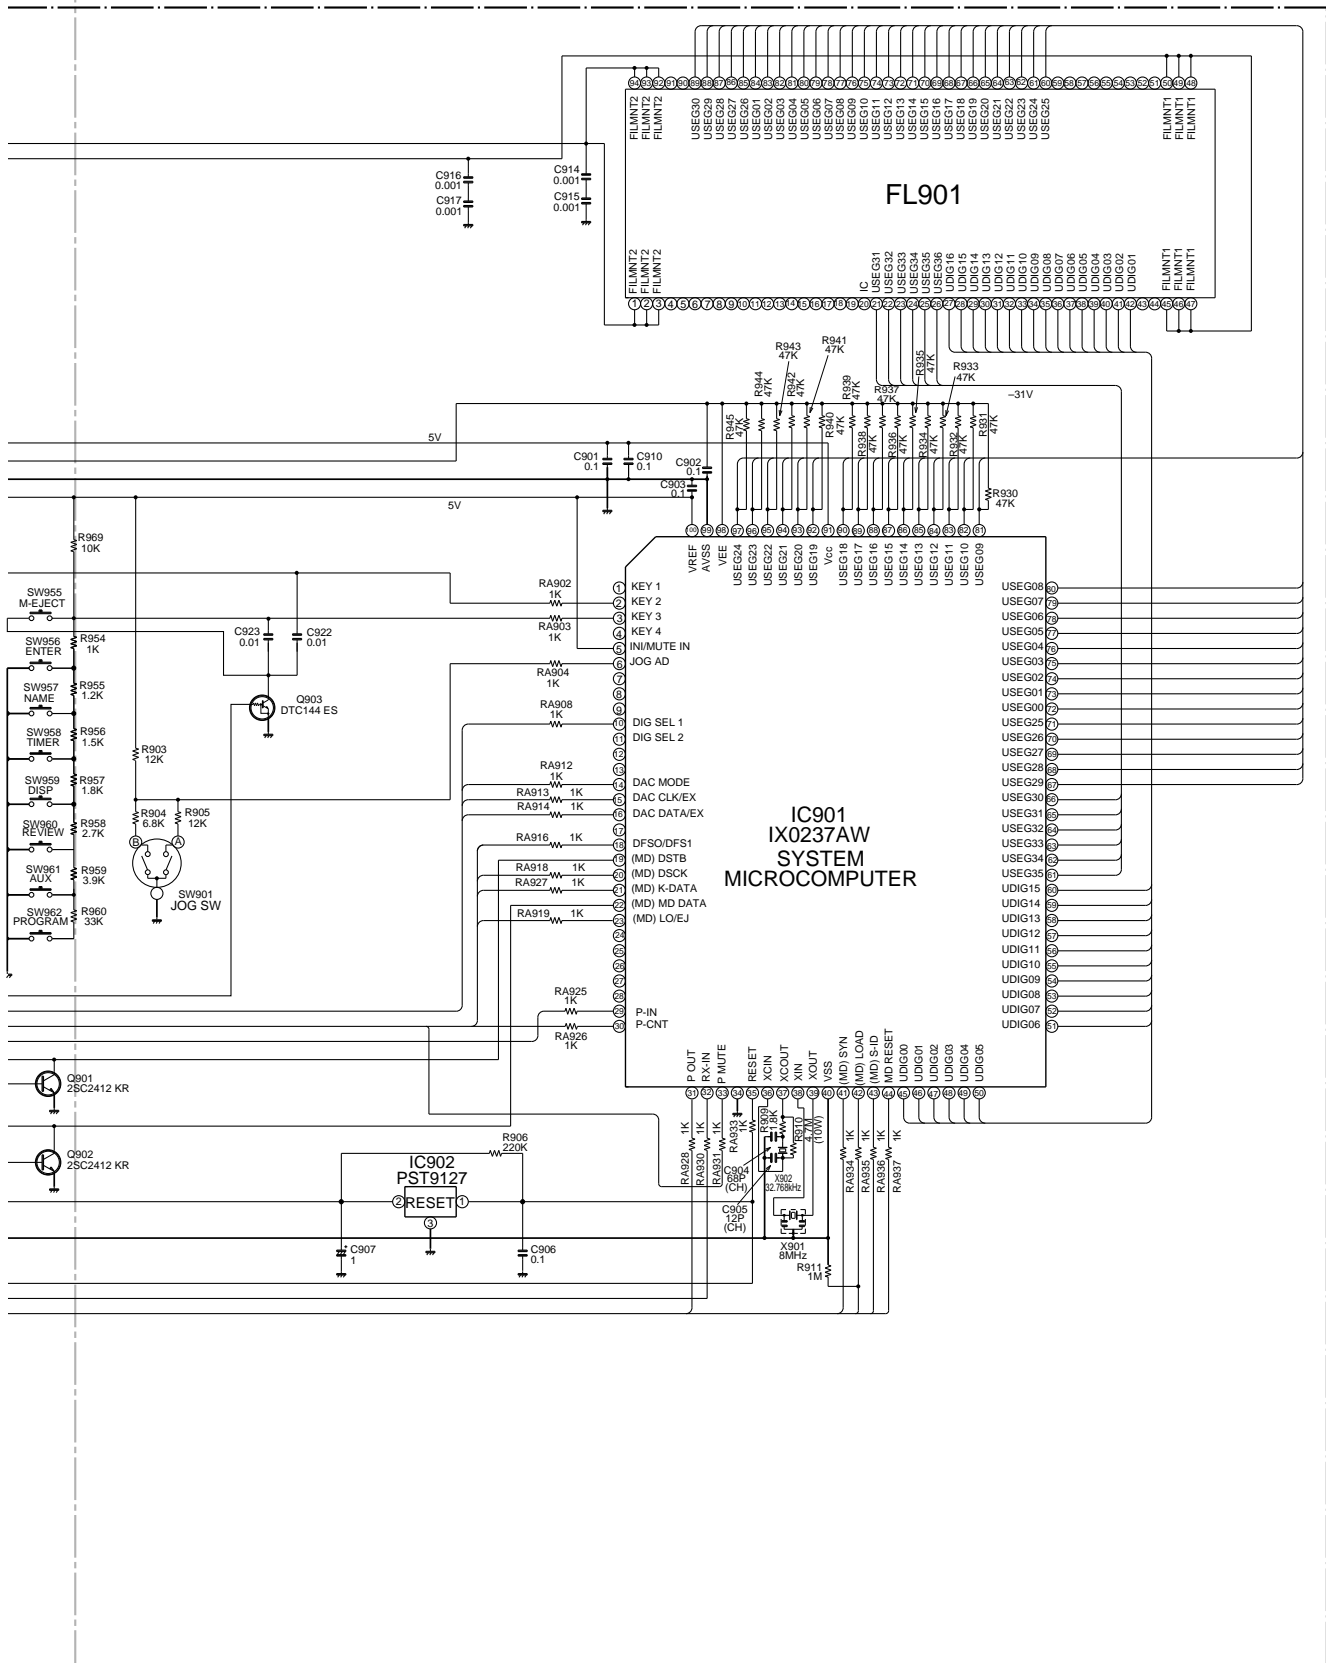


Figure 33 SCHEMATIC DIAGRAM (4/6)


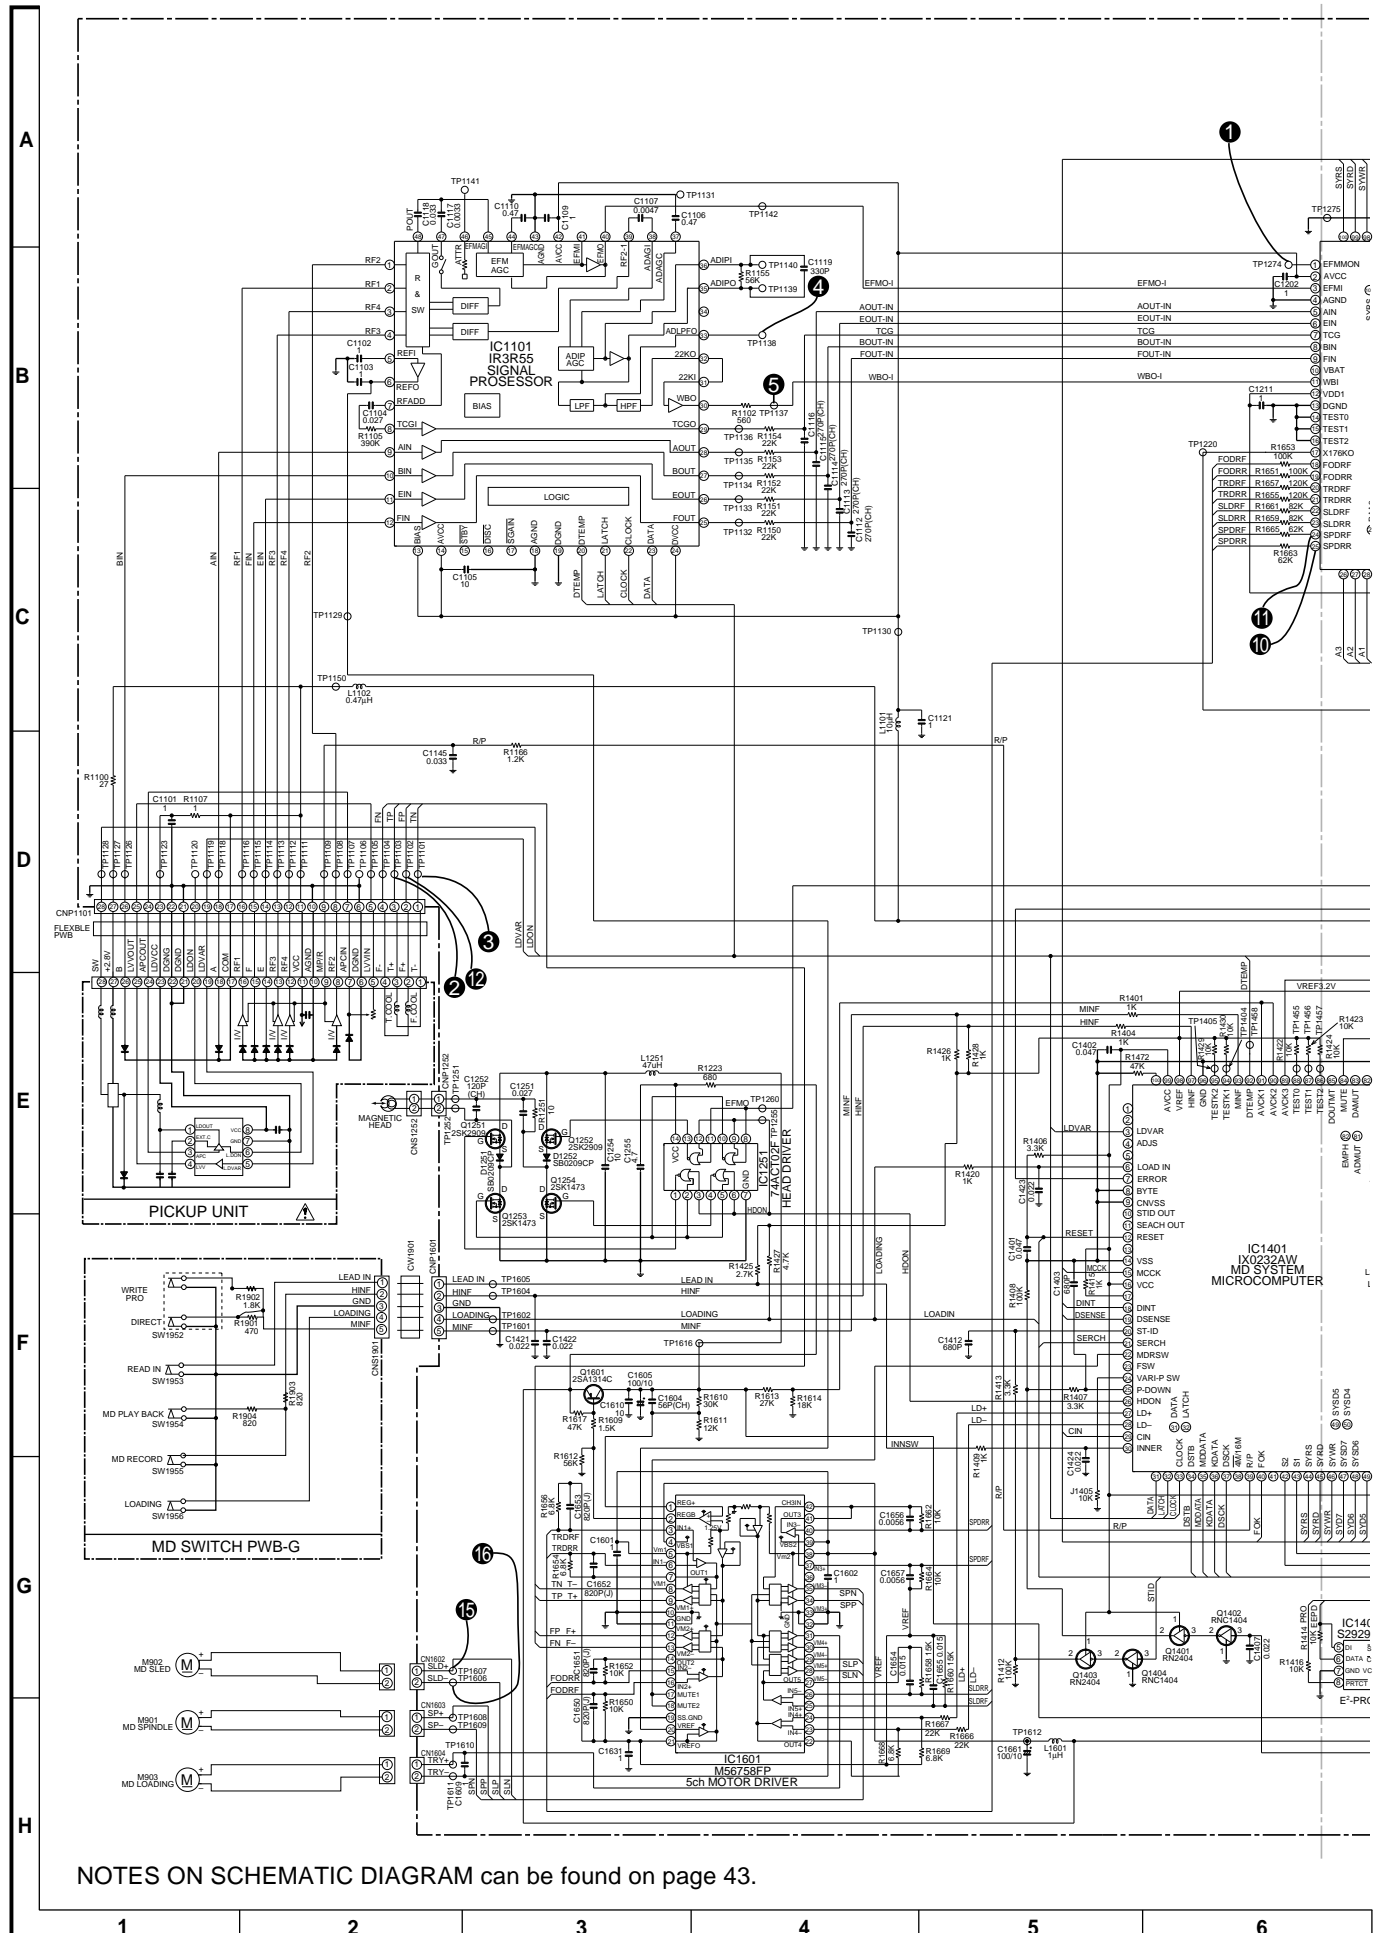


Figure 34 SCHEMATIC DIAGRAM (5/6)

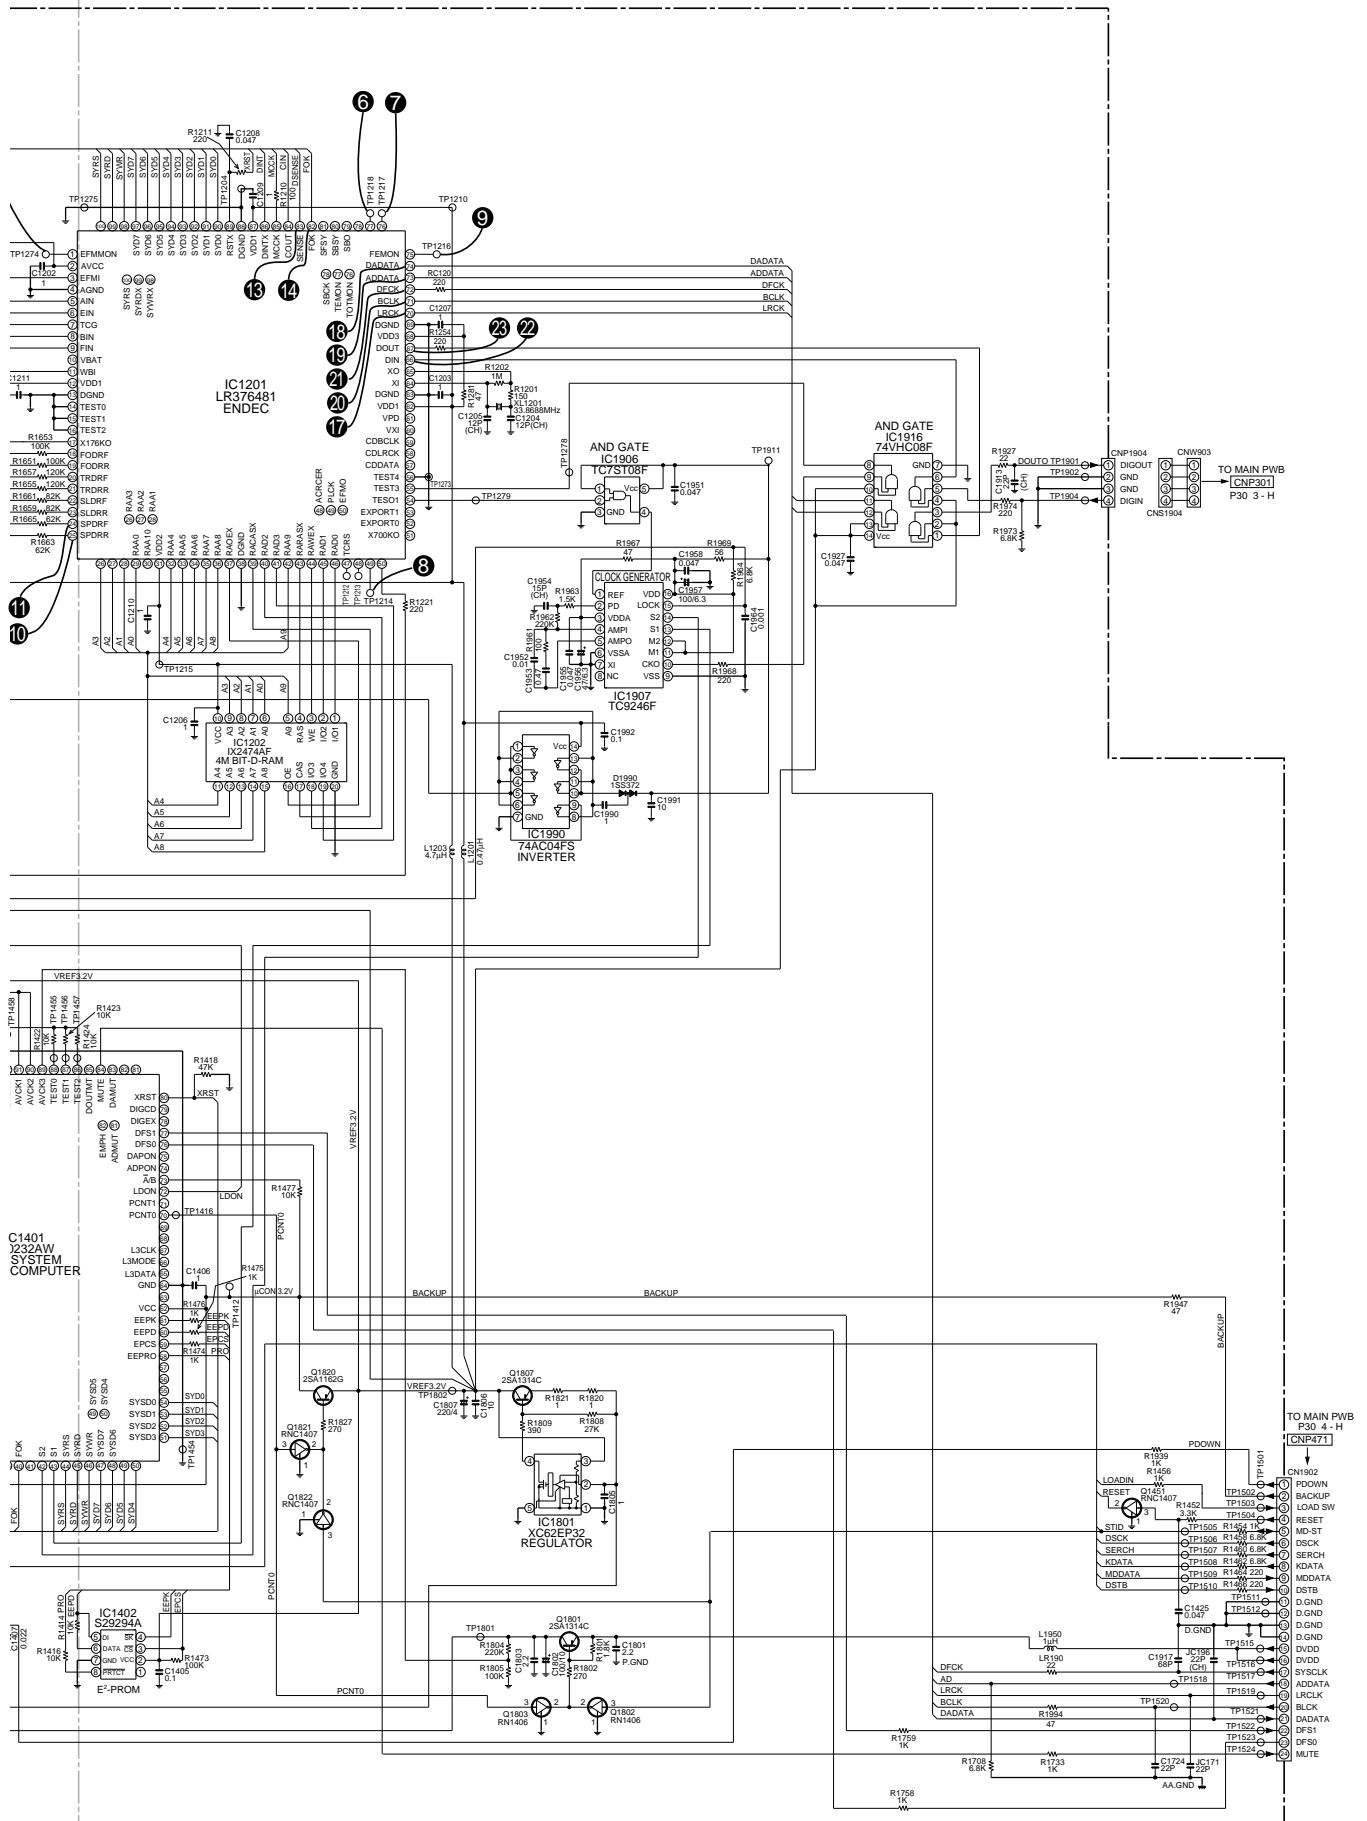

The numbers 1 to 23 are waveform numbers shown in page 44, 45.

7	8	9	10	11	12
---	---	---	----	----	----

Figure 35 SCHEMATIC DIAGRAM (6/6)

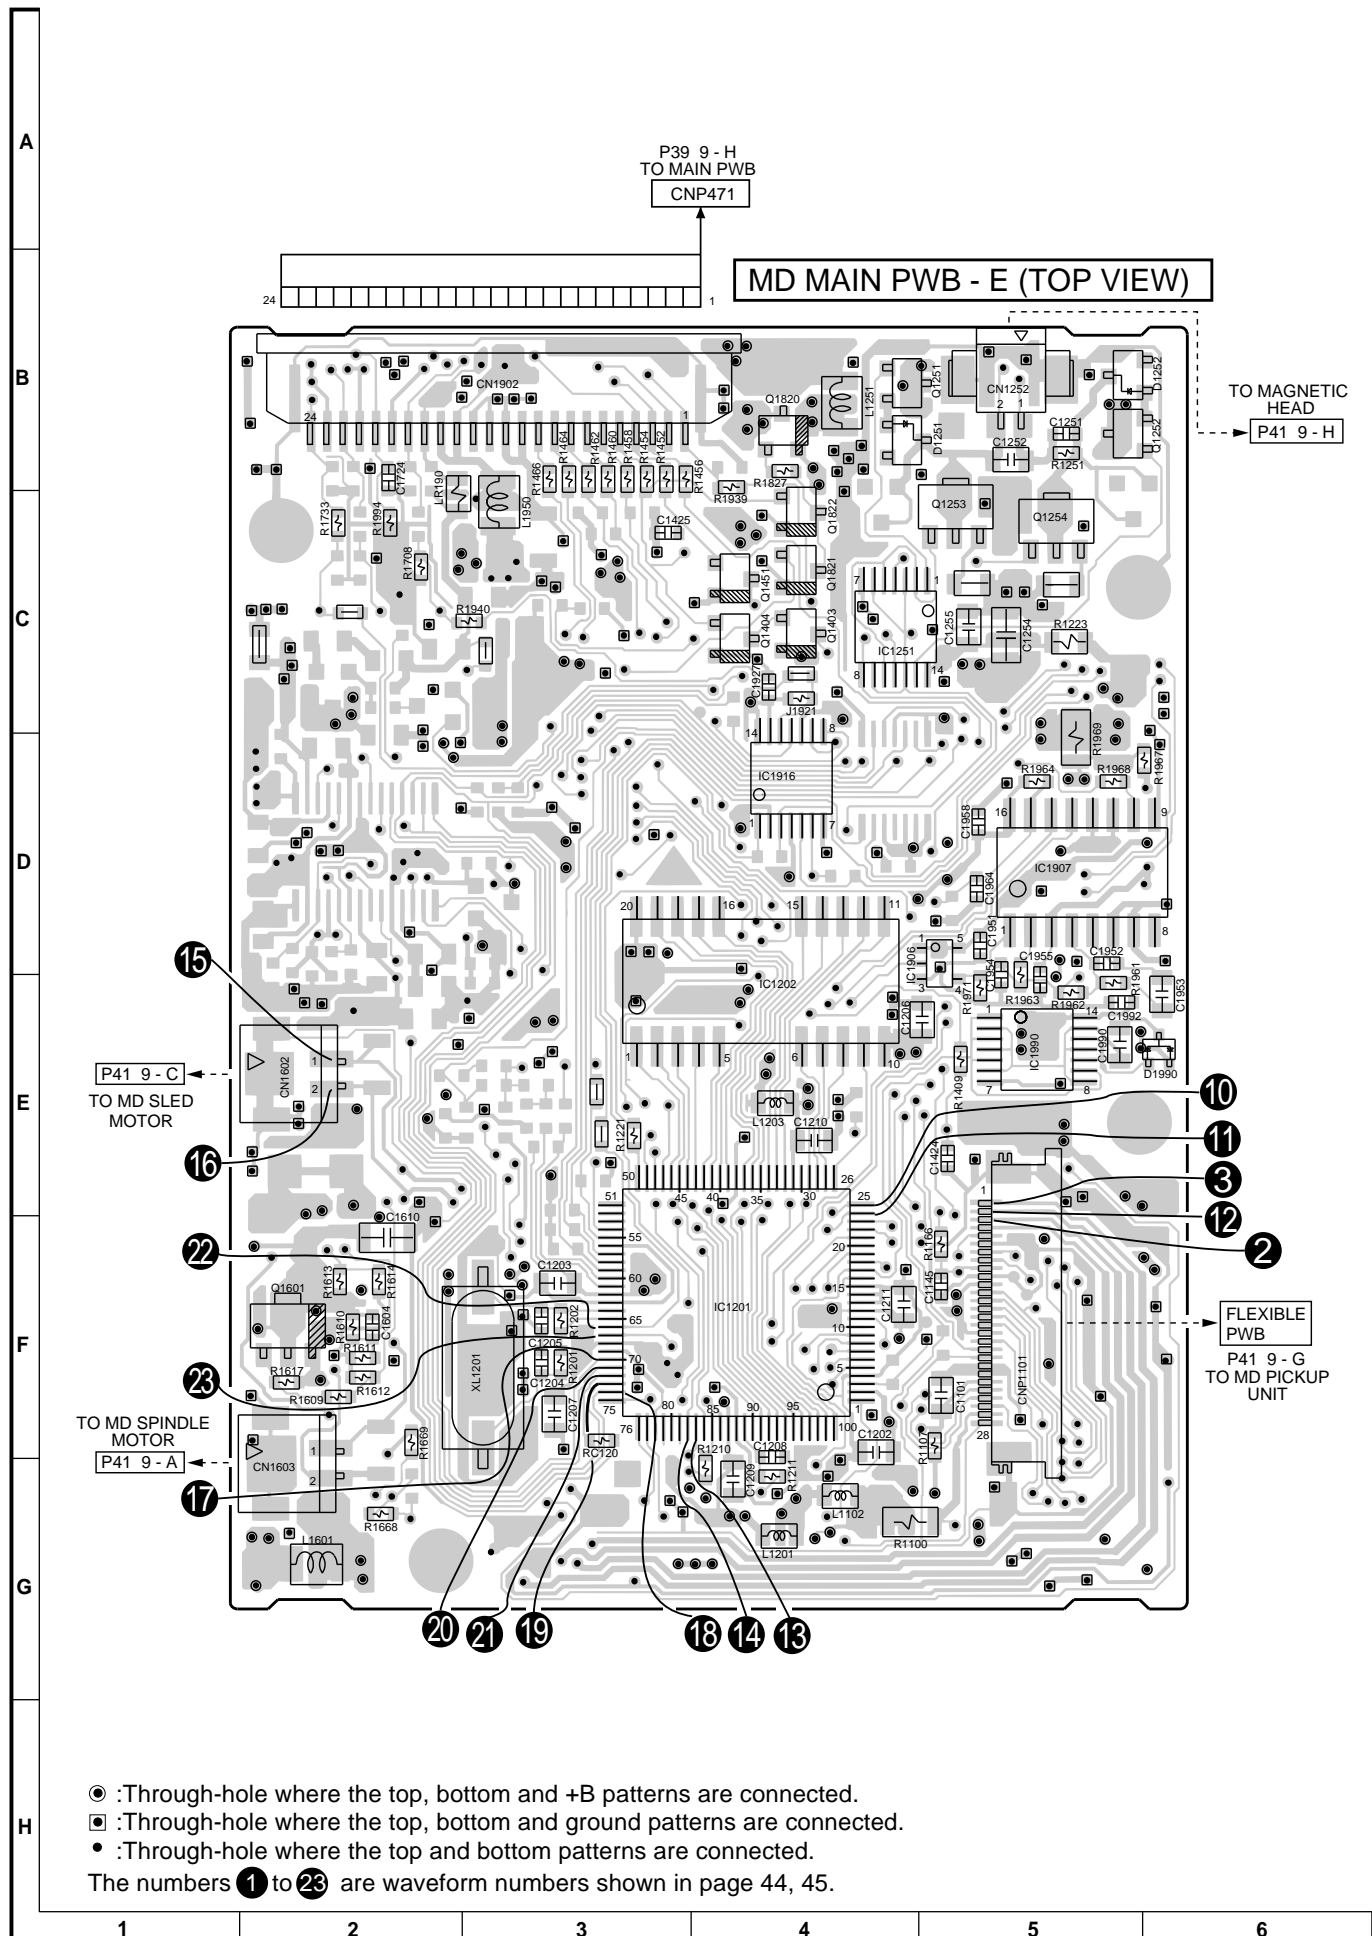


Figure 36 WIRING SIDE OF P.W.BOARD (1/6)

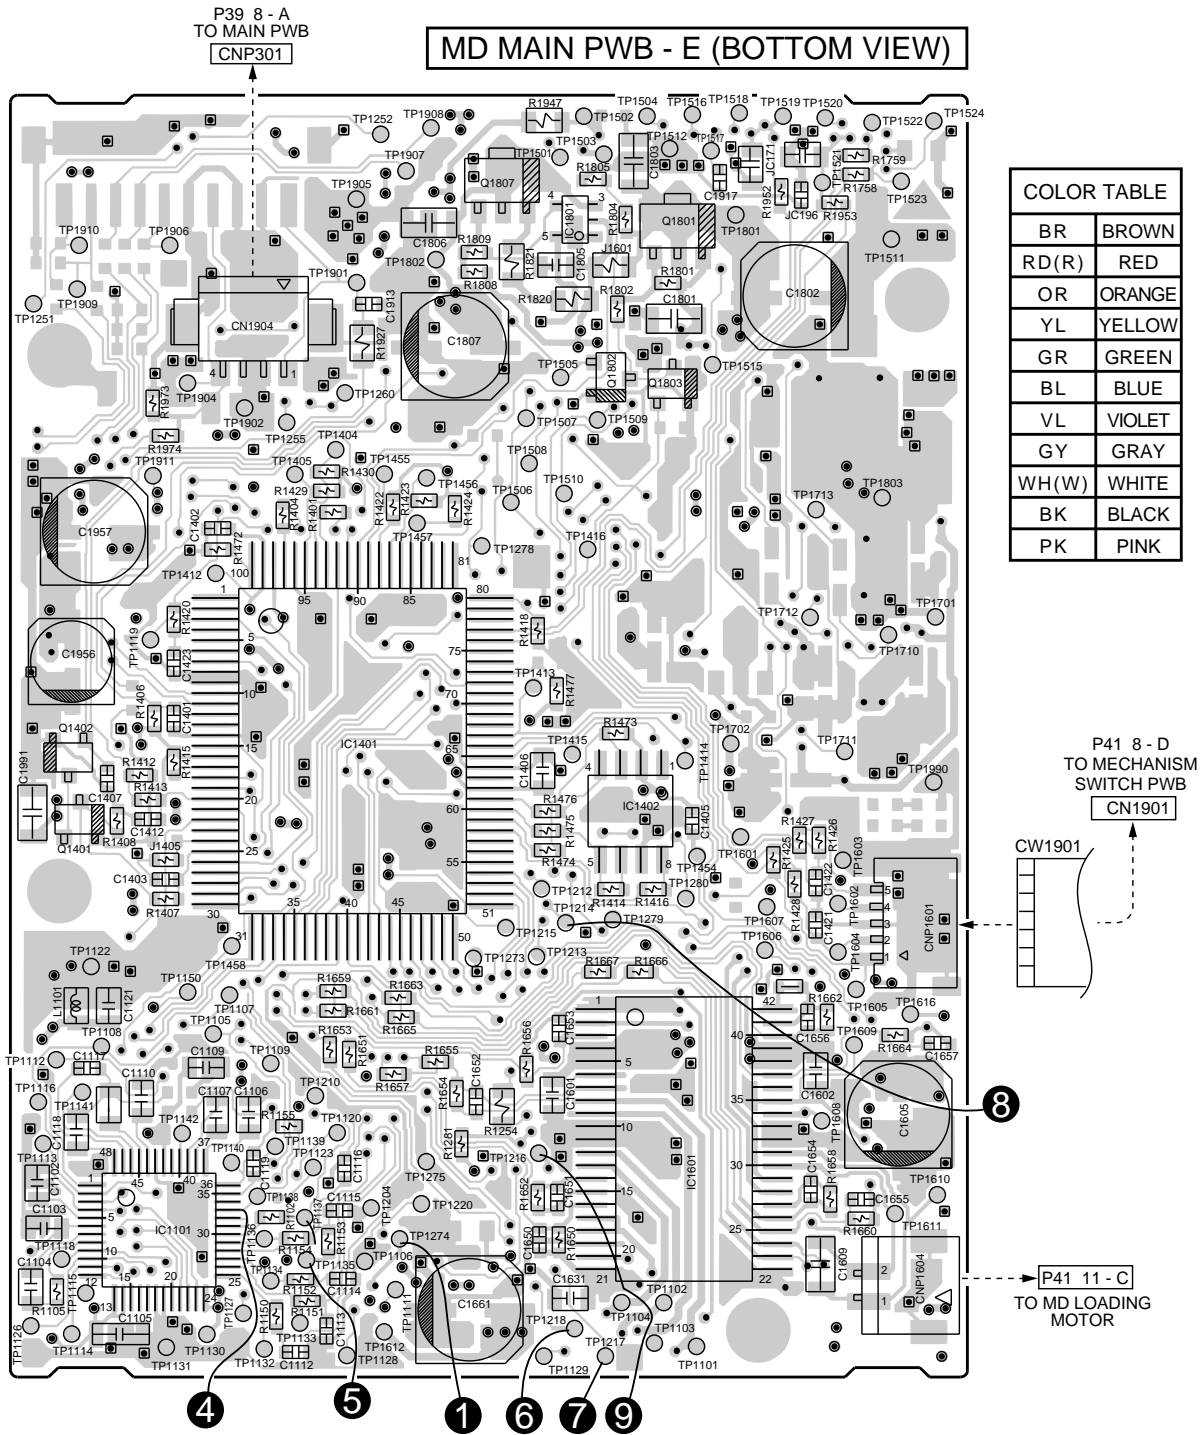


Figure 37 WIRING SIDE OF P.W.BOARD (2/6)



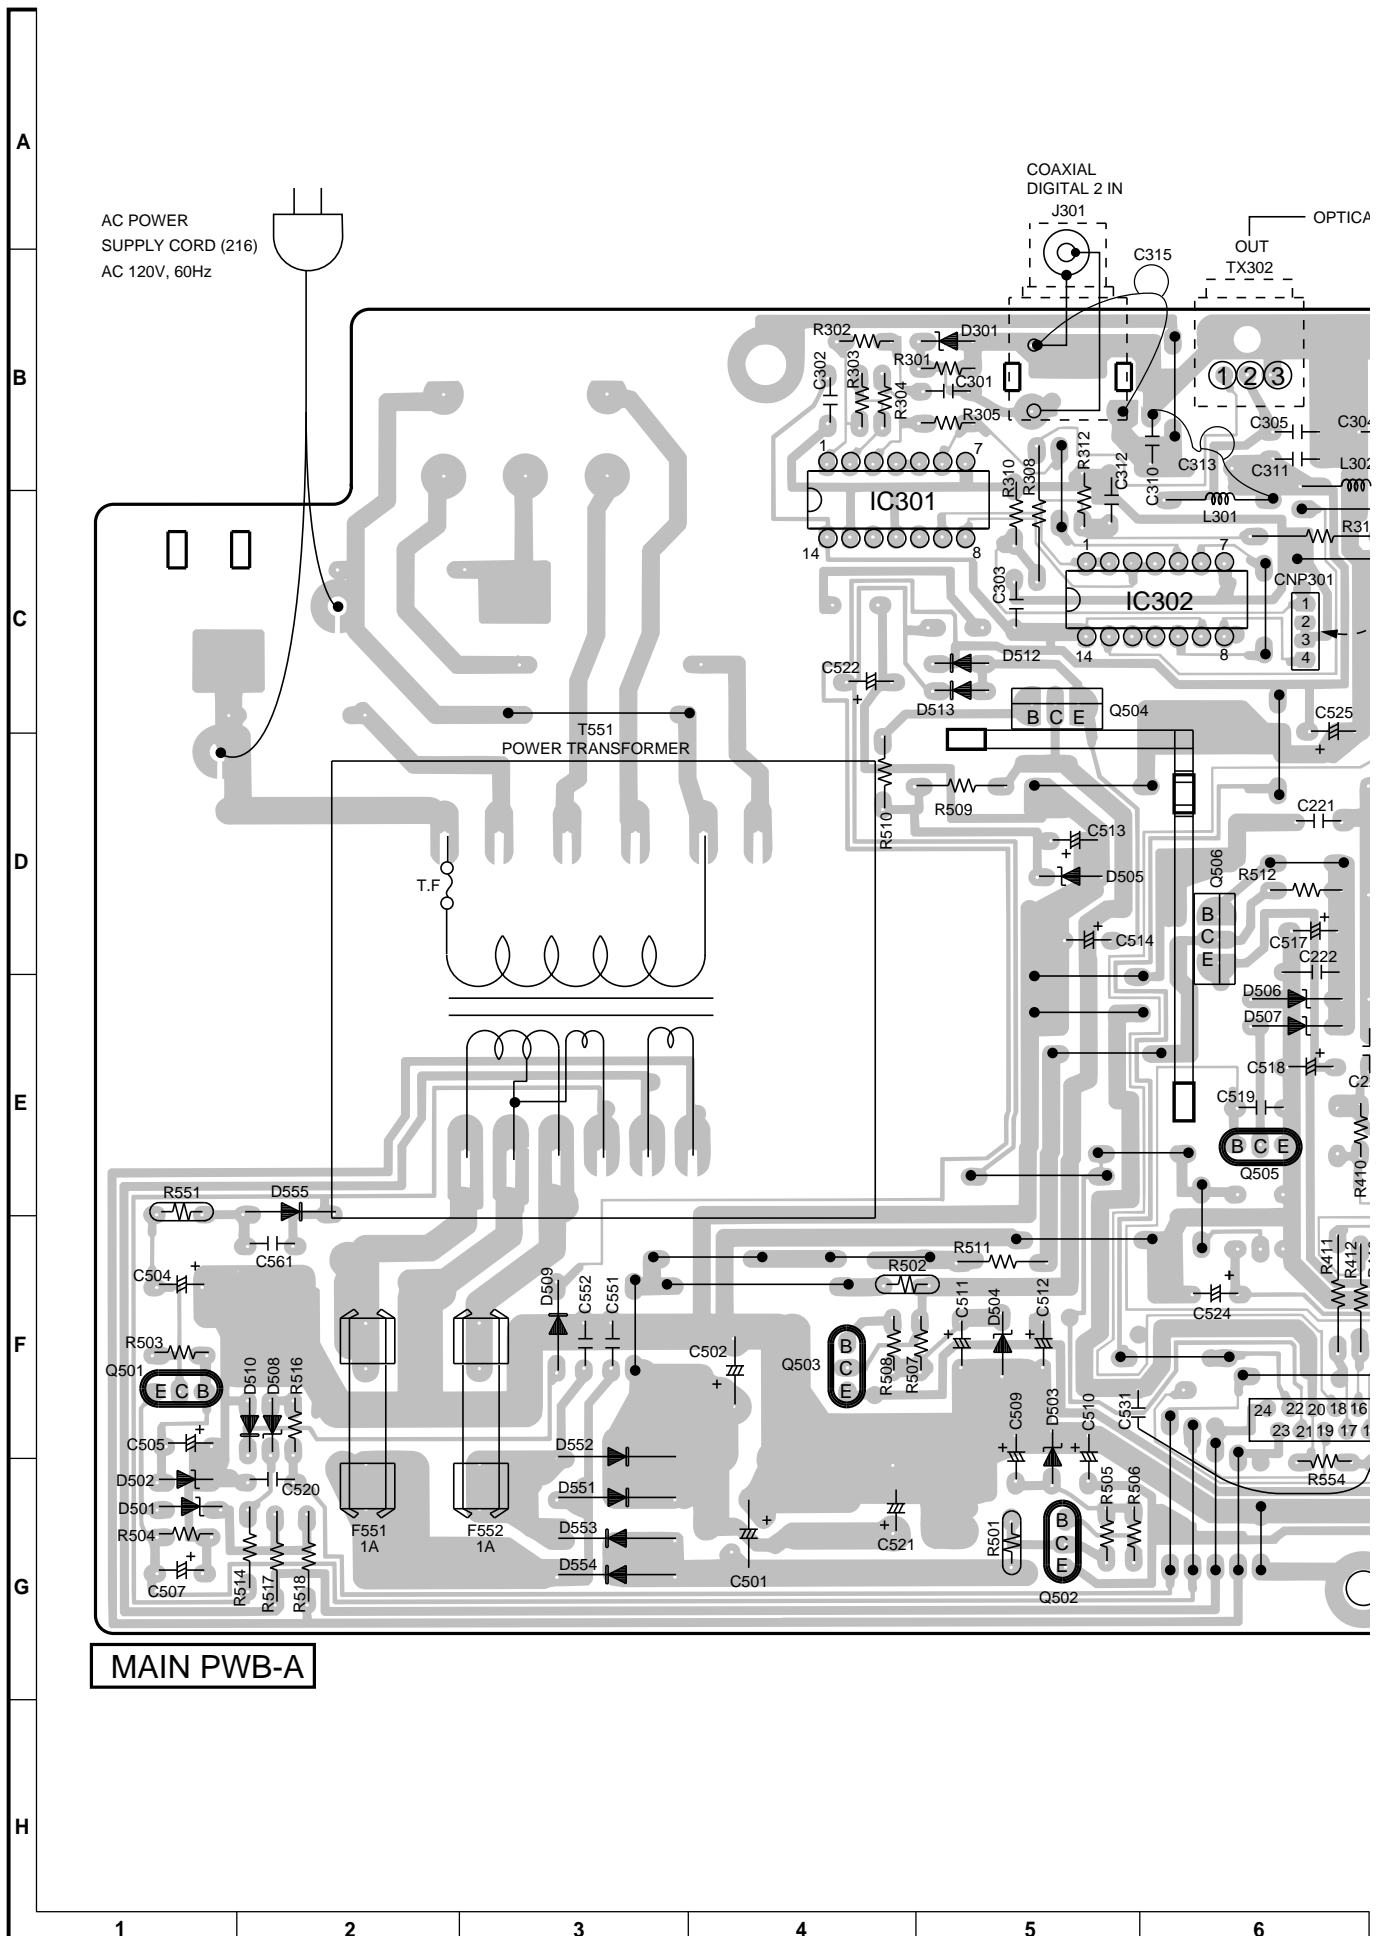


Figure 38 WIRING SIDE OF P.W.BOARD (3/6)

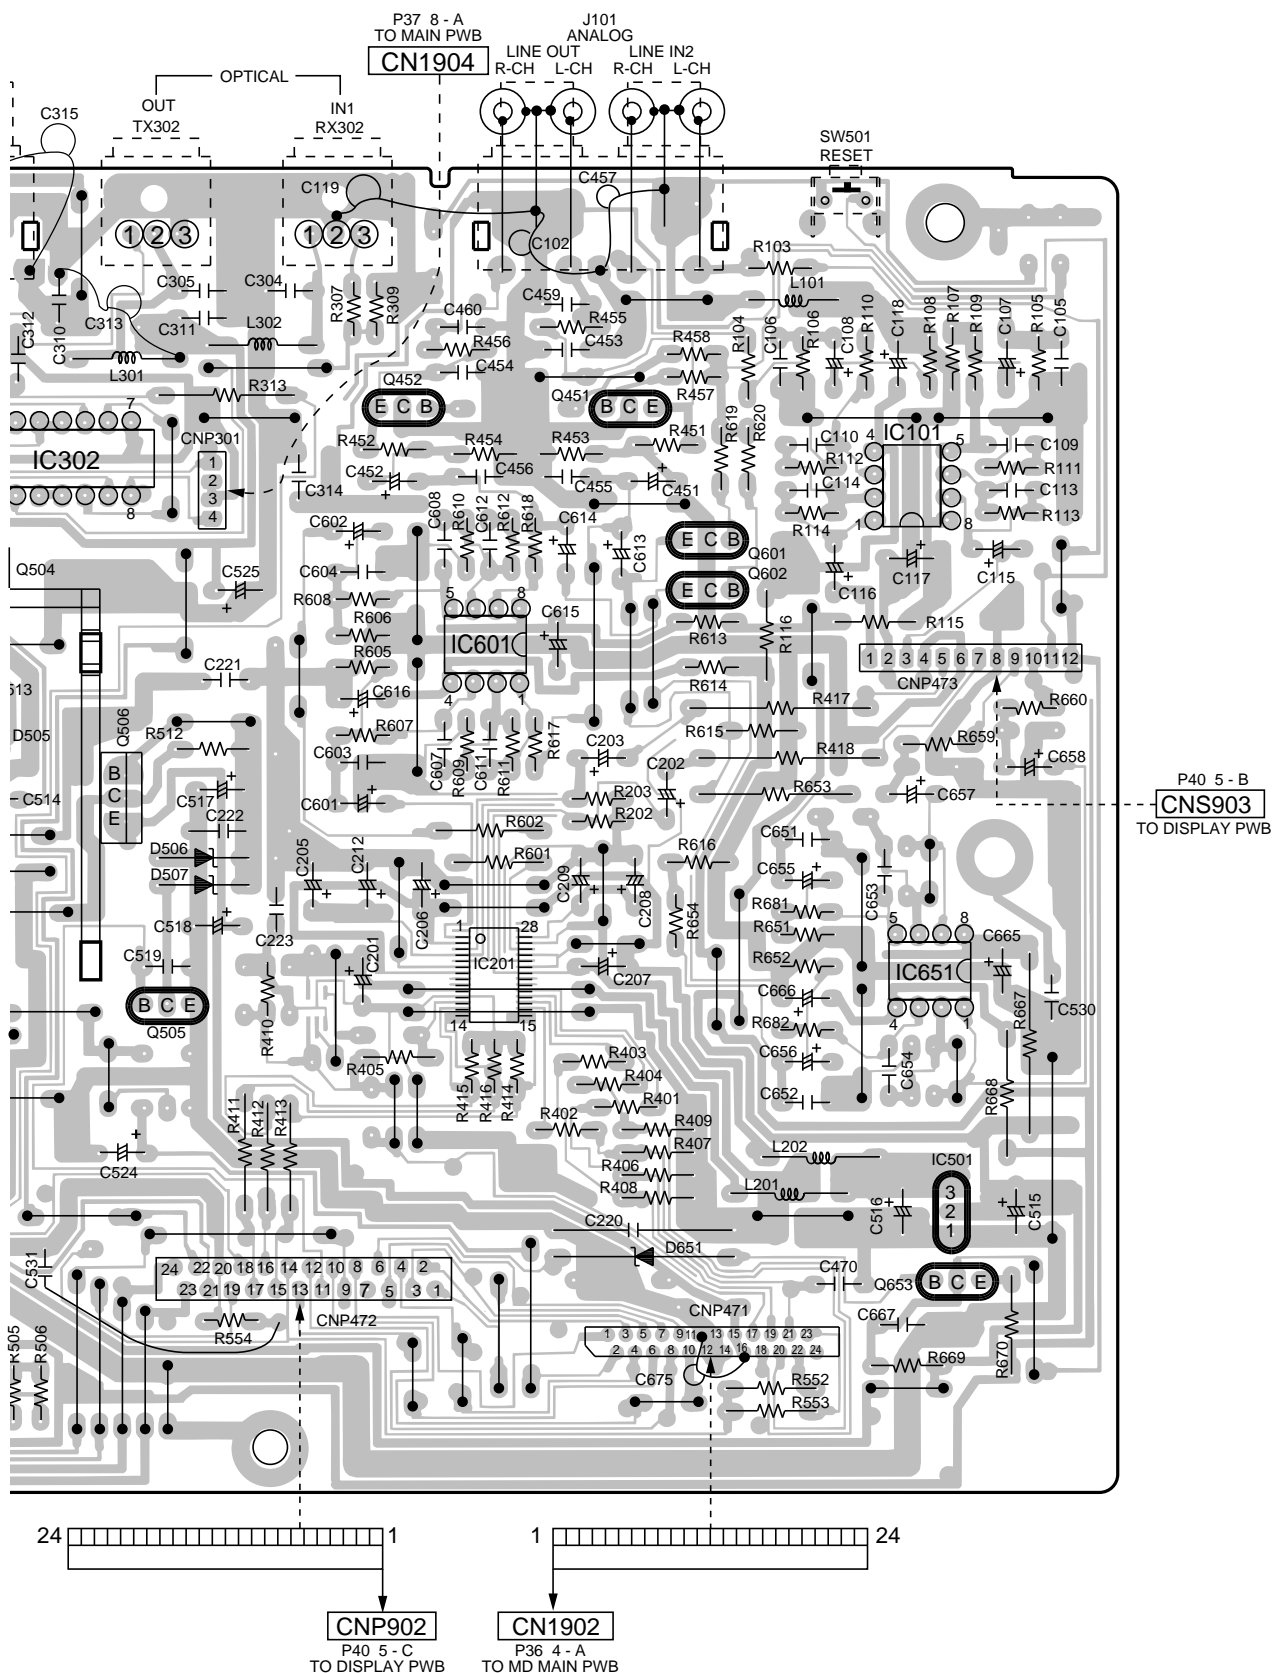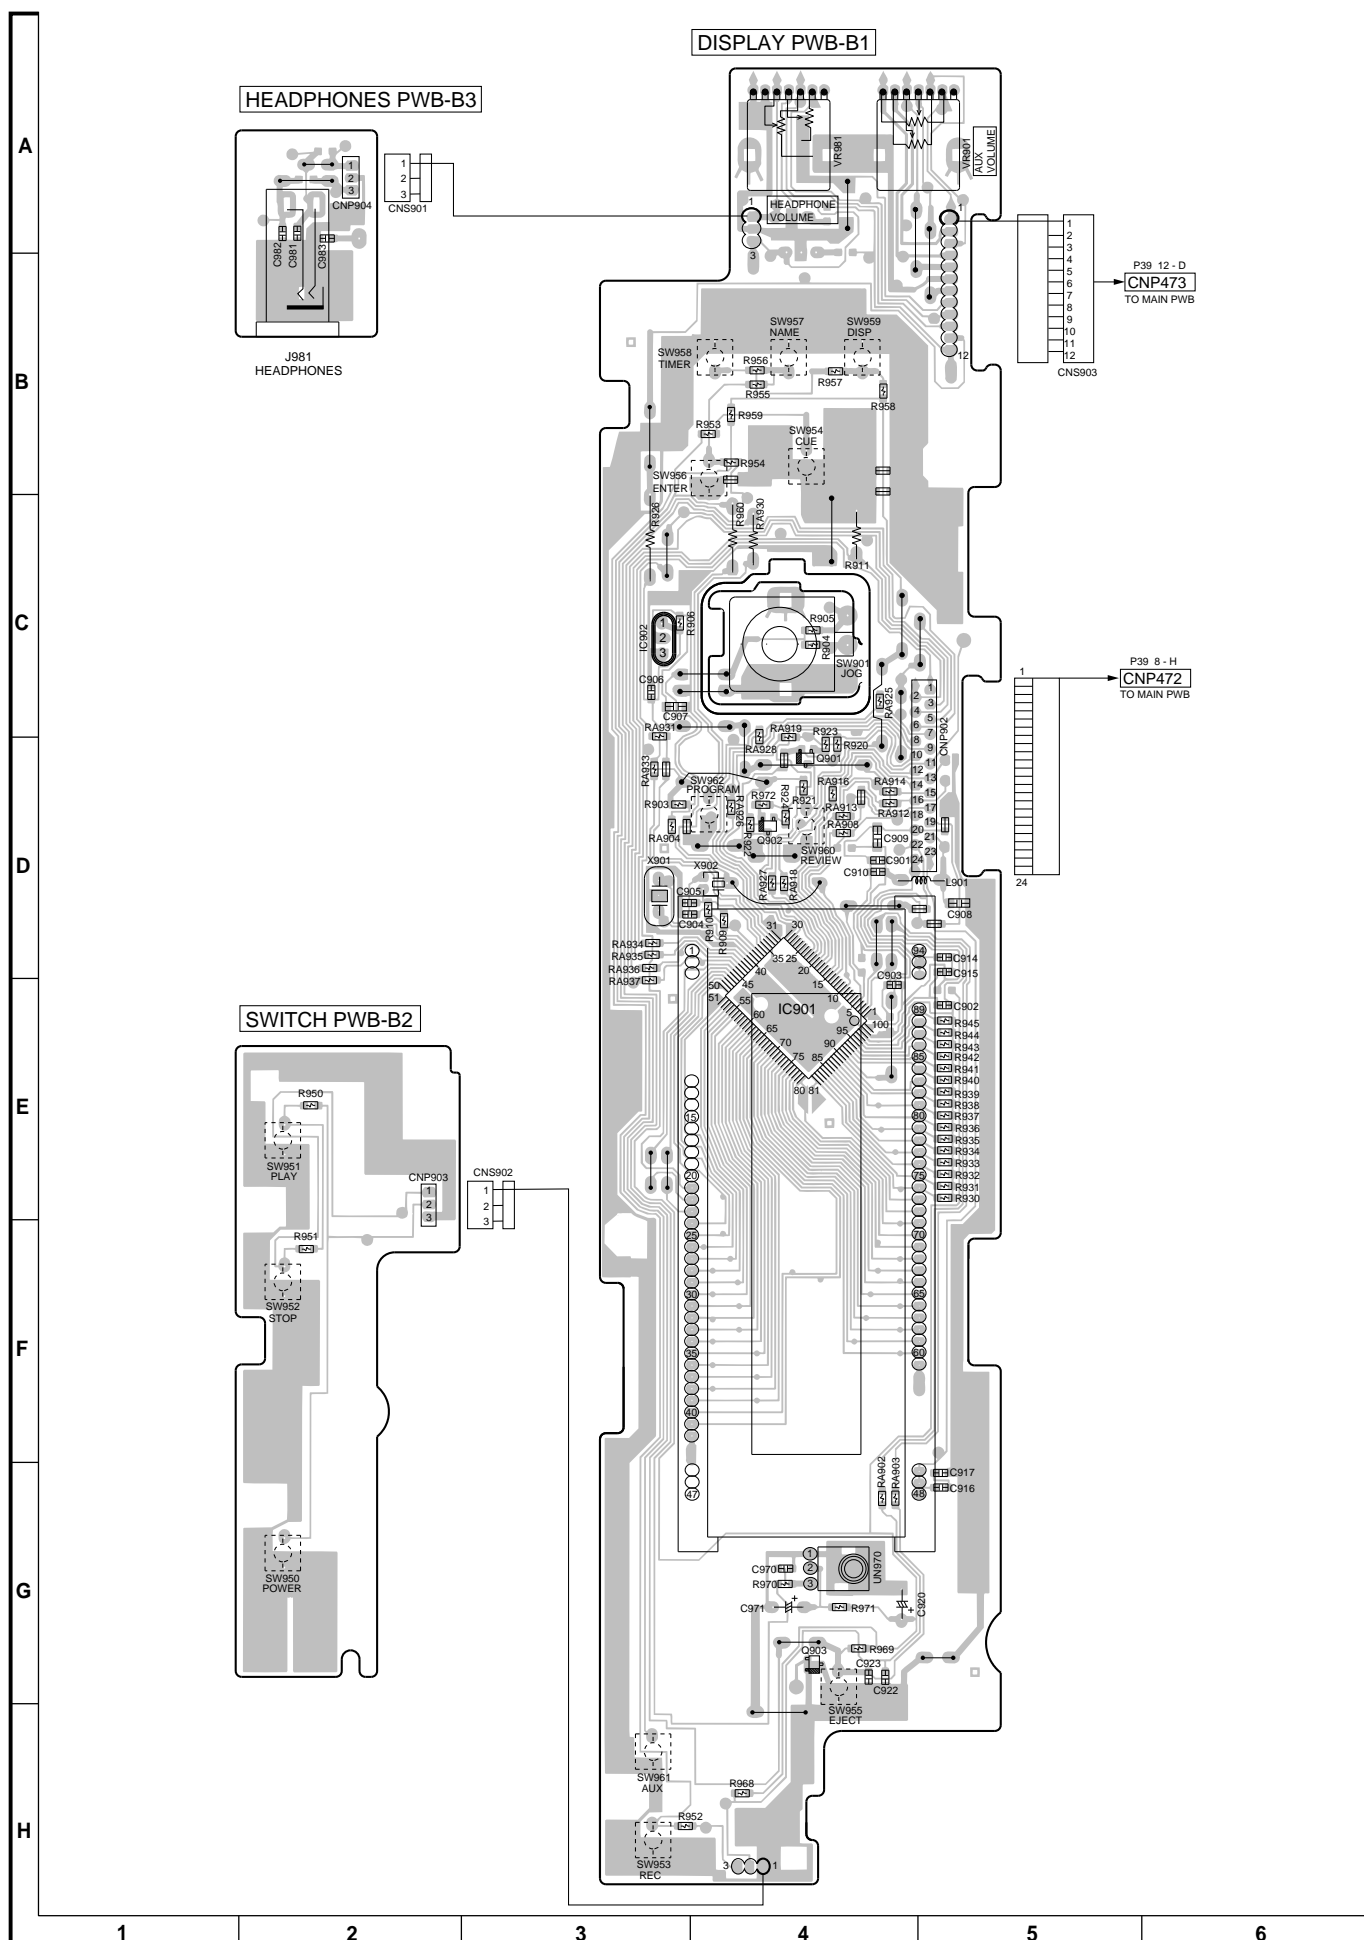

**Figure 39 WIRING SIDE OF P.W.BOARD (4/6)**





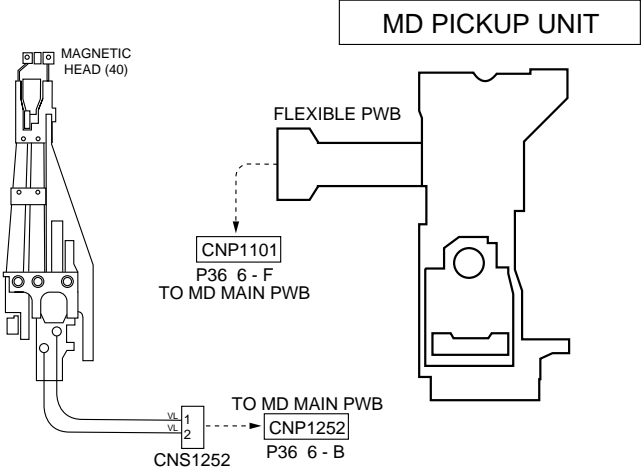
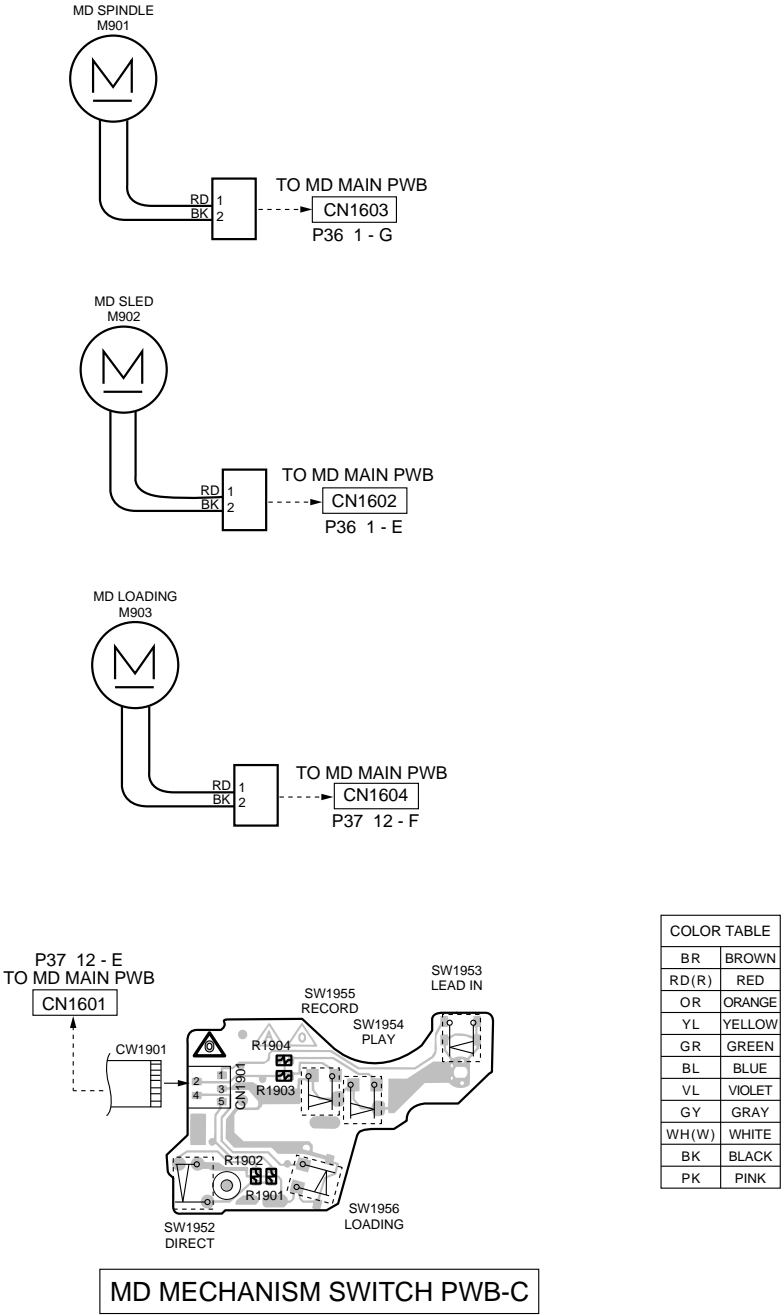


Figure 41 WIRING SIDE OF P.W.BOARD (6/6)

## VOLTAGE (MD MAIN PWB)

Q1801	
PIN NO.	VOLTAGE
E	5V
C	5V
B	43V

Q1802	
PIN NO.	VOLTAGE
E	0V
C	0V
B	0.15V

Q1803	
PIN NO.	VOLTAGE
E	0V
C	0V
B	3.1V

Q1807	
PIN NO.	VOLTAGE
E	3.95V
C	3.2V
B	3.3V

Q1820	
PIN NO.	VOLTAGE
E	3.2V
C	3.18V
B	2.4V

Q1821	
PIN NO.	VOLTAGE
E	0V
C	0V
B	3.08V

Q1822	
PIN NO.	VOLTAGE
E	0V
C	0V
B	0.1V

Q1451	
PIN NO.	VOLTAGE
E	0V
C	3.18V
B	0.1V

Q1401	
PIN NO.	VOLTAGE
E	3.2V
C	3.2V
B	0V

Q1402	
PIN NO.	VOLTAGE
E	0V
C	0V
B	2.3V

Q1403	
PIN NO.	VOLTAGE
E	3.18V
C	0V
B	3.15V

Q1404	
PIN NO.	VOLTAGE
E	0V
C	3.15V
B	2.1V

Q1601	
PIN NO.	VOLTAGE
E	5.45V
C	4.4V
B	4.8V

IC1801	
PIN NO.	VOLTAGE
1	0V
2	44V
3	3.2V
4	3.1V
5	0V

IC1907	
PIN NO.	VOLTAGE
1	2.8V
2	2.6V
3	4.9V
4	2.6V
5	1.6V
6	0V
7	0V
8	4.9V
9	0V
10	2.2V
11	5V
12	5V
13	0V
14	3.2V
15	3.1V
16	5V

IC1990	
PIN NO.	VOLTAGE
1	1.45V
2	1.7V
3	1.45V
4	1.7V
5	1.45V
6	1.7V
7	0V
8	1.7V
9	1.45V
10	1.37V
11	1.7V
12	1.37V
13	1.7V
14	3.17V

IC1101	
PIN NO.	VOLTAGE
1	0.7V
2	0.7V
3	0.7V
4	0.7V
5	1.6V
6	1.6V
7	0.7V
8	1.6V
9	1.6V
10	1.6V
11	1.6V
12	1.6V
13	3.2V
14	3.2V
15	0V
16	Groove:3.2V Pc:0V
17	Low reflection:0V High reflection:3.2V
18	0V
19	0V
20	1.45V
21	3.2V
22	0V
23	0V
24	3.2V
25	1.78V
26	1.78V
27	1.35V
28	1.36V
29	1.6V
30	1.6V
31	1.6V
32	1.6V
33	1.6V
34	0V
35	1.6V
36	1.6V
37	0.3V
38	1.6V
39	1.6V
40	1.6V
41	1.6V
42	3.2V
43	0V
44	1V
45	1.6V
46	1.6V
47	0.7V
48	0.7V

IC1202	
PIN NO.	VOLTAGE
1	1.1V
2	1.1V
3	3V
4	2V
5	1.5V
6	1.8V
7	0.8V
8	2.4V
9	1.2V
10	3.2V
11	1.2V
12	2.5V
13	1.3V
14	1.7V
15	1.3V
16	2.2V
17	2.4V
18	1.2V
19	1.1V
20	0V

IC1201	
PIN NO.	VOLTAGE
1	1.48V
2	0V
3	1.6V
4	0V
5	1.36V
6	1.77V
7	1.6V
8	1.36V
9	1.77V
10	1.25V
11	1.6V
12	3.17V
13	0V
14	0V
15	0V
16	0V
17	1.45V
18	1.56V
19	1.62V
20	1.7V
21	1.5V
22	1.63V
23	1.53V
24	1.8V
25	1.4V
26	1.2V
27	2.5V
28	0.8V
29	1.8V
30	1.4V
31	3.2V
32	1.2V
33	2.5V
34	1.3V
35	1.7V
36	1.3V
37	2.2V
38	0V
39	2.4V
40	1.2V
41	1.1V
42	1.5V
43	2V
44	3V
45	1.1V
46	1.1V
47	0V
48	3V
49	1.56V
50	PLAY:0V REC:1.5V
51	58V
52	0V
53	0V
54	58V
55	0V
56	0V
57	3.2V
58	3.2V
59	3.2V
60	3.17V
61	0V
62	3.17V
63	0V
64	1.3V
65	1.3V
66	DC input:1.58V Other:0V
67	1.58V
68	3.17V
69	0V
70	1.5V
71	1.55V
72	1.5V
73	0V
74	1V
75	1.55V
76	1.8V
77	1.56V
78	0V
79	0V
80	3.16V
81	0V
82	0V
83	0V
84	1.5V
85	1.5V
86	3.1V
87	3.17V
88	0V
89	3.17V
90	0.5V
91	0.6V
92	0.4V
93	0.4V
94	0.4V
95	0.9V
96	0.7V
97	0.8V
98	3.16V
99	3.15V
100	0V

IC1401	
PIN NO.	VOLTAGE
1	0V
2	0V
3	0.2V
4	3.2V
5	0V
6	0V
7	3.1V
8	0V
9	0V
10	0V
11	0V
12	3.18V
13	144V
14	0V
15	1.5V
16	3.2V
17	3.2V
18	3.1V
19	0V
20	0V
21	0V
22	3.15V
23	3.2V
24	0V
25	3.2V
26	3.2V
27	0V
28	0V
29	2.2V
30	3.2V
31	0V
32	3.2V
33	0V
34	0.8V
35	2.2V
36	0.2V
37	2.3V
38	0V
39	PLAY:3.15V REC:0V
40	0V
41	0V
42	0V
43	3.2V
44	0V
45	0V
46	3.15V
47	0V
48	0V
49	0V
50	0V
51	0V
52	0V
53	0V
54	0V
55	0V
56	0V
57	0V
58	0V
59	3.2V
60	0V
61	3.2V
62	3.2V
63	0V
64	0V
65	3.2V
66	3.2V
67	3.2V
68	0V
69	0V
70	3.1V
71	0V
72	3.1V
73	3.2V
74	0V
75	3.2V
76	3.2V
77	0V
78	0V
79	0V
80	3.15V
81	0V
82	0V
83	3.2V
84	3.2V
85	3.2V
86	3.2V
87	3.2V
88	3.2V
89	1.7V
90	1.8V
91	1.8V
92	1.4V
93	Low reflection:2.2V High reflection:0.1V
94	3.2V
95	3.2V
96	0V
97	2V
98	3.2V
99	3.2V
100	0V

IC1601	
PIN NO.	VOLTAGE
1	1.25V
2	4V
3	1.5V
4	5.5V
5	5.5V
6	1.5V
7	5V
8	2.7V
9	2.8V
10	0V
11	0V
12	2.7V
13	2.76V
14	1.6V
15	1.6V
16	1.6V
17	3.15V
18	3.15V
19	0V
20	1.6V
21	1.6V
22	1.6V
23	1.23V
24	1.23V
25	1.6V
26	1.6V
27	1.62V
28	2.7V
29	2.8V
30	2.7V
31	2.7V
32	0V
33	0V
34	3.0V
35	2.4V
36	0V
37	1.64V
38	5.5V
39	5.5V
40	1.64V
41	1.68V
42	1.68V

IC1251	
PIN NO.	VOLTAGE
1	2.6V
2	2.6V
3	0.1V
4	2.6V
5	2.6V
6	0.1V
7	0V
8	1.56V
9	0.1V
10	2.6V
11	1.56V
12	0.1V
13	2.6V
14	5.2V

Q1251	
PIN NO.	VOLTAGE
D	4.4V
S	1.4V
G	2.6V

Q1252	
PIN NO.	VOLTAGE
D	4.4V
S	1.4V
G	2.6V

Q1253	
PIN NO.	VOLTAGE
D	15V
S	0V
G	2.6V

Q1254	
PIN NO.	VOLTAGE
D	15V
S	0V
G	2.6V

IC1916	
PIN NO.	VOLTAGE
1	1.58V
2	3.2V
3	1.58V
4	3.2V
5	DC input:2.2V Other:0V
6	DC input:1.58V Other:0V
7	1.55V
8	2.2V
9	3.2V
10	3.2V
11	97A:3.2V 97B:1V
12	97A:3.2V 97A:0.9V


IC1402	
PIN NO.	VOLTAGE
1	0V
2	3.2V
3	3.2V
4	3.2V
5	0V
6	0V
7	0V
8	0V

IC1906	
PIN NO.	VOLTAGE
1	5.5V
2	1.6V
3	0V
4	2.8V
5	5.5V


## NOTES ON SCHEMATIC DIAGRAM

- **Resistor:**  
To differentiate the units of resistors, such symbol as K and M are used: the symbol K means 1000 ohm and the symbol M means 1000 kohm and the resistor without any symbol is ohm-type resistor. Besides, the one with "Fusible" is a fuse type.
- **Capacitor:**  
To indicate the unit of capacitor, a symbol P is used: this symbol P means micro-micro-farad and the unit of the capacitor without such a symbol is microfarad. As to electrolytic capacitor, the expression "capacitance/withstand voltage" is used.  
(CH), (TH), (RH), (UJ): Temperature compensation  
(ML): Mylar type  
(P.P.): Polypropylene type
- Schematic diagram and Wiring Side of P.W.Board for this model are subject to change for improvement without prior notice.
- The indicated voltage in each section is the one measured by Digital Multimeter between such a section and the chassis with no signal given.
  1. In the tuner section,  
( ) indicates AM  
< > indicates FM stereo
  2. In the main section, a tape is being played back.
  3. In the deck section, a tape is being played back.  
( ) indicates the record state.
  4. In the power section, a tape is being played back.
  5. In the CD section, the CD is stopped.
- Parts marked with "△" (□ = □) are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.


REF. NO	DESCRIPTION	POSITION
SW501	RESET	ON—OFF
SW901	JOG	ON—OFF
SW950	POWER	ON—OFF
SW951	PLAY	ON—OFF
SW952	STOP	ON—OFF
SW953	PEC	ON—OFF
SW954	CUE	ON—OFF
SW955	EJECT	ON—OFF
SW956	ENTER	ON—OFF
SW957	NAME	ON—OFF
SW958	TIMER	ON—OFF
SW959	DISP	ON—OFF
SW960	REVIEW	ON—OFF
SW961	AUX	ON—OFF
SW962	PROGRAM	ON—OFF
SW1952	DIRECT	ON—OFF
SW1953	LEAD IN	ON—OFF
SW1954	PLAY	ON—OFF
SW1955	REC	ON—OFF
SW1956	LOADING	ON—OFF

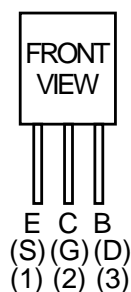


2SB562 C  
2SC2878 B  
2SD468 C  
KRC102 M  
KTA1266 GR

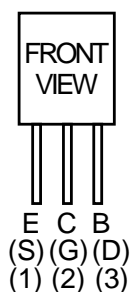


2SD2012 Y

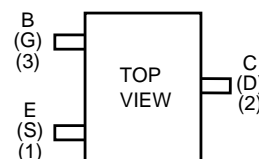

2SC2412 KR  
2SK2909  
RNC1404  
RNC1406  
RNC1407

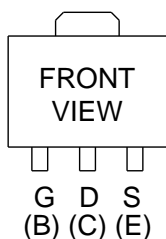

2SA1314C  
2SK1473

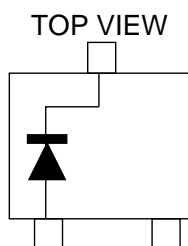


SB0209CP


Figure 43 TYPES OF TRANSISTOR AND LED

## WAVEFORMS OF MD CIRCUIT


PLAY STATE

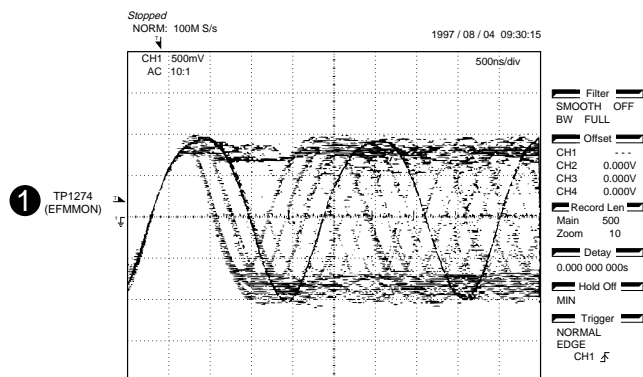


PIT PLAY

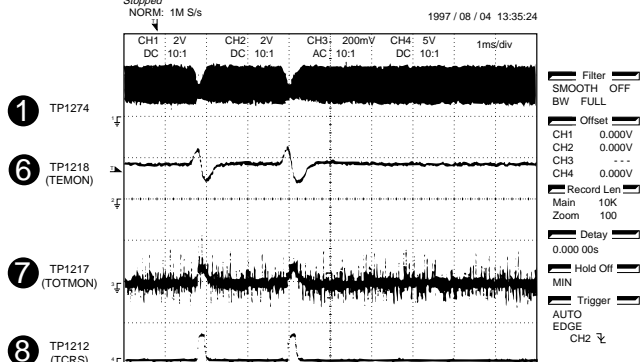


GROOVE PLAY

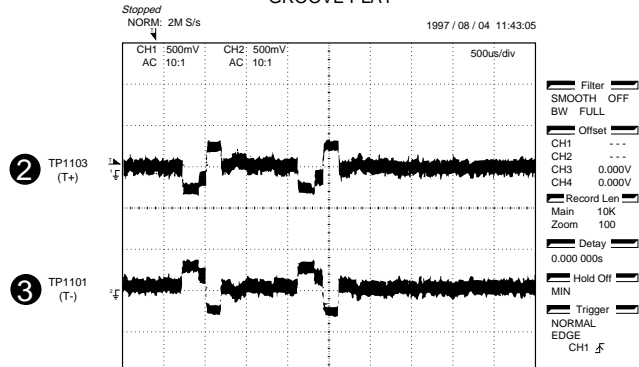


GROOVE PLAY

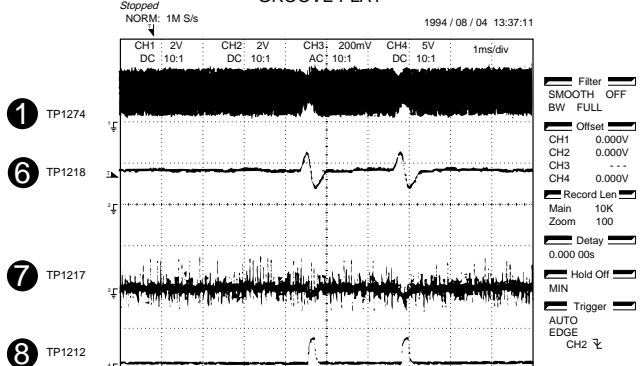


PIT PLAY

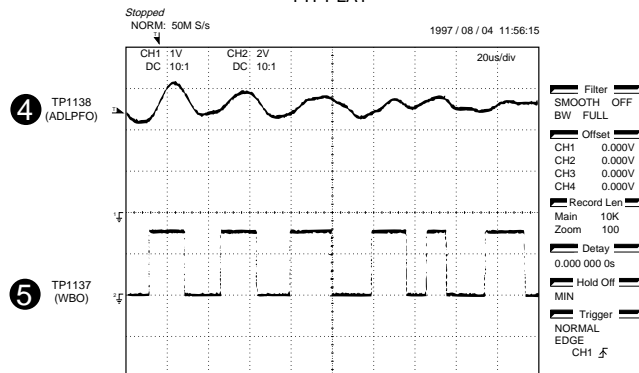


POWER OFF→STAND-BY







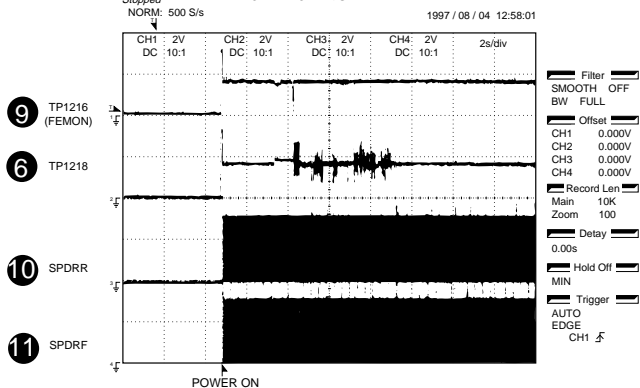


GROOVE PLAY

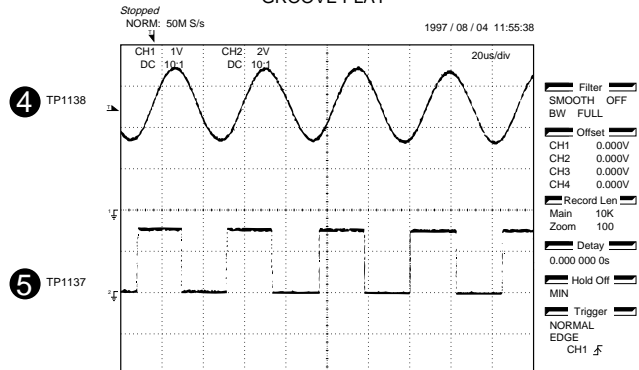

POWER OFF→STAND-BY

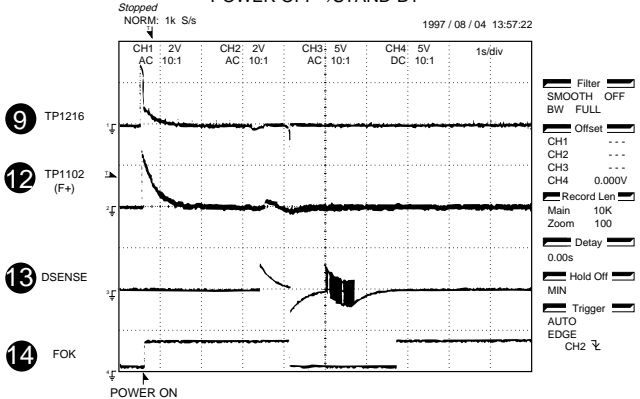

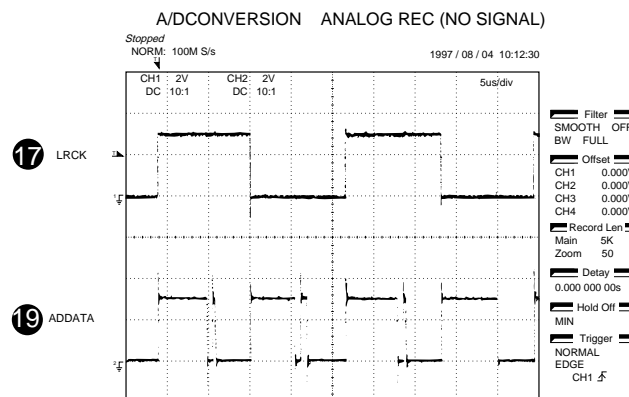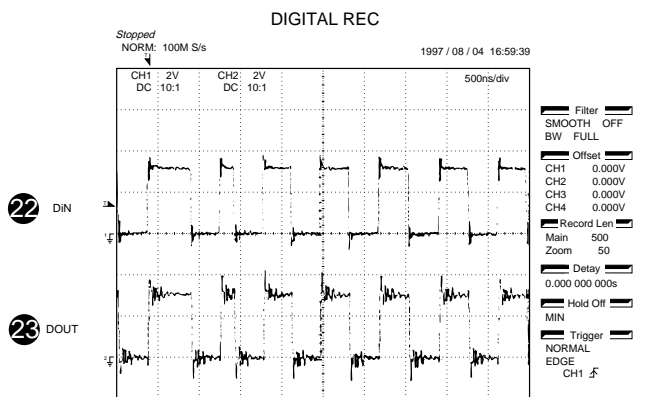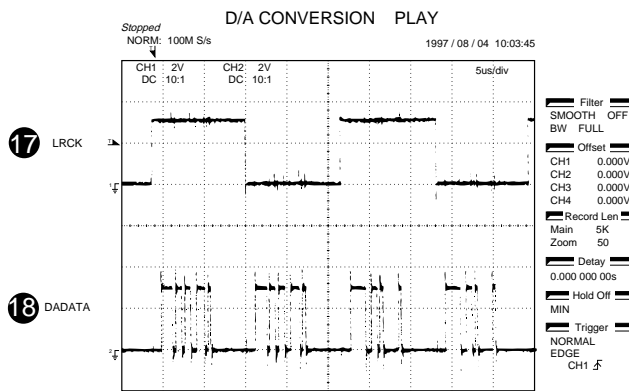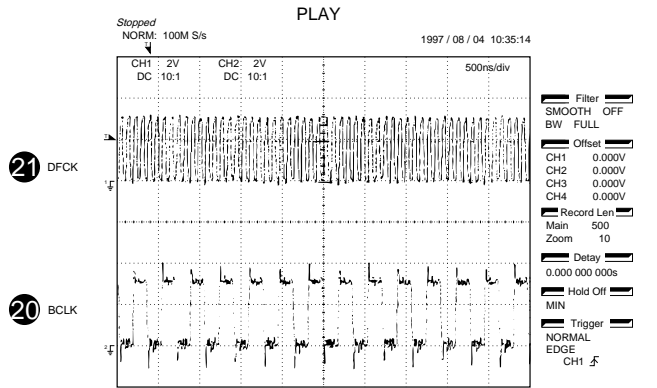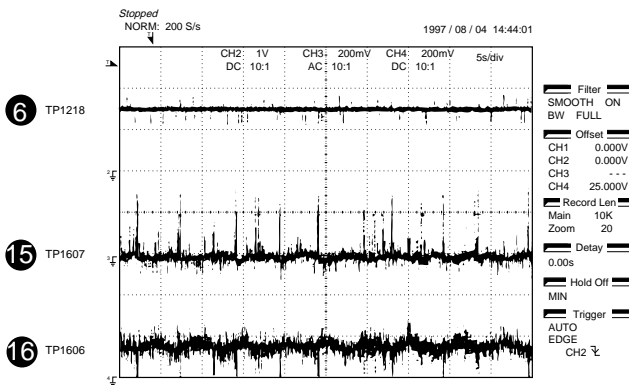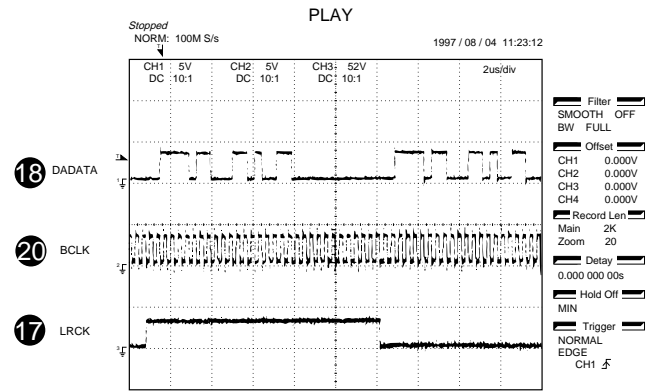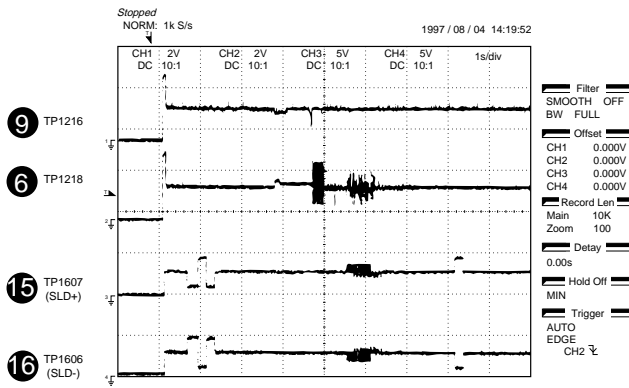


## TROUBLE SHOOTING

### When MD fails operate


If the objective lens of optical pickup is contaminated, MD may fail to operate. At first, clean the objective lens to check playback operation. If MD fails persistently to operate, perform checks as follows.

If dust or foreign substance is accumulated on the pickup lens, playback is disturbed and indication of TOC (content of tracks) may be disabled. Before adjusting check that the lens is clean. If the lens is contaminated, treat it as follows.


Turn off power supply, impregnate the lens cleaning paper with a small quantity of isopropyl alcohol, and gently wipe the lens with it with due care so that the lens is not damaged. At this time do not touch the lens directly with your finger.

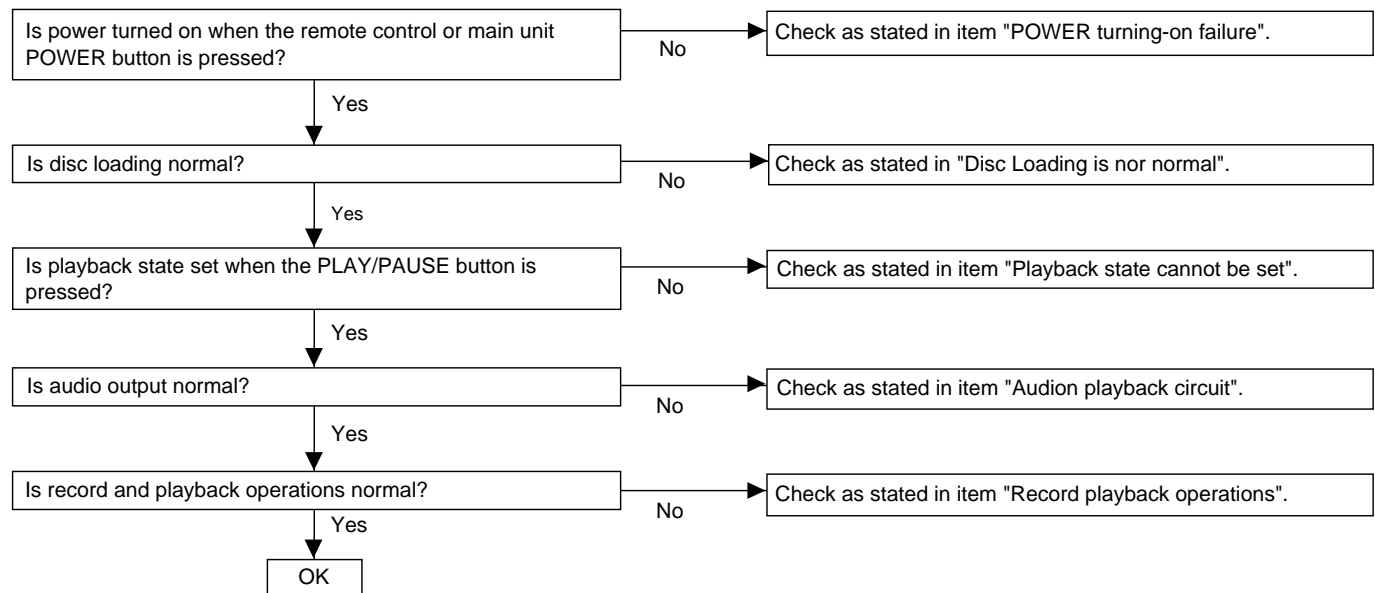


#### • Power turning-on failure.

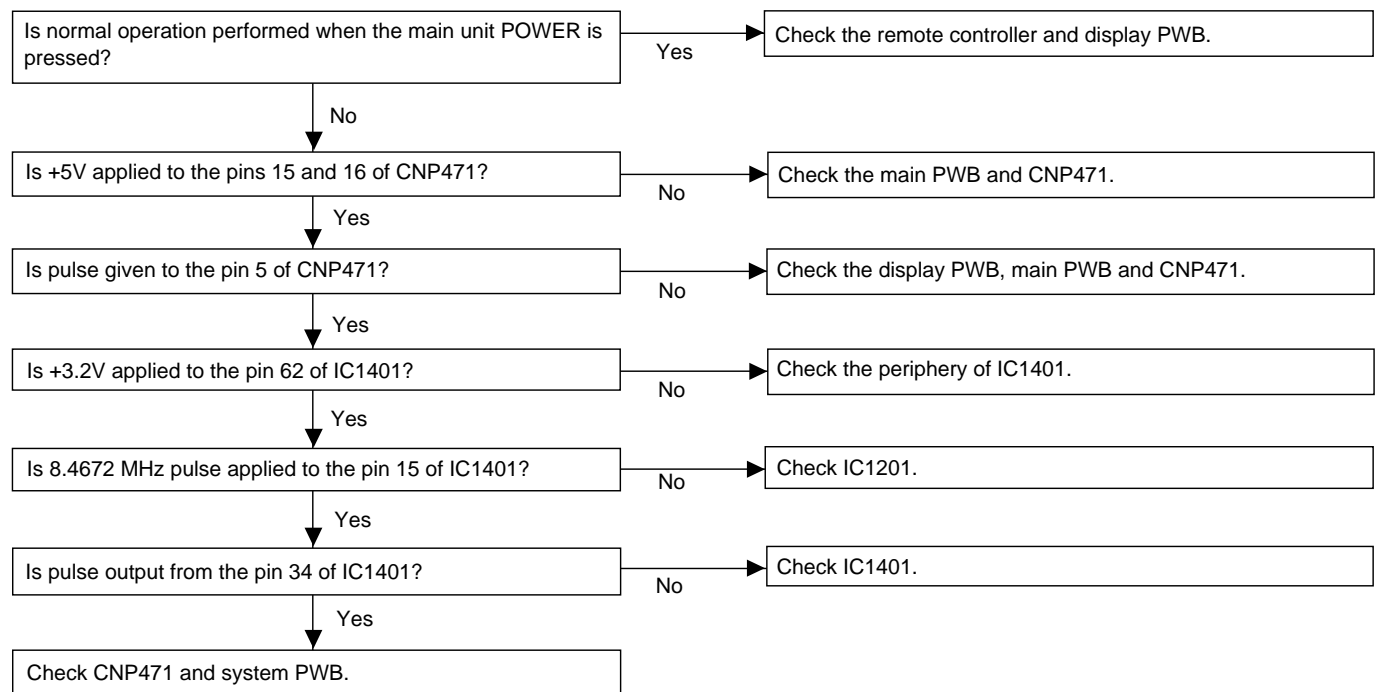

• **Disc loading is not normal.**

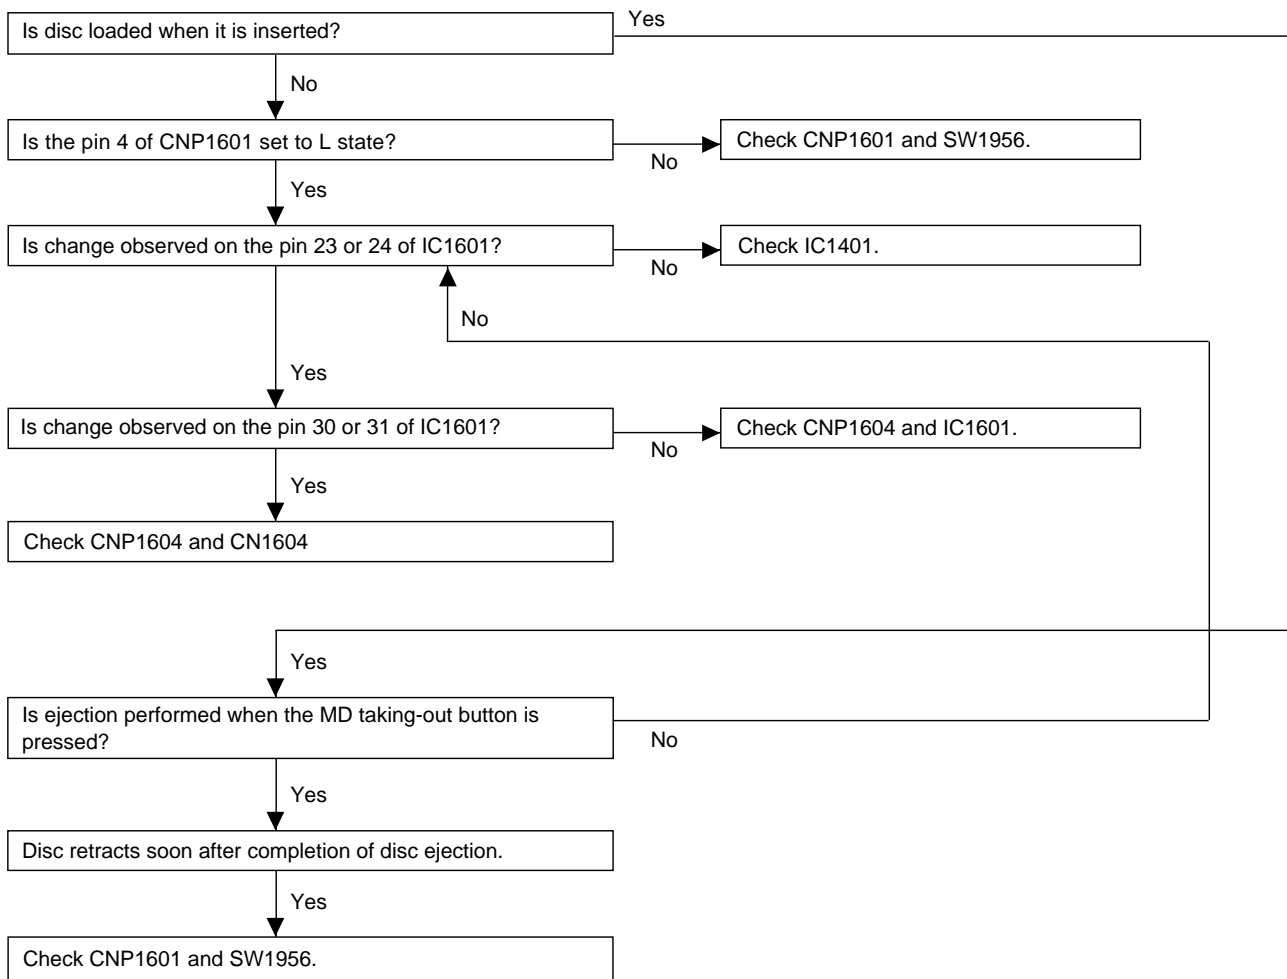


• **Playback state cannot be set.**

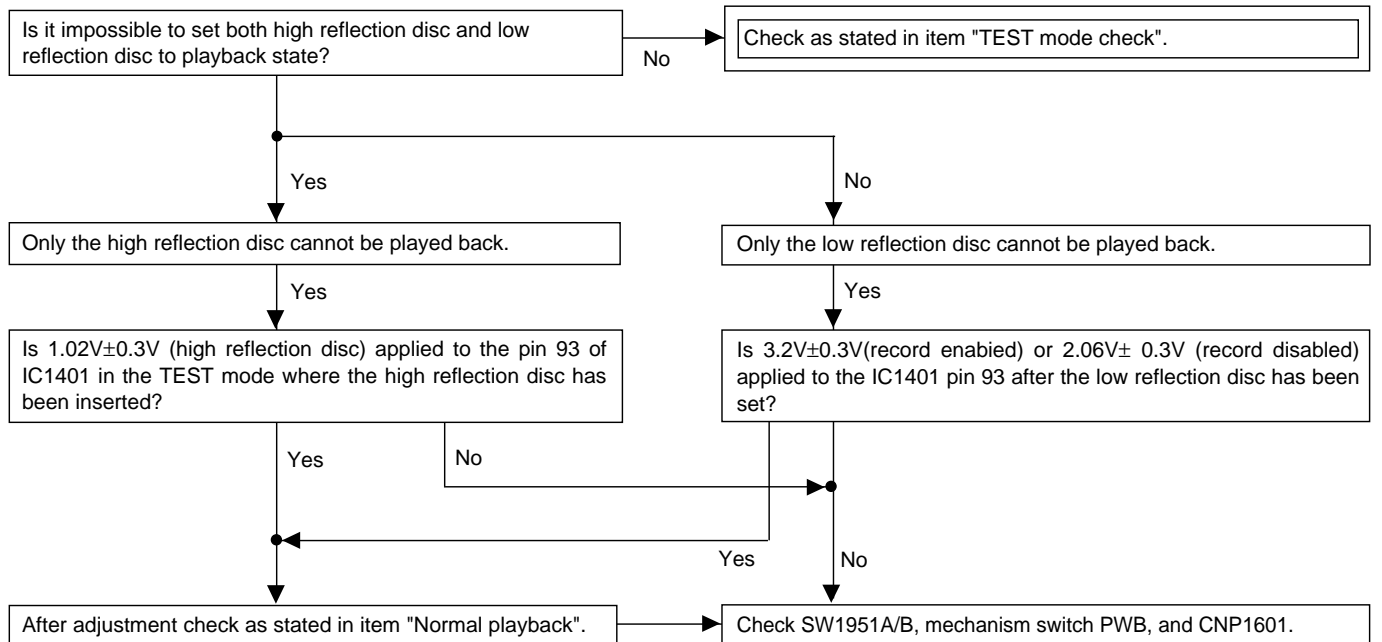

## MD-R2


### • Normal playback

When it has been confirmed that EEPROM value is normal in the TEST mode

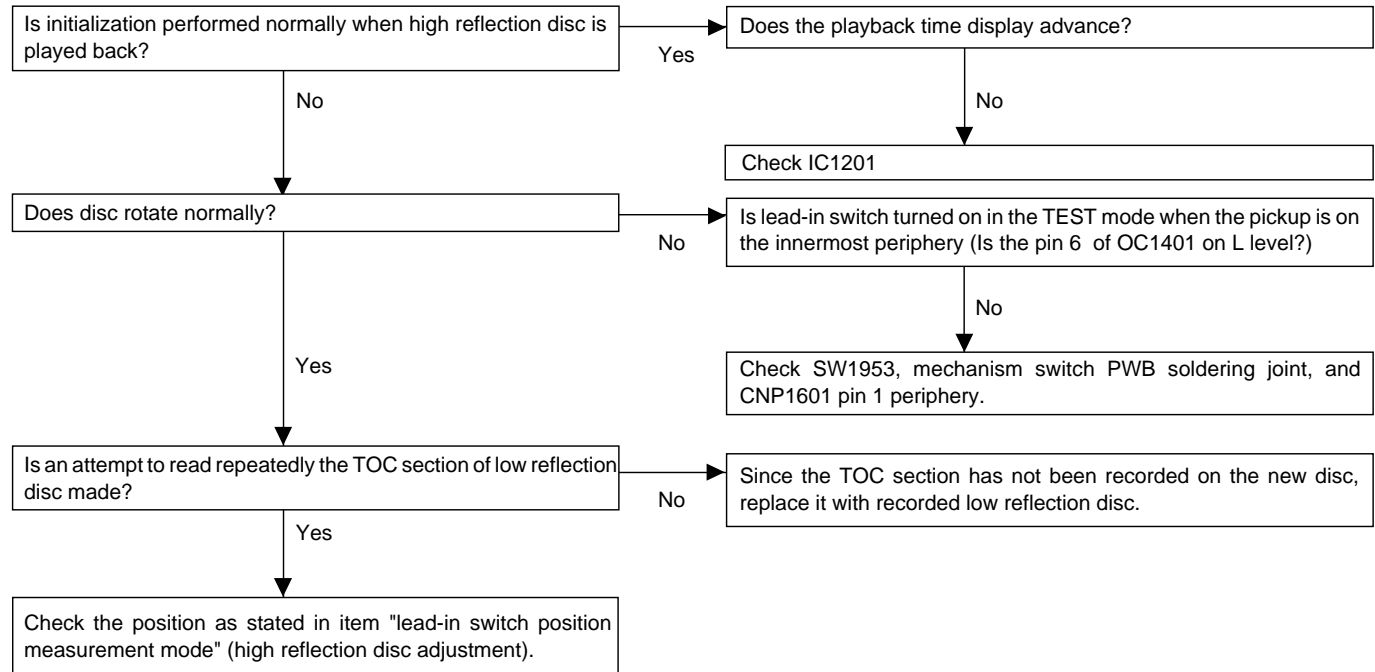

### • Audio playback circuit


When sound is not output although the playback time display advances during playback in the normal mode.

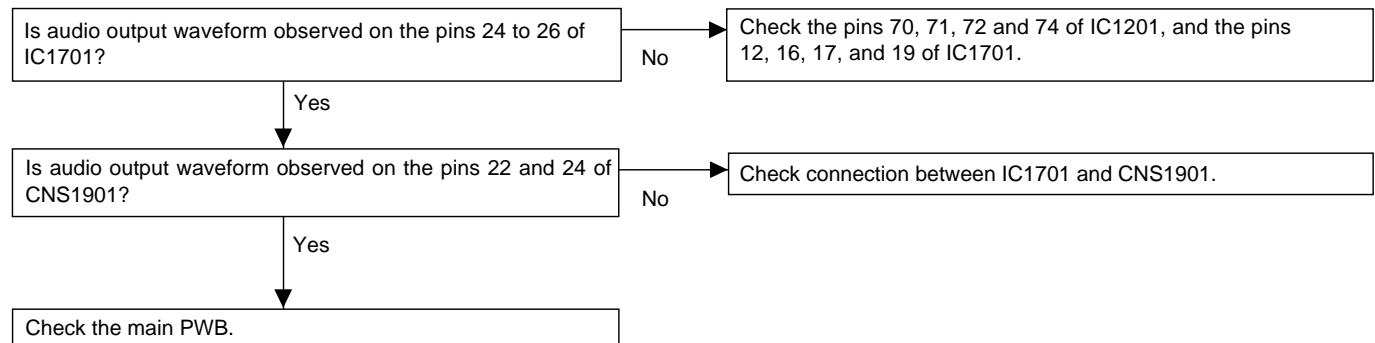




### • Record and playback operation

Insert the low reflection disc, and after verifying the audio output in the normal mode playback set the record/playback TEST mode

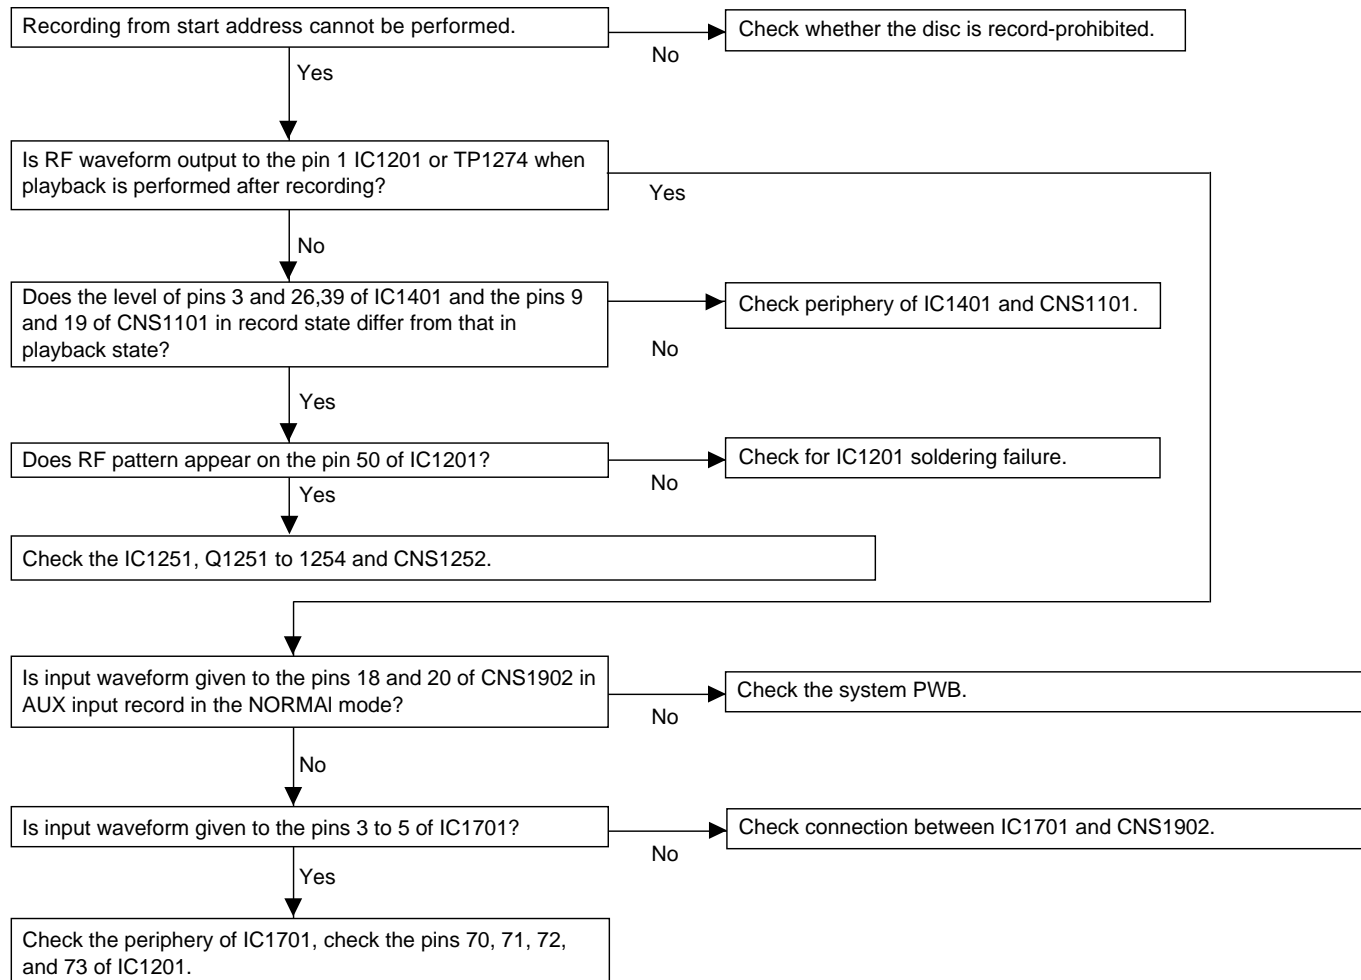


### • Focus servo failure

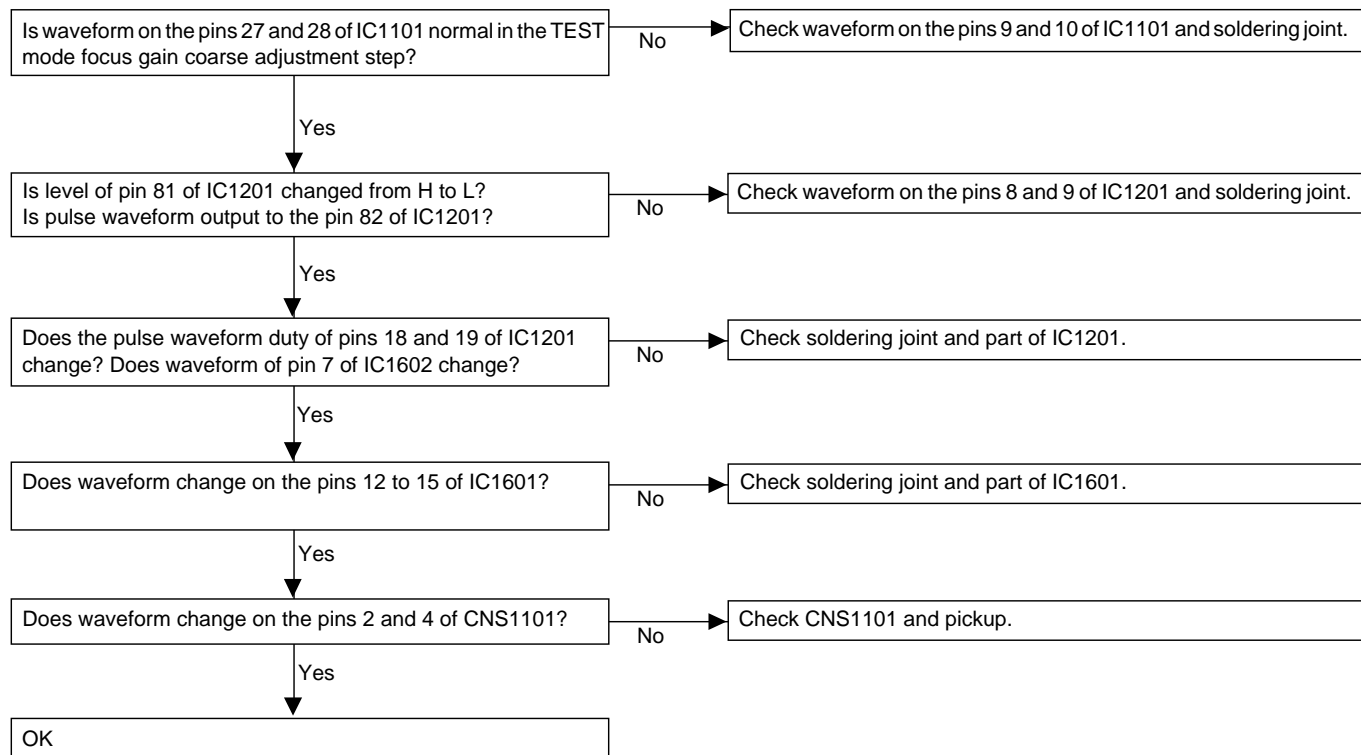


## MD-R2


### • Disc motor fails to run

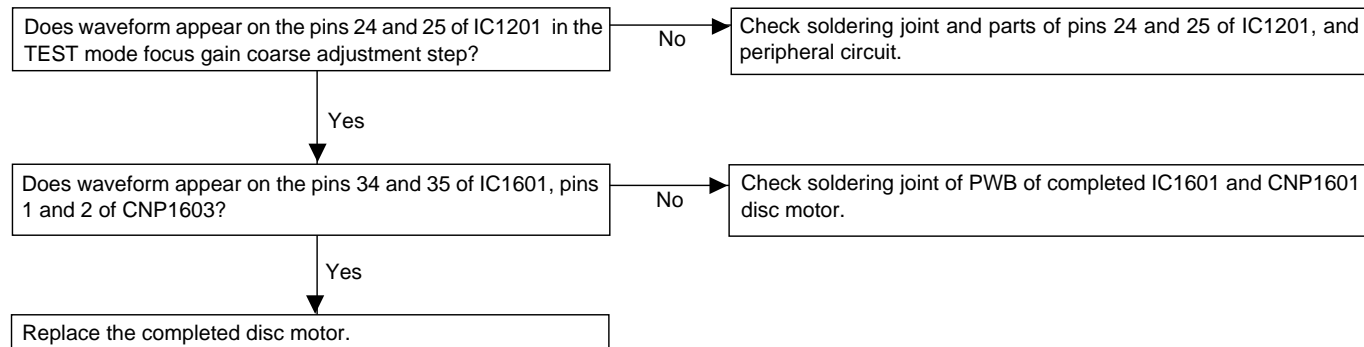

### • Tracking servo failure

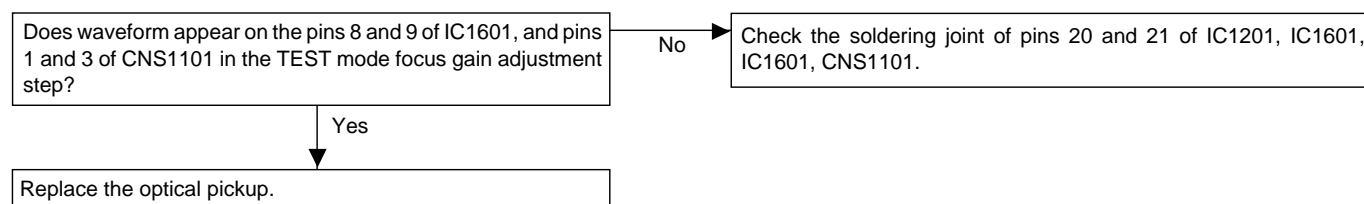

### • Slide servo failure

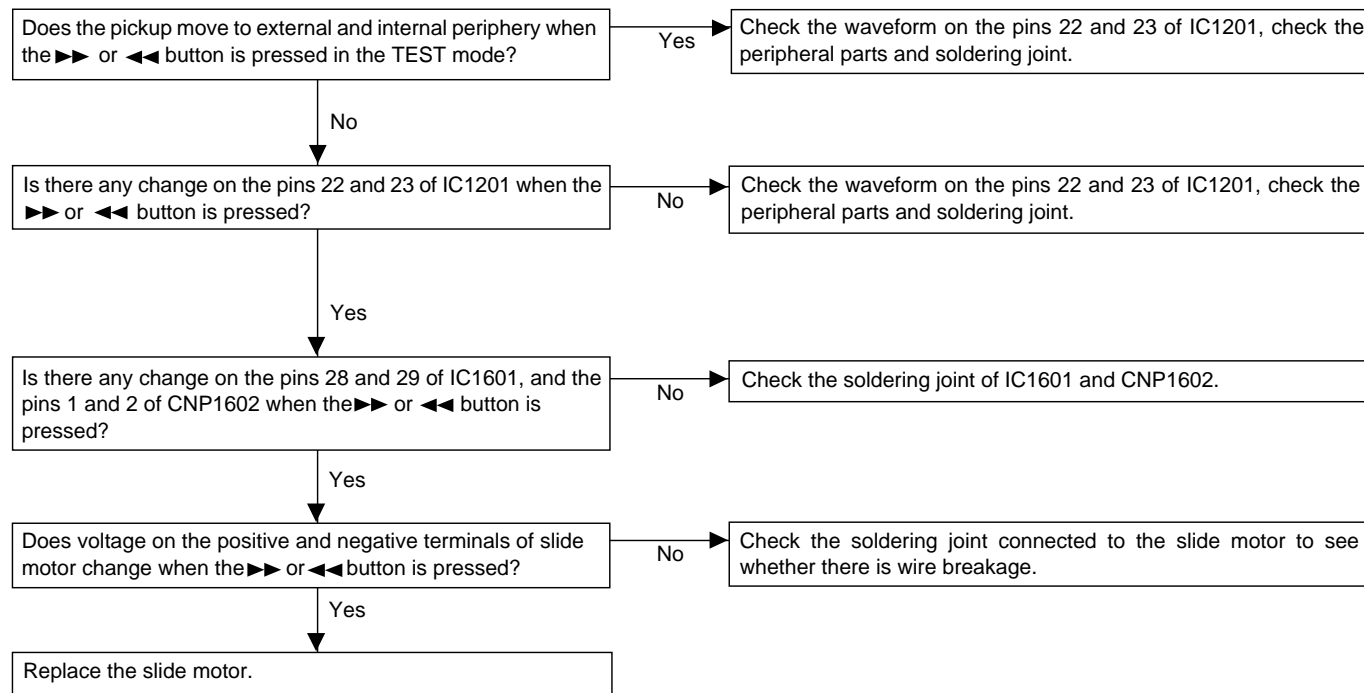

## FUNCTION TABLE OF IC

### IC901 RH-iX0237AFZZ: System Control Microcomputer (IX0237AW) (1/2)

Pin No.	Port Name	Terminal Name	Input/Output	Function
1*	P77/AN7	KEY1	Output	Not used
2	P76/AN6	KEY2	Input	Key entry
3	P75/AN5	KEY3	Input	Key entry
4*	P74/AN4	—	Output	Not used
5	P73/AN3	INI	Input	Initial setting entry
6	P72/AN2	JOG_AD	Input	Jog dial entry
7*,8*	P71/AN1,P70/AN0	—	Output	Not used
9*	PB3	—	Output	Not used
10	PB2/DA	DIG SEL1	Output	Digital signal selector selection signal
11*	P57/SRDY3/AN15	DIG SEL2	Output	Not used
12*	P56/SCLK3/AN14	—	Output	Not used
13*	P55/SOUT3/AN13	—	Output	Not used
14	P54/SIN3/AN12	DAC_MODE	Output	Externally provided DAC/ADC serial interface mode signal
15	P52/SRDY2/AN11	DAC_CLK/EX	Output	Externally provided DAC/ADC serial interface clock signal
16	P52/SCLK2/AN10	DAC_DATA/EX	Output	Externally provided DAC/ADC serial interface clock signal
17*	P51/SOUT2/AN9	—	Output	Not used
18	P50/SIN2/AN8	DFS0/DFS1	Input	EMPHASIS information from MD
19	P67/SRDY1/CS/ SCLK12	DSTRB	Input	MD serial interface strobe signal
20	P66/SCLK1	DSCK	Output	MD serial interface clock signal
21	P65/SOUT1	K-DATA	Output	MD serial interface transmission signal
22	P64/SIN1	MD-DATA	Input	MD serial interface reception signal
23	P63/CNTR1	MD-LO/EJ	Output	MD loading power voltage selection signal
24*	P62/CNTR0	—	Output	Not used
25*	P61/PWM	—	Output	Not used
26*	P60	—	Output	Not used
27*	P47/T3OUT	—	Output	Not used
28*	P46/T1OUT	—	Output	Not used
29	P45/INT1/2CR	P IN	Input	Power failure detection
30*	P44/INT4	P.CNT	Output	Power control
31	P41	P-OUT	Output	MD power failure detection signal
32	P42/INT2	RX-IN	Input	Remote control loght reception signal
33	P41	P-MUTE	Output	Audio mute control signal
34	P40/INT0	—	Input	GND
35	RESET	RESET	Input	RESET signal entry
36	PB1/Xcin	Xcin	Input	Sub clock IN connection (32.7k)
37	PB0/Xcout	Xcout	Output	Sub clock OUT connection (32.7k)
38	Xin	Xin	Input	Main clock IN connection (8M)
39	Xout	Xout	Output	Main clock OUT connection (8M)
40	VSS	VSS	Input	GND
41	P27	SERCH	Output	CD to MD search monitor signal
42	P26	LOAD	Input	MD loading detection
43	P25	S-ID	Output	CD to MD start ID signal
44	P24	MD RESET	Output	RESET signal to MD
45-54	P23/DIG19- P12/DIG10	UDIG0-UDIG9	Output	Digit for FL drive
55,56	P11/SEG41/DIG9, P10/SEG40/DIG8	UDIG10,UDIG11	Output	Digit for FL drive
57-60	P07/SEG39/DIG7- P04/SEG36/DIG4	UDIG12-UDIG15	Output	Digit for FL drive
61-64	P05/SEG35/DIG3- P00/SEG33/DIG0	S35-S32	Output	Segment for FL drive
65-72	P37/SEG31- P30/SEG25	S31-S25	Output	Segment for FL drive

In this unit, the terminal with asterisk mark (\*) is (open) terminal which is not connected to the outside.

## IC901 RH-iX0237AFZZ: System Control Microcomputer (IX0237AW) (2/2)

Pin No.	Port Name	Terminal Name	Input/Output	Function
72-80	P97/SEG23- P90/SEG16	S0-S8	Output	Segment for FL drive
81-88	P87/SEG15- P80/SEG8	S9-S16	Output	Segment for FL drive
89,90	PA7/SEG7, PA6/SEG6	S17,S18	Output	Segment for FL drive
91	VCC	VCC	Input	+5V
92-97	PA5/SEG5- PA0/SEG0	S19-S24	Output	Segment for FL drive
98	VEE	VEE	Input	-30V
99	AVSS	AVSS	Input	GND
100	VREF	VREF	Input	+5V

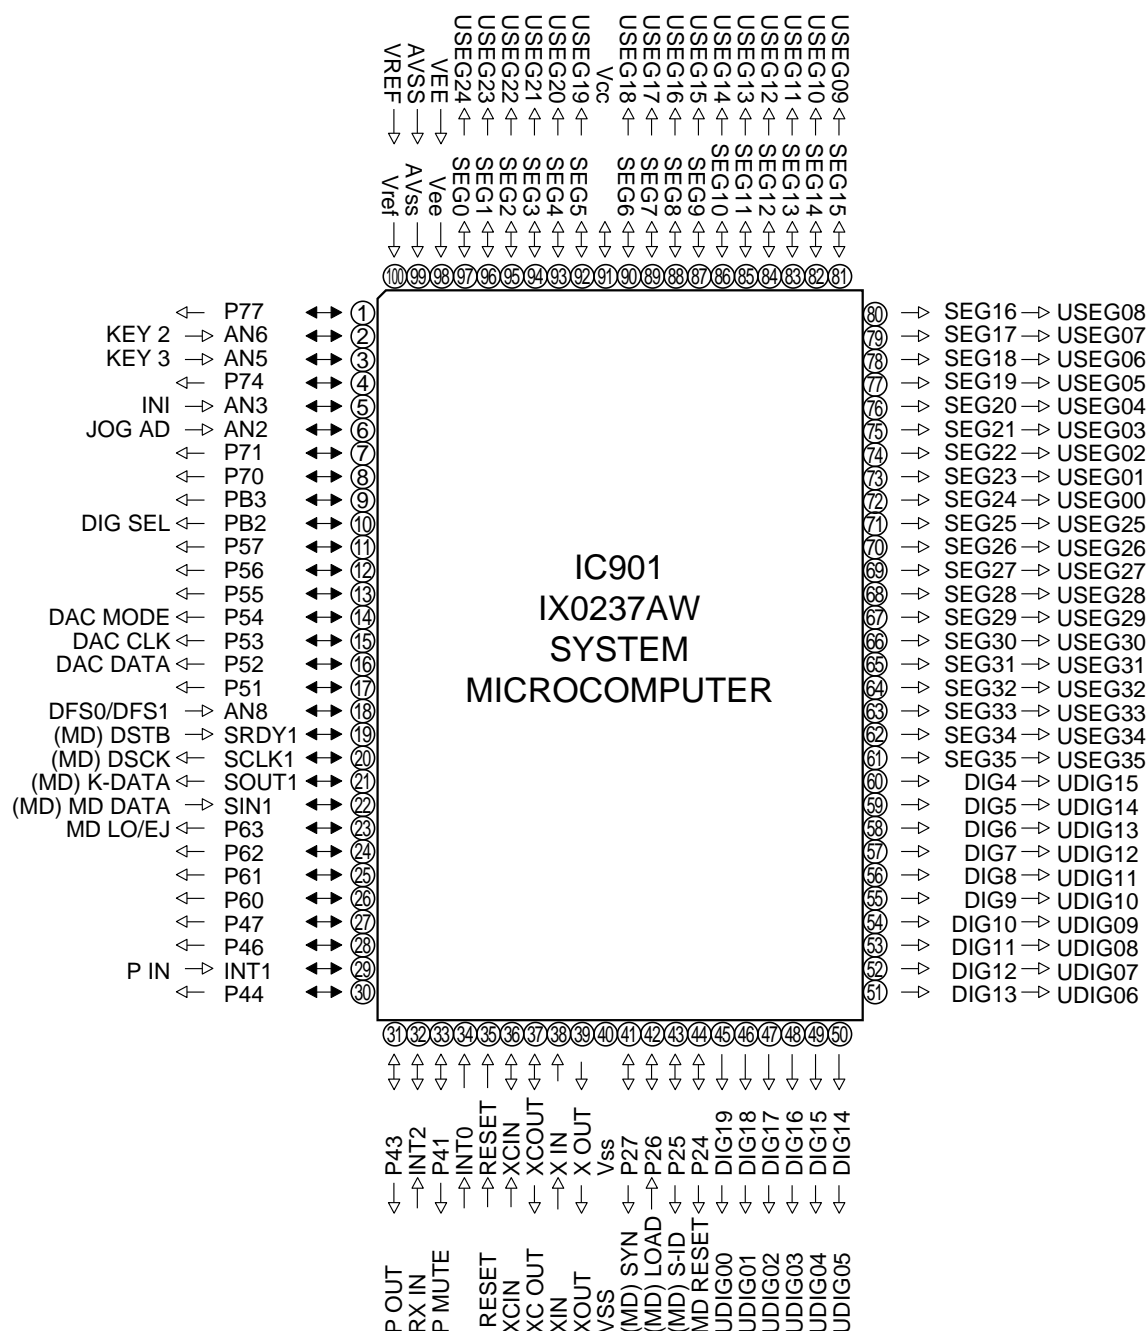


Figure 52 BLOCK DIAGRAM OF IC

## IC1101 VHiiR3R55//-1:RF Signal Control (IR3R55)

Pin No.	Terminal Name	Function
1	RF1	RF signal input terminal 1 Input of RF signal output of pickup
2	RF2	RF signal input terminal 2 Input of RF signal output of pickup
3	RF3	RF signal input terminal 3 Input of RF signal output of pickup
4	RF4	RF signal input terminal 4 Input of RF signal output of pickup
5	REFI	Reference voltage amp. input terminal
6	REFO	Reference voltage amp. output terminal
7	RFADD	RF1 to 4 resistance addition output terminal
8	TCGI	Track cross detection signal amp. input terminal for groove
9	AIN	Servo signal amp. (focus servo system) inversion input terminal
10	BIN	Servo signal amp. (focus servo system) inversion input terminal
11	EIN	Servo signal amp. (tracking servo system) inversion input terminal
12	FIN	Servo signal amp. (tracking servo system) inversion input terminal
13	BIAS	Bias input terminal
14	AVCC	Analog section power terminal
15*	VSTBY	Logic signal output terminal (STBY signal inversion signal is output.)
16*	XDISC	Logic signal output terminal (DISC signal inversion signal is output.)
17*	XSGAIN	Logic signal output terminal (SGAIN signal inversion signal is output.)
18	AGND	Analog section GND terminal
19	DGND	Digital section GND terminal
20	DTEMP	Chip temperature detection terminal
21	LATCH	Latch signal input terminal
22	CLOCK	Clock signal input terminal
23	DATA	Serial data input terminal
24	DVCC	Digital section power terminal
25	FOUT	Servo signal amp. (tracking servo system) output terminal
26	EOUT	Servo signal amp. (tracking servo system) output terminal
27	BOUT	Servo signal amp. (focus servo system) output terminal
28	AOUT	Servo signal amp. (focus servo system) output terminal
29	TCGO	Track cross detection signal amp. output terminal for groove
30	WBO	Comparator output terminal for ADIP signal binary-coding
31	22KI	Comparator input terminal for ADIP signal binary-coding
32	22KO	ADIP signal HPF amp. output terminal
33	ADLPFO	ADIP signal LPF amp. output terminal
34*	NC	NC
35	ADIPO	ADIP signal preamp. output terminal
36	ADIPI	ADIP signal AGC amp. output terminal
37	ADAGC	ADIP signal AGC smoothing capacitor connection terminal
38	ADAGI	ADIP signal AGC amp. input terminal
39	RF2-1	RF1 and RF2 difference signal
40	EFMO	RF signal preamp. output terminal
41*	WFMI	RF signal AGC amp. output terminal
42	AVCC	Analog section power terminal
43	AGND	Analog section GND terminal
44	EFMAGC	EFM signal AGC smoothing capacitor connection terminal
45	EFMAGI	EFM signal AGC amp. output terminal
46*	ATTR	Pins 47 and 48 output signal attenuation terminal
47	GOUT	Output of signal of RF1+RF2-RF3-RF4 for groove
48	POUT	Rf1 to 4 resistance addition output for pit

In this unit, the terminal with asterisk mark (\*) is (open) terminal which is not connected to the outside.

## MD-R2

### IC1201 VHiLR376481-1:ENDEC/ATRAC (LR376481) (1/2)

Pin No.	Terminal Name	Input/Output	Function
1*	EFMMON	Output	EFM monitor output
2	AVCC	—	Analog power
3	EFMI	Input	EFM signal input from RF amp.
4	AGND	—	Analog GND
5	AIN	Input	Focus error signal A
6	EIN	Input	Tracking error signal E
7	TCG	Input	Track cross signal
8	BIN	Input	Focus error signal B
9	FIN	Input	Tracking error signal F
10*	VBAT	Input	Power voltage detection signal for constant voltage servo
11	WBI	Input	ADIP wobble signal
12	VDD1	—	Digital power
13	DGND	—	Digital GND
14,15	TEST0,TEST1	Input	Input for test. Connection to GND in case of normal use
16	TEST2	Input	Input for test. Endocode/servo mode and ATRAC mode selection
17	X176KO	Output	Clock output. $f=176.4$ kHz (4fs)
18	FODRF	Output	Focus servo forward output. PWM
19	FODRR	Output	Focus servo reverse output. PWM
20	TRDRF	Output	Tracking servo forward output. PWM
21	LATCH	Output	Tracking servo reverse output. PWM
22	CLOCK	Output	Slide servo forward output. PWM
23	DATA	Output	Slide servo reverse output. PWM
24	DVCC	Output	Spindle servo forward output or spindle servo output. PWM
25	FOUT	Output	Spindle servo reverse output or spindle rotation (forward/reverse)selection
26	EOUT	Output	Address output to external D-RAM. ADR3
27	BOUT	Output	Address output to external D-RAM. ADR2
28	AOUT	Output	Address output to external D-RAM. ADR1
29	TCGO	Output	Address output to external D-RAM. ADR0 (LSB)
30*	WBO	Output	Address output to external D-RAM. ADR10 (MSB)
31	22KI	—	Power supply for DRAM interface
32	22KO	Output	Address output to external D-RAM. ADR4
33	ADLPFO	Output	Address output to external D-RAM. ADR5
34	NC	Output	Address output to external D-RAM. ADR6
35	ADIPO	Output	Address output to external D-RAM. ADR7
36	ADIPI	Output	Address output to external D-RAM. ADR8
37	ADAGC	Output	Data output enable signal output to external D-RAM
38	ADAGI	—	Digital GND
39	RF2-1	Output	Column address strobe signal output to external D-RAM
40	EFMO	In/Output	Data input/output from and to external D-RAM. D2
41	WFMI	In/Output	Data input/output from and to external D-RAM. D3 (MSB)
42	AVCC	Output	Data input/output from and to external D-RAM. ADR9
43	AGND	Output	Low address strobe signal output to external D-RAM
44	EFMAGC	Output	Data write enable signal output to external D-RAM
45	EFMAGI	In/Output	Data input/output from and to external D-RAM. D1
46	ATTR	In/Output	Data input/output from and to external D-RAM. D0 (LSB)
47*	GOUT	Output	Track cross signal
48*	POUT	Output	ADIP CRC error flag monitor output
49*	PLCK	Output	EFM PLL clock output in playback mode
50	EFM0	Output	EFM signal output in record mode. C1F (C1 error flag) monitor output in playback mode
51*	X700KO	Output	Clock output. $f = 705.6$ kHz. Clock output is not performed when RSTX = 0.
52*	EXPORT0	Output	Microcomputer extension output port 0
53*	EXPORT1	Output	Microcomputer extension output port 1

In this unit, the terminal with asterisk mark (\*) is (open) terminal which is not connected to the outside.

**IC1201 VHiLR376481-1:ENDEC/ATRAC (LR376481) (2/2)**

Pin No.	Terminal Name	Input/Output	Function
54	TESO1	Output	PLLLR. Microcomputer extension output port 2 in case of selection
55	TESO3	In/Output	PLLOSC. Microcomputer extension output port 3 in case of selection
56	TEST4	In/Output	EXTCLK. Microcomputer extension output port 4 in case of selection
57*	CDDATA	In/Output	High speed dubbing CD data input. Microcomputer extension output port 5 in case of selection
58*	CDLRCK	In/Output	High speed dubbing CD LR data input. Microcomputer extension output port 6 in case of selection
59*	CDBCLK	In/Output	High speed dubbing CD bit data input. Microcomputer extension output port 7 in case of selection
60*	VXI	Input	Vari-pitch PLL clock input
61*	VPO	Output	Vari-pitch PLL phase error output
62	VDD1	—	Digital power
63	DGND	—	Digital GND
64	XI	Input	Oscillation circuit input. 33.8688 MHz
65	XO	Output	Oscillation circuit input. 33.8688 MHz
66	DIN	Input	Digital input signal
67	DOUT	Output	Digital output signal
68	VDD3	—	Power for internal PLL
69	DGND	—	Digital GND
70	LRCK	Output	Music data Lch/Rch selection output
71	BLCK	Output	Music data shift clock
72	DFCK	Output	AD/DA converter digital filter clock. 256 Fs
73	ADDATA	Input	Audio data input
74	DADATA	Output	Audio data output
75*	FEMON	Output	Focus error signal monitor output
76*	TOTMON	Output	Total signal monitor output
77*	TEMON	Output	Tracking error signal monitor output
78*	SBCK	Input	DIN subcode read clock. EIAJ CP-309 Format
79*	SBO	Output	DIN subcode serial data. EIAJ CP-309 Format
80*	SBSY	Output	DIN subcode block sync signal. EIAJ CP-309 Format
81	SFSY	Output	DIN subcode frame sync signal. EIAJ CP-309 Format
82	FOK	Output	Focus OK detection signal. "0" : Focus OK
83	SENSE	Output	Servo status detection signal. "1": Auto-move, auto-jump, auto-focus retraction
84	COUT	Output	Track cross signal output
85	MCCK	Output	Microcomputer clock output. Clock output is performed also when RSTX = 0.
86	DINTX	Output	System controller interface interruption request output terminal
87	VDD1	—	Digital power
88	DGND	—	Digital GND
89	RSTX	Input	Chip reset input. "L": Reset
90	SYD0	In/Output	System controller interface data bus terminal (LSB)
91~96	SYD1~SYD6	In/Output	System controller interface data bus terminal
97	SYD7	In/Output	System controller interface data bus terminal (MSB)
98	SYWRX	Input	System controller interface register writing pulse input
99	SYRDX	Input	System controller register read pulse input
100	SYRS	Input	System controller interface register selection input

In this unit, the terminal with asterisk mark (\*) is (open) terminal which is not connected to the outside.

## MD-R2

### IC1401 RX-iX0232AWZZ:MD System Microcomputer (IX0232AW) (1/2)

Pin No.	Terminal Name	Input/Output	Function
1*	P96/ANEX1	Output	Not used
2*	P95/ANEX0	Output	Not used
3	P94/DA1	Output	LDVAR (laser power adjustment output)
4*	P93/DA0	Output	ADJS (for automatic adjustment step check)
5*	P92/TB2IN	Output	Not used
6	P91/TB1IN	Input	LD SW CK input (interruption input only in single state)
7	P90/TB0IN	Input	ERR input (monitor PLL UNLOCK)
8	BYTE	Input	GND
9	CNVss	Input	GND
10*	P87/XCIN	Output	ST-ID Output
11*	P86/XOUT	Output	MD search output
12	RESET	Input	RESETInput
13*	XOUT	—	Extal clock output
14	Vss	—	GND
15	XIN	Input	EXTAL (8.4672 MHz)
16	Vcc	—	+ 3.15V
17	P85/NMI	Input	Connect +B
18	P84/INT2	Input	DINT (interruption input from MD LSI)
19	P83/INT1	Input	DSENSE (servo sense input from MD LSI)
20	P82/INT0	Input	ST-ID Input (MD-ON)
21	P81/TA4IN	Input	CD search input (syncro REC suspension input from MD LSI)
22	P80/TA4OUT	Output	MD RSW Output
23*	P77/TA3IN	Input	FSW1 (SW power frequency selection)
24	P76/TA3OUT	Output	Vari-pitch correspondence given (H)/not given (L)
25	P75/TA2IN	Input	P-DOWN (power failure detection)
26	P74/TA2OUT	Output	HDON (magnetic head current ON/OFF output)
27	P73/TA1IN	Output	LD+ (loading motor + control output)
28	P72/TA1OUT	Output	LD- (loading motor + control output)
29	P71/TA0IN	Input	CIN (track count signal input)
30	P70/TA0OUT	Input	INN SW (inner SW detection input)
31	P67/TXD1	Output	R-DATA
32	P66/RXD1	Output	R-LATCH
33	P65/CLK1	Output	R-CLK
34	P64/CTS1/RTS1/ CTS0/CLKS1	Output	DSTB (system controller communication enable and communication beingexecuted)
35	P63/TXD0	Output	MD DATA (MD Data Output)
36	P62/RXD0	Input	K DATA (system controller data input)
37	P61/CLK0	Input	DSCK (system controller communication clock input)
38*	P60/CTS0/RTS0	Input	4M/16M DRAM selection input
39	P57/RDY/CLKOUT	Output	R/P output (REC/PLAY selection)
40	P56/ALE	Input	FOK (focus servo status monitor input)
41*	WFMI	Input/Output	Not used
42	AVCC	Output	S2 Ouput
43	AGND	Output	S1 Output
44	EFMAGC	Output	SYRS (MD-LSI register selection signal output)
45	EFMAGI	Output	SYRD (MD-LSI read signal output)
46	ATTR	Output	SYWR (MD-LSI right signal output)
47	GOUT	In/Output	SYS D7 (data bus 7)
48	POUT	In/Output	SYS D6 (data bus 6)
49	PLCK	In/Output	SYS D5 (data bus 5)
50	EFM0	In/Output	SYS D4 (data bus 4)
51	X700KO	In/Output	SYS D3 (data bus 3)

In this unit, the terminal with asterisk mark (\*) is (open) terminal which is not connected to the outside.



## IC1401 RX-iX0232AWZZ:MD System Microcomputer (IX0232AW) (2/2)

Pin No.	Terminal Name	Input/Output	Function
52	P42/A18	In/Output	SYS D2 (data bus 2)
53	P41/A17	In/Output	SYS D1 (data bus 1)
54	P40/A16	In/Output	SYS D0 (data bus 0)
55*	P37/A15	Output	Not used
56*	P36/A14	Output	Not used
57*	P35/A13	Output	Not used
58	P34/A12	Output	EEPRO (EEPROM protection cancel)
59	P33/A11	Output	EPCS (EEPROM chip selector output)
60	P32/A10	In/Output	EEPD (EEPROM sirial data output)
61	P31A9	Output	EEPK (EEPROM sirial colck output)
62	Vcc	Input	+ 3.15V
63*	P30/A8	Output	Not used
64	Vss	—	GND
65*	P27/A7	Output	L3 DATA (soft serial communication, 2 modes provided, LSB fast)
66*	P26/A6	Output	L3 MODE (soft serial communication, 2 modes provided, LSB fast)
67*	P25/A5	Output	L3 CLK (soft serial communication, 2 modes provided, LSB fast)
68*	P24/A4	Output	Not used
69*	P23/A3	Output	Not used
70	P22/A2	Output	PCNT0 output
71*	P21/A1	Output	Not used
72	P20/A0	Output	LDON output (H: ON)
73	P17/D15	Output	ANLPTR output
74*	P16/D14	Output	ADPON output (for CK)
75*	P15/D13	Output	DAPON output (for CK)
76	P14/D12	Output	DFS0 output
77	P13/D11	Output	DFS1 output
78*	P12/D10	Output	DIG EX output (for CK)
79*	P11/D9	Output	DIG CD output (for CK)
80	P10/D8	Output	XRST (system reset output)
81*	P07/D7	Output	AD MUTE output (for CK)
82*	P06/D6	Output	EMPHA output (for CK)
83*	P05/D5	Output	DA MUTE output (for CK)
84	P04/D4	Output	MUTE output
85*	P03/D3	Output	DOUTM output (for CK)
86	P02/D2	Input	TEST2 (special mode selection 2)
87	P01/D1	Input	TEST1 (special mode selection 1)
88	P00/D0	Input	TEST0 (special mode selection 0)
89	P107/AN7/KI3	Input	AVCK3 (special mode monitor input)
90	P106/AN6/KI2	Input	AVCK2 (AD/DA section 3.1V monitor input)
91	P105/AN5/KI1	Input	AVCK1 (DOUT section 5V monitor input)
92	P104/AN4/KI0	Input	DTEMP (temperature detection input)
93	P103/AN3	Input	MINF (disc type/REC input)
94	P102/AN2	Input	TEST K1 (test key input 1)
95	P101/AN1	Input	TEST K2 (test key input 2)
96	AVss	—	GND
97	P100/AN0	Input	HINF (mechanism position/HEAD position)
98	VREF	—	+ 3.15V
99	AVcc	—	+ 3.15V
100	P97/ADTRG	Input	Connect +B

In this unit, the terminal with asterisk mark (\*) is (open) terminal which is not connected to the outside.

IC1101 VHiiR3R55/-1:RF Signal Control (IR3R55)

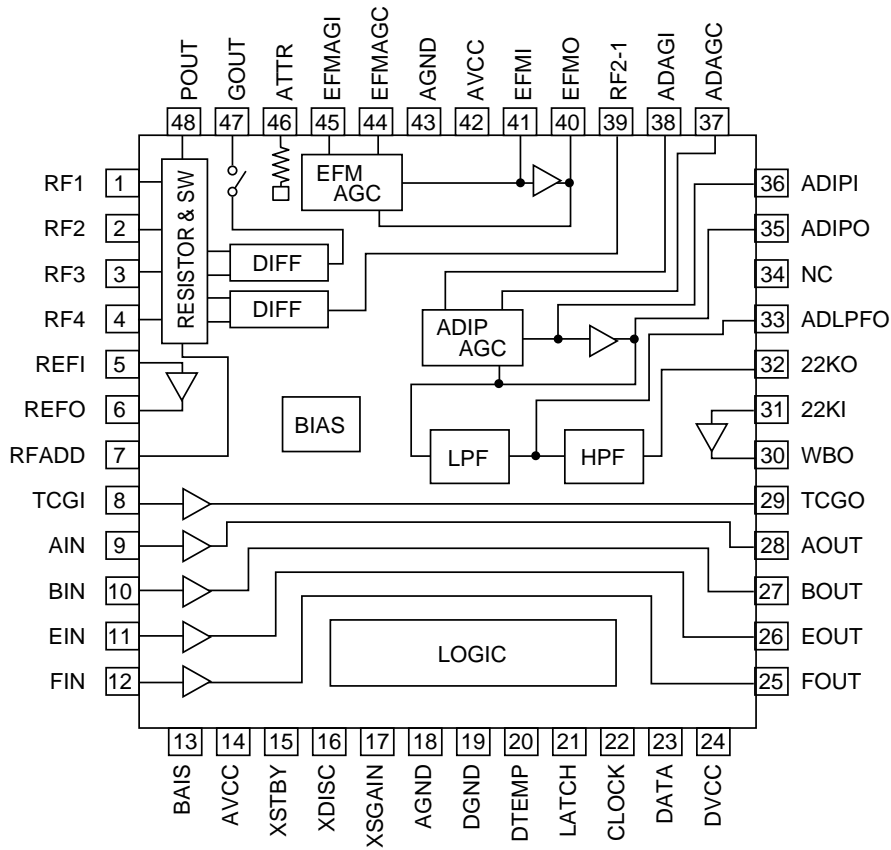


Figure 58-1 BLOCK DIAGRAM OF IC

IC1201 VHilR376481-1:ENDEC/ATRAC (LR376481)

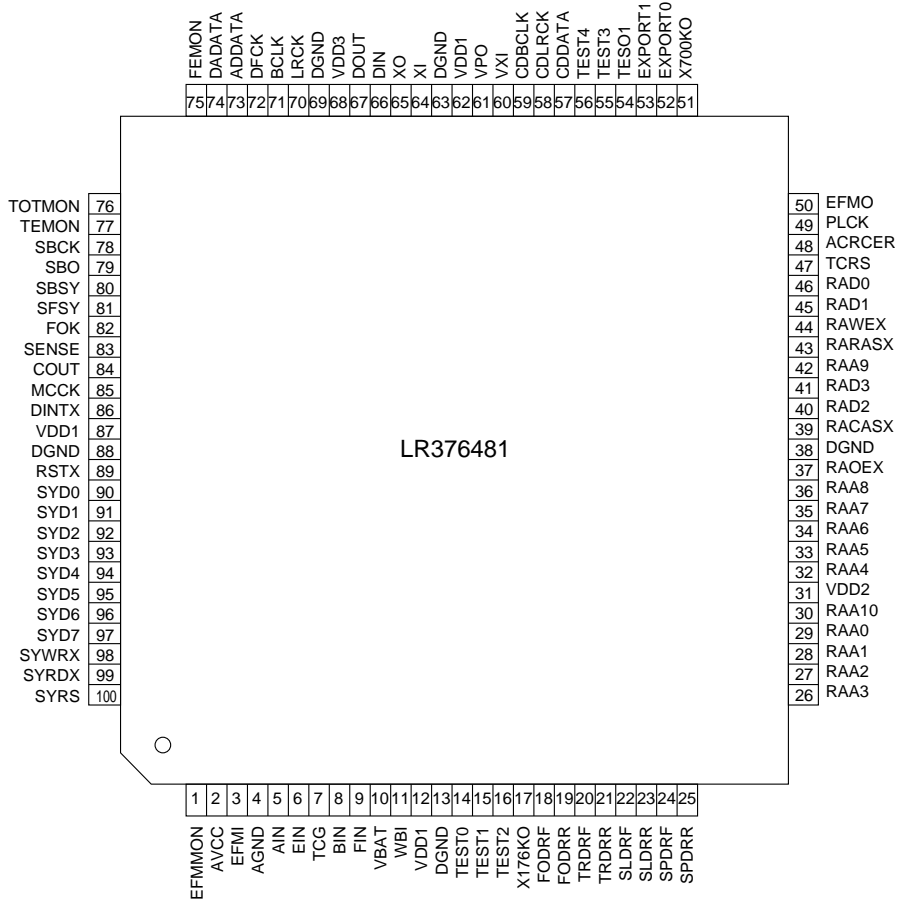


Figure 58-2 BLOCK DIAGRAM OF IC

# SHARP PARTS GUIDE

MODEL **MD-R2**

## “HOW TO ORDER REPLACEMENT PARTS”

To have your order filled promptly and correctly, please furnish the following information.

- |                 |                |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. No.    |
| 3. PART NO.     | 4. DESCRIPTION |

★ MARK: SPARE PARTS-DELIVERY SECTION

### For U.S.A. only

Contact your nearest SHARP Parts Distributor to order.

For location of SHARP Parts Distributor,  
Please call Toll-Free;  
1-800-BE-SHARP

## Explanation of capacitors/resistors parts codes

### Capacitors

VCC ..... Ceramic type  
 VCK ..... Ceramic type  
 VCT ..... Semiconductor type  
 VC •• MF ..... Cylindrical type (without lead wire)  
 VC •• MN ..... Cylindrical type (without lead wire)  
 VC •• TV ..... Square type (without lead wire)  
 VC •• TQ ..... Square type (without lead wire)  
 VC •• CY ..... Square type (without lead wire)  
 VC •• CZ ..... Square type (without lead wire)  
 VC ..... J .. The 13th character represents capacity difference.  
 ("J"  $\pm 5\%$ , "K"  $\pm 10\%$ , "M"  $\pm 20\%$ , "N"  $\pm 30\%$ ,  
 "C"  $\pm 0.25$  pF, "D"  $\pm 0.5$  pF, "Z"  $+80-20\%$ .)


If there are no indications for the electrolytic capacitors, error is  $\pm 20\%$ .

### Resistors

VRD ..... Carbon-film type  
 VRS ..... Carbon-film type  
 VRN ..... Metal-film type  
 VR •• MF ..... Cylindrical type (without lead wire)  
 VR •• MN ..... Cylindrical type (without lead wire)  
 VR •• TV ..... Square type (without lead wire)  
 VR •• TQ ..... Square type (without lead wire)  
 VR •• CY ..... Square type (without lead wire)  
 VR •• CZ ..... Square type (without lead wire)  
 VR ..... J .. The 13th character represents error.  
 ("J"  $\pm 5\%$ , "F"  $\pm 1\%$ , "D"  $\pm 0.5\%$ .)

If there are no indications for other parts, the resistors are  $\pm 5\%$  carbon-film type.

### NOTE:

Parts marked with “” are important for maintaining the safety of the set.  
 Be sure to replace parts with specified ones for maintaining the safety and performance of the set.

## MD-R2

NO.	PART CODE	★	PRICE RANK	DESCRIPTION
<b>INTEGRATED CIRCUITS</b>				
IC101	VHINJM4560D-1	J	AH	Ope Amp.,NJM4560D
IC201	VHIUDA1340/-1	J	BA	AD/DA Convertor,UDA1340
IC301	VHI74HCU04/-1	J	AF	Inverter,74HCU04
IC302	VHI74HC10AP-1	J	AF	NAND Gate,74HC10AP
IC501	VHS81233YX-1	J	AG	Regulator,S81233YX
IC601	VHINJM4580D-1	J	AG	Line Amp.,NJM4580D
IC651	VHINJM4560D-1	J	AH	Ope Amp.,NJM4560D
IC901	RH-IX0237AWZZ	J	BE	System Microcomputer, IX0237AW
IC902	VHIPST9127/-1	J	AG	Reset,PST9127
IC1101	VHIIR3R55/-1	J	AQ	RF Signal,Processor,IR3R55
IC1201	VHILR376481-1	J	BD	ENDEC,LR376481
IC1202	RH-IX2474AFZZ	J	BF	4Mbit D-RAM,IX2474AF
IC1251	VHI74ACT02F-1	J	AF	Head Driver,74ACT02F
IC1401	RH-IX0232AWZZ	J	BA	MD System Microcomputer, IX0232AW
IC1402	VHIS29294A/-1	J	AH	E <sup>2</sup> -PROM,S29294A
IC1601	VHIM56758FP-1	J	AM	5-CH Motor Driver,M56758FP
IC1801	VHIXC62EP32-1	J	AE	Regulator,XC62EP32
IC1906	VHITC7ST08F-1	J	AE	AND Gate,TC7ST08F
IC1907	VHITC9246F/-1	J	AM	Clock Generator,TC9246F
IC1916	VHI74VHC08FT1	J	AF	AND Gate,74VHC08FT
IC1990	VHI74AC04FS-1	J	AF	μP Converter,74AC04FS

## TRANSISTORS

Q451,452	VS2SC2878B/-1	J	AC	Silicon,NPN,2SC2878 B
Q501	VSKTA1266GR-1	J	AB	Silicon,PNP,KTA1266 GR
Q502	VS2SB562-C/-1	J	AD	Silicon,PNP,2SB562 C
Q503	VS2SD468-C/-1	J	AD	Silicon,NPN,2SD468 C
Q504	VS2SD2012Y/-1	J	AF	Silicon,NPN,2SD2012 Y
Q505	VSKRC102M/-1	J	AC	Digital,NPN,KRC102 M
Q506	VS2SD2012Y/-1	J	AF	Silicon,NPN,2SD2012 Y
Q601,602	VS2SC2878B/-1	J	AC	Silicon,NPN,2SC2878 B
Q653	VSKRC102M/-1	J	AC	Digital,NPN,KRC102 M
Q901,902	VS2SC2412KR-1	J	AB	Silicon,NPN,2SC2412 KR
Q903	VS2DTC144ES/-1	J	AB	Digital,NPN,DTC144 ES
Q1251,1252	VS2SK2909/-1	J	AE	FET,2SK2909
Q1253,1254	VS2SK1473/-1	J	AF	FET,2SK1473
Q1401	VS2RN2404/-1	J	AC	Digital,PNP,RN2404
Q1402	VS2RNC1404/-1	J	AB	Digital,NPN,RNC1404
Q1403	VS2RN2404/-1	J	AC	Digital,PNP,RN2404
Q1404	VS2RNC1404/-1	J	AB	Digital,NPN,RNC1404
Q1451	VS2RNC1407/-1	J	AC	Digital,NPN,RNC1407
Q1601	VS2SA1314C/-1	J	AD	Silicon,PNP,2SA1314 C
Q1801	VS2SA1314C/-1	J	AD	Silicon,PNP,2SA1314 C
Q1802,1803	VS2RN1406/-1	J	AB	Digital,NPN,RN1406
Q1807	VS2SA1314C/-1	J	AD	Silicon,PNP,2SA1314 C
Q1820	VS2SA1162G/-1	J	AB	Silicon,PNP,2SA1162 G
Q1821,1822	VS2RNC1407/-1	J	AC	Digital,NPN,RNC1407

## DIODES

D301	VHEMTZJ5R1B-1	J	AC	Zener,5.1V,MTZJ5.1B
D501	VHEMTZJ6R8B-1	J	AC	Zener,6.8V,MTZJ6.8B
D502	VHEMTZJ330B-1	J	AB	Zener,33V,MTZJ33B
D503,504	VHEMTZJ9R1B-1	J	AB	Zener,9.1V,MTZJ9.1B
D505	VHEMTZJ6R8A-1	J	AA	Zener,6.8V,MTZJ6.8A
D506	VHEMTZJ7R5B-1	J	AA	Zener,7.5V,MTZJ7.5B
D507	VHEMTZJ5R6C-1	J	AB	Zener,5.6V,MTZJ5.6C
D508	VHEMTZJ270D-1	J	AA	Zener,27V,MTZJ27D
D509,510	VHD1SS133/-1	J	AA	Silicon,1SS133
D512,513	VHD1SS133/-1	J	AA	Silicon,1SS133
D551~555	VHDRL104A/-1	J	AB	Silicon,RL104A
D651	VHEMTZJ9R1B-1	J	AB	Zener,9.1V,MTZJ9.1B
D1251,1252	VHDSB0209CP-1	J	AC	Silicon,SB0209CP
D1990	VHD1SS372/-1	J	AD	Silicon,1SS372

## TRANSFORMER

△ T551	RTRNP0177AWZZ	J	AY	Power
--------	---------------	---	----	-------

## COILS

L101	VP-DHR22K0000	J	AB	0.22 μH
L201,202	VP-DH100K0000	J	AB	10 μH,Choke
L301,302	VP-DH100K0000	J	AB	10 μH,Choke
L901	VP-DH220K0000	J	AB	22 μH,Choke
L1101	VPBNN100K0000	J	AC	10 μH
L1102	VPBNNR47K0000	J	AC	0.47 μH

NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
L1201	VPBNNR47K0000	J	AC	0.47 μH
L1203	VPBNNR47K0000	J	AC	4.7 μH
L1251	VP-NM470K0000	J	AC	47 μH
L1601	RCILZ0016AWZZ	J	AD	1 μH
L1950	RCILZ0016AWZZ	J	AD	1 μH

## VARIABLE RESISTORS

VR901	RVR-B0016AWZZ	J	AH	5 kohms (B),Volume [AUX-Volume]
VR981	RVR-C0002AWZZ	J	AH	1 kohm (C),Volume [Headphone-Volume]

## VIBRATORS

X901	RCRM-0012AWZZ	J	AF	Ceramic,4.19 MHz
X902	RCRSP0051AFZZ	J	AK	Crystal,32.768 kHz
XL1201	RCRSC0001AWZZ	J	AL	Crystal,33.8688 MHz

## CAPACITORS

C102	VCKZPU1HF223Z	J	AA	0.022 μF,50V
C105,106	VCKYPU1HB221K	J	AA	220 pF,50V
C107,108	RC-GZA105AF1H	J	AB	1 μF,50V,Electrolytic
C109,110	VCKYPU1HB221K	J	AA	220 pF,50V
C113,114	VCCSPU1HL470J	J	AA	47 pF,50V
C115,116	RC-GZA476AF1A	J	AB	47 μF,10V,Electrolytic
C117,118	RC-GZA107AF1A	J	AB	100 μF,10V,Electrolytic
C119	VCKZPU1HF223Z	J	AA	0.022 μF,50V
C120	VCKZPA1HF103Z	J	AA	0.01 μF,50V
C201	RC-GZA107AF1A	J	AB	100 μF,10V,Electrolytic
C202,203	RC-GZA476AF1A	J	AB	47 μF,10V,Electrolytic
C205	RC-GZA475AF1E	J	AB	4.7 μF,25V,Electrolytic
C206	RC-GZA105AF1H	J	AB	1 μF,50V,Electrolytic
C207	RC-GZA107AF1A	J	AB	100 μF,10V,Electrolytic
C208	RC-EZ0004AWZZ	J	AD	3.3 μF,16V,Electrolytic
C209	RC-GZA475AF1E	J	AB	4.7 μF,25V,Electrolytic
C212	RC-EZ0004AWZZ	J	AD	3.3 μF,16V,Electrolytic
C220	VCKYBT1HB102K	J	AA	0.001 μF,50V
C221	VCKZPU1HF223Z	J	AA	0.022 μF,50V
C222,223	VCTYBT1HF223Z	J	J	0.022 μF,50V
C301	VCKZPU1HF103Z	J	AA	0.01 μF,50V
C302~305	VCKZPU1HF223Z	J	AA	0.022 μF,50V
C310~314	VCKZPU1HF223Z	J	AA	0.022 μF,50V
C315	VCKZPU1HF102Z	J	AA	0.001 μF,50V
C451,452	RC-EZ0024AWZZ	J	AD	47 μF,10V,Electrolytic
C453,454	VCKYPU1HB471K	J	AA	470 pF,50V
C455,456	VCKYPU1HB821K	J	AA	820 pF,50V
C457	VCKZPU1HF223Z	J	AA	0.022 μF,50V
C459,460	VCKYPU1HB471K	J	AA	470 pF,50V
C461	VCKZPA1HF103Z	J	AA	0.01 μF,50V
C470	VCKYPU1HB101K	J	AA	100 pF,50V
C501	RC-GZV108AF1E	J	AD	1000 μF,25V,Electrolytic
C502	RC-GZ0059AFZZ	J	AF	4700 μF,25V,Electrolytic
C504	RC-GZV227AF1H	J	AC	220 μF,50V,Electrolytic
C505	RC-GZA106AF1H	J	AB	10 μF,50V,Electrolytic
C507	RC-GZA336AF1H	J	AB	33 μF,50V,Electrolytic
C509	RC-GZA476AF1E	J	AB	47 μF,25V,Electrolytic
C510	RC-GZA105AF1H	J	AB	1 μF,50V,Electrolytic
C511	RC-GZA476AF1E	J	AB	47 μF,25V,Electrolytic
C512	RC-GZA105AF1H	J	AB	1 μF,50V,Electrolytic
C513	RC-GZA476AF1E	J	AB	47 μF,25V,Electrolytic
C514~516	RC-GZA106AF1C	J	AB	10 μF,16V,Electrolytic
C517,518	RC-GZA107AF1A	J	AB	100 μF,10V,Electrolytic
C519	VCKZPU1HF223Z	J	AA	0.022 μF,50V
C520	VCKYPU1HB102K	J	AA	0.001 μF,50V
C521	RC-GZ0059AFZZ	J	AF	4700 μF,25V,Electrolytic
C522	RC-GZA108AF0J	J	AC	1000 μF,6.3V,Electrolytic
C524	RC-GZA108AF0J	J	AC	1000 μF,6.3V,Electrolytic
C525	RC-GZA107AF1A	J	AB	100 μF,10V,Electrolytic
C530	VCKZPU1HF223Z	J	AA	0.022 μF,50V
C531	VCFYDA1HA104J	J	AB	0.1 μF,50V,Polyester
C551,552	VCKZPU1HF103Z	J	AA	0.01 μF,50V
C561	VCKZPU1HF103Z	J	AA	0.01 μF,50V
C601,602	RC-EZ0024AWZZ	J	AD	47 μF,10V,Electrolytic
C603,604	VCKYPU1HB221K	J	AA	220 pF,50V
C607,608	VCKYPU1HB221K	J	AA	220 pF,50V
C611,612	VCCSPU1HL470J	J	AA	47 pF,50V
C613,614	RC-GZA476AF1A	J	AB	47 μF,10V,Electrolytic
C615,616	RC-GZA107AF1A	J	AB	100 μF,10V,Electrolytic
C651,652	VCKYPU1HB151K	J	AA	150 pF,50V
C653,654	VCCSPU1HL270J	J	AA	27 pF,50V

NO.	PART CODE	★	PRICE RANK	DESCRIPTION
C655,656	RC-GZA106AF1C	J	AB	10 μF,16V,Electrolytic
C657,658	RC-GZA227AF1A	J	AB	220 μF,10V,Electrolytic
C665,666	RC-GZA107AF1A	J	AB	100 μF,10V,Electrolytic
C667	VCFYDA1HA104J	J	AB	0.1 μF,50V
C675	VCKZPU1HF102Z	J	AA	0.001 μF,50V
C901~903	VCKYTV1HF104Z	J	AA	0.1 μF,50V
C904	VCCCTV1HH680J	J	AA	68 pF (CH),50V
C905	VCCCTV1HH120J	J	AA	12 pF (CH),50V
C906	VCKYTV1HF104Z	J	AA	0.1 μF,50V
C907~909	VCKYTV1EF105Z	J	AC	1 μF,25V
C910	VCKYTV1HF104Z	J	AA	0.1 μF,50V
C914~917	VCKYTV1HB102K	J	AA	0.001 μF,50V
C920	RC-EZD106AF1C	J	AB	10 μF,16V,Electrolytic
C922,923	VCKYTV1HF103Z	J	AA	0.01 μF,50V
C970	VCKYTV1HB101K	J	AA	100 pF,50V
C971	RC-EZD106AF1C	J	AB	10 μF,16V,Electrolytic
C981,982	VCKYTV1HB102K	J	AA	0.001 μF,50V
C983	VCKYTV1EF104Z	J	AA	0.1 μF,25V
C1101,1102	VCKYTV0JB105K	J	AD	1 μF,6.3V
C1103	VCKYTV1CF105Z	J	AB	1 μF,16V
C1104	VCKYTV1HB273K	J	AA	0.027 μF,50V
C1105	RC-KZ0002AWZZ	J	AE	10 μF,10V
C1106	VCKYTV1CB474K	J	AC	0.47 μF,16V
C1107	VCKYTV1HB472K	J	AA	0.0047 μF,50V
C1109	VCKYTV0JB105K	J	AD	1 μF,6.3V
C1110	VCKYTV1CB474K	J	AC	0.47 μF,16V
C1112~1116	VCCCTV1HH271J	J	AA	270 pF (CH),50V
C1117	VCKYCV1HB332K	J	AA	0.0033 μF,50V
C1118	VCKYTV1HB333K	J	AA	0.033 μF,50V
C1119	VCCCTV1HH331J	J	AA	330 pF (CH),50V
C1121	VCKYTV1CF105Z	J	AB	1 μF,16V
C1145	VCKYCV1CB333K	J	AA	0.033 μF,16V
C1202,1203	VCKYTV1CF105Z	J	AB	1 μF,16V
C1204,1205	VCCCTV1HH120J	J	AA	12 pF (CH),50V
C1206,1207	VCKYTV1CF105Z	J	AB	1 μF,16V
C1208	VCKYCV1CB473K	J	AA	0.047 μF,16V
C1209~1211	VCKYTV1CF105Z	J	AB	1 μF,16V
C1251	VCKYCV1CB273K	J	AA	0.027 μF,16V
C1252	VCCCTV1HH121J	J	AA	120 pF (CH),50V
C1254	RC-KZ0002AWZZ	J	AE	10 μF,10V
C1255	RC-KZ0003AWZZ	J	AE	4.7 μF,10V
C1401,1402	VCKYCV1CB473K	J	AA	0.047 μF,16V
C1403	VCKYCV1HB681K	J	AA	680 pF,50V
C1405	VCKYCV1EF104Z	J	AA	0.1 μF,25V
C1406	VCKYTV1CF105Z	J	AB	1 μF,16V
C1407	VCKYCV1CB223K	J	AA	0.022 μF,16V
C1412	VCKYCV1HB681K	J	AA	680 pF,50V
C1421~1424	VCKYCV1CB223K	J	AA	0.022 μF,16V
C1425	VCKYCV1CB473K	J	AA	0.047 μF,16V
C1601,1602	VCKYTV1CF105Z	J	AB	1 μF,16V
C1604	VCCCTV1HH560J	J	AA	56 pF (CH),50V
C1605	VCEAPS107AF1A	J	AD	100 μF,10V,Electrolytic
C1609	VCKYTV1CF105Z	J	AC	1 μF,16V
C1610	RC-KZ0002AWZZ	J	AE	10 μF,10V
C1631	VCKYTV1CF105Z	J	AB	1 μF,16V
C1650~1653	VCCCTV1HH821J	J	AA	820 pF,50V
C1654,1655	VCKYCV1EB153K	J	AA	0.015 μF,25V
C1656,1657	VCKYCV1HB562K	J	AA	0.0056 μF,50V
C1661	VCEAPS107AF1A	J	AD	100 μF,10V,Electrolytic
C1724	VCCCTV1HH220J	J	AA	22 pF (CH),50V
C1801	VCKYTV1CF225Z	J	AB	2.2 μF,16V
C1802	VCEAPS107AF1A	J	AD	100 μF,10V,Electrolytic
C1803	VCKYTV1CF225Z	J	AB	2.2 μF,16V
C1805	VCKYTV1CF105Z	J	AB	1 μF,16V
C1806	RC-KZ0002AWZZ	J	AE	10 μF,10V
C1807	VCEAPS227AF0G	J	AC	220 μF,4V,Electrolytic
C1913	VCCCTV1HH220J	J	AA	22 pF (CH),50V
C1917	VCCCTV1HH680J	J	AA	68 pF (CH),50V
C1927	VCKYCV1CB473K	J	AA	0.047 μF,16V
C1951	VCKYCV1CB473K	J	AA	0.047 μF,16V
C1952	VCKYCV1CB103K	J	AA	0.01 μF,16V
C1953	VCKYTV1CB474K	J	AC	0.47 μF,16V
C1954	VCCCTV1HH150J	J	AA	15 pF (CH),50V
C1955	VCKYCV1CB473K	J	AA	0.047 μF,16V
C1956	VCEAPS476AF0J	J	AC	47 μF,6.3V,Electrolytic
C1957	VCEAPS107AF0J	J	AC	100 μF,6.3V,Electrolytic
C1958	VCKYCV1CB473K	J	AA	0.047 μF,16V
C1964	VCKYCV1HB102K	J	AA	1000 pF,50V
C1990	VCKYTV0JB105K	J	AD	1 μF,6.3V
C1991	RC-KZ0002AWZZ	J	AE	10 μF,10V
C1992	VCKYCV1EF104Z	J	AA	0.1 μF,25V
JC171	VCCCTV1HH220J	J	AA	22 pF (CH),50V

NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
JC196	VCCCTV1HH220J	J	AA	22 pF (CH),50V
<b>RESISTORS</b>				
	VRS-TV2AB000J	J	AA	0 ohm,Jumper,1.25×2mm,Green
J1405	VRS-CY1JB103J	J	AA	10 kohm,1/16W
LR190	VRS-TV2AB220J	J	AA	22 ohms,1/10W
R103,104	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R105,106	VRD-ST2CD473J	J	AA	47 kohms,1/6W
R107,108	VRD-ST2CD104J	J	AA	100 kohm,1/6W
R109,110	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R111,112	VRD-ST2CD152J	J	AA	1.5 kohms,1/6W
R113,114	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R115,116	VRD-ST2CD101J	J	AA	100 ohm,1/6W
R202	VRD-ST2CD684J	J	AA	680 kohms,1/6W
R203	VRD-ST2CD105J	J	AA	1 Mohm,1/6W
R301	VRD-ST2CD820J	J	AA	82 ohms,1/6W
R302	VRD-ST2CD331J	J	AA	330 ohms,1/6W
R303	VRD-ST2CD224J	J	AA	220 kohms,1/6W
R304	VRD-ST2CD272J	J	AA	2.7 kohms,1/6W
R305	VRD-ST2CD563J	J	AA	56 kohms,1/6W
R307,308	VRD-ST2CD220J	J	AA	22 kohms,1/6W
R309	VRD-ST2CD103J	J	AA	10 kohm,1/6W
R310	VRD-ST2CD332J	J	AA	3.3 kohms,1/6W
R312	VRD-ST2CD823J	J	AA	82 kohms,1/6W
R313	VRD-ST2CD473J	J	AA	47 kohms,1/6W
R401~404	VRD-ST2CD561J	J	AA	560 ohms,1/6W
R405	VRD-ST2CD331J	J	AA	330 ohms,1/6W
R406~410	VRD-ST2CD224J	J	AA	220 kohms,1/6W
R411~413	VRD-ST2CD472J	J	AA	4.7 kohms,1/6W
R414~416	VRD-ST2CD822J	J	AA	8.2 kohms,1/6W
R417,418	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R451,452	VRD-ST2CD331J	J	AA	330 ohms,1/6W
R453,454	VRD-ST2CD333J	J	AA	33 kohms,1/6W
R455,456	VRD-ST2CD101J	J	AA	100 ohm,1/6W
R457,458	VRD-ST2CD103J	J	AA	10 kohm,1/6W
△ R501,502	RH-QX1067AFZZ	J	AE	Posistor,8.2 ohms
R503	VRD-ST2CD182J	J	AA	1.8 kohms,1/6W
R504	VRD-ST2CD333J	J	AA	33 kohms,1/6W
R505	VRD-ST2CD681J	J	AA	680 ohms,1/6W
R506	VRD-ST2CD101J	J	AA	100 ohm,1/6W
R507	VRD-ST2CD681J	J	AA	680 ohms,1/6W
R508	VRD-ST2CD101J	J	AA	100 ohm,1/6W
R509	VRD-ST2CD821J	J	AA	820 ohms,1/6W
R510	VRD-ST2CD101J	J	AA	100 ohm,1/6W
△ R511	RH-QX1066AFZZ	J	AE	0.8 ohms,Posistor
R512	VRD-ST2CD471J	J	AA	470 ohms,1/6W
R514	VRD-ST2CD104J	J	AA	100 kohm,1/6W
R516	VRD-ST2CD224J	J	AA	220 kohms,1/6W
R517,518	VRD-ST2EE221J	J	AA	220 ohms,1/4W
△ R551	RH-QX1067AFZZ	J	AE	Posistor,8.2 ohms
R552	VRD-ST2CD393J	J	AA	39 kohms,1/6W
R553,554	VRD-ST2CD683J	J	AA	68 kohms,1/6W
R601,602	VRD-ST2CD471J	J	AA	470 ohms,1/6W
R605,606	VRD-ST2CD223J	J	AA	22 kohms,1/6W
R607~610	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R611,612	VRD-ST2CD152J	J	AA	1.5 kohms,1/6W
R613,614	VRD-ST2CD101J	J	AA	100 ohm,1/6W
R615,616	VRD-ST2CD473J	J	AA	47 kohms,1/6W
R617,618	VRD-ST2CD331J	J	AA	330 ohms,1/6W
R619,620	VRD-ST2CD103J	J	AA	10 kohm,1/6W
R651,652	VRD-ST2CD104J	J	AA	100 kohm,1/6W
R653,654	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R659,660	VRD-ST2CD100J	J	AA	10 ohm,1/6W
R667,668	VRD-ST2EE820J	J	AA	82 ohms,1/6W
R669	VRD-ST2CD272J	J	AA	2.7 kohms,1/6W
R670	VRD-ST2CD331J	J	AA	330 ohms,1/6W
R681,682	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R903	VRS-TV2AB123J	J	AA	12 kohms,1/10W
R904	VRS-TV2AB682J	J	AA	6.8 kohms,1/10W
R905	VRS-TV2AB123J	J	AA	12 kohms,1/10W
R906	VRS-TV2AB224J	J	AA	220 kohms,1/10W
R909	VRS-TV2AB182J	J	AA	1.8 kohms,1/10W
R910	VRS-TV2AB475J	J	AA	4.7 Mohms,1/10W
R911	VRD-ST2CD105J	J	AA	1 Mohm,1/6W
R920	VRS-TV2AB474J	J	AA	470 kohms,1/10W
R921~924	VRS-TV2AB103J	J	AA	10 kohm,1/10W
R926	VRD-ST2CD102J	J	AA	1 kohm,1/6W
R930~945	VRS-TV2AB473J	J	AA	47 kohms,1/10W
R950	VRS-TV2AB102J	J	AA	1 kohm,1/10W
R951	VRS-TV2AB122J	J	AA	1.2 kohms,1/10W
R952	VRS-TV2AB152J	J	AA	1.5 kohms,1/10W

# MD-R2

NO.	PART CODE	★ PRICE RANK	DESCRIPTION
R953	VRS-TV2AB182J	J AA	1.8 kohms,1/10W
R954	VRS-TV2AB102J	J AA	1 kohm,1/10W
R955	VRS-TV2AB122J	J AA	1.2 kohms,1/10W
R956	VRS-TV2AB152J	J AA	1.5 kohms,1/10W
R957	VRS-TV2AB182J	J AA	1.8 kohms,1/10W
R958	VRS-TV2AB272J	J AA	2.7 kohms,1/10W
R959	VRS-TV2AB392J	J AA	3.9 kohms,1/10W
R960	VRD-ST2CD333J	J AA	33 kohms,1/6W
R968,969	VRS-TV2AB103J	J AA	10 kohm,1/10W
R970	VRS-TV2AB102J	J AA	1 kohm,1/10W
R971	VRS-TV2AB101J	J AA	100 ohm,1/10W
R972	VRS-TV2AB474J	J AA	470 kohms,1/10W
R1006	VRS-TV2AB102J	J AA	1 kohm,1/10W
R1008~1011	VRS-TV2AB102J	J AA	1 kohm,1/10W
R1014~1016	VRS-TV2AB102J	J AA	1 kohm,1/10W
R1018~1021	VRS-TV2AB102J	J AA	1 kohm,1/10W
R1022	VRS-TV2AB223J	J AA	22 kohms,1/10W
R1025,1026	VRS-TV2AB223J	J AA	22 kohms,1/10W
R1027	VRS-TV2AB334J	J AA	330 kohms,1/10W
R1028~1031	VRS-TV2AB223J	J AA	22 kohms,1/10W
R1033,1034	VRS-TV2AB103J	J AA	10 kohm,1/10W
R1036,1037	VRS-TV2AB103J	J AA	10 kohm,1/10W
R1038,1039	VRS-TV2AB474J	J AA	470 kohms,1/10W
R1040	VRS-TV2AB101J	J AA	100 ohm,1/10W
R1044	VRD-ST2CD820J	J AA	82 ohms,1/6W
R1046	VRS-TV2AB103J	J AA	10 kohm,1/10W
R1047	VRS-TV2AB473J	J AA	47 kohms,1/10W
R1058	VRS-TV2AB681J	J AA	680 ohms,1/10W
R1061,1062	VRS-TV2AB103J	J AA	10 kohm,1/10W
R1063	VRS-TV2AB474J	J AA	470 kohms,1/10W
R1100	VRS-TQ2BB270J	J AA	27 ohms,1/8W
R1102	VRS-CY1JB561J	J AA	560 ohms,1/16W
R1105	VRS-CY1JB394J	J AA	390 kohms,1/16W
R1107	VRS-CY1JB1R0J	J AA	1 ohm,1/16W
R1150~1154	VRS-CY1JB223J	J AA	22 kohms,1/16W
R1155	VRS-CY1JB563J	J AA	56 kohms,1/16W
R1166	VRS-CY1JB122J	J AA	1.2 kohms,1/16W
R1201	VRS-CY1JB151J	J AA	150 ohms,1/16W
R1202	VRS-CY1JB105J	J AA	1 Mohm,1/16W
R1210	VRS-CY1JB101J	J AA	100 ohm,1/16W
R1211	VRS-CY1JB221J	J AA	220 ohms,1/16W
R1221	VRS-CY1JB221J	J AA	220 ohms,1/16W
R1223	VRS-TV2AB681J	J AA	680 ohms,1/10W
R1251	VRS-CY1JB100J	J AA	10 ohm,1/16W
R1254	VRS-TV2AB221J	J AA	220 ohms,1/10W
R1281	VRS-CY1JB470J	J AA	47 ohms,1/16W
R1401	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1404	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1406,1407	VRS-CY1JB332J	J AA	3.3 kohms,1/16W
R1408	VRS-CY1JB104J	J AA	100 kohm,1/16W
R1409	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1412	VRS-CY1JB104J	J AA	100 kohm,1/16W
R1413	VRS-CY1JB332J	J AA	3.3 kohms,1/16W
R1414	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1415	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1416	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1418	VRS-CY1JB473J	J AA	47 kohms,1/16W
R1420	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1422~1424	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1425	VRS-CY1JB272J	J AA	2.7 kohms,1/16W
R1426	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1427	VRS-CY1JB472J	J AA	4.7 kohms,1/16W
R1428	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1429,1430	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1452	VRS-CY1JB332J	J AA	3.3 kohms,1/16W
R1454	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1456	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1458	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1460	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1462	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1464	VRS-CY1JB221J	J AA	220 ohms,1/16W
R1466	VRS-CY1JB221J	J AA	220 ohms,1/16W
R1472	VRS-CY1JB473J	J AA	47 kohms,1/16W
R1473	VRS-CY1JB104J	J AA	100 kohm,1/16W
R1474~1476	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1477	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1609	VRS-CY1JB152J	J AA	1.5 kohms,1/16W
R1610	VRS-CY1JB303D	J AA	30 kohms,1/16W
R1611	VRS-CY1JB123D	J AA	12 kohms,1/16W
R1612	VRS-CY1JB563J	J AA	56 kohms,1/16W
R1613	VRS-CY1JB273J	J AA	27 kohms,1/16W
R1614	VRS-CY1JB183D	J AA	18 kohms,1/16W

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
R1617	VRS-CY1JB473J	J AA	47 kohms,1/16W
R1650	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1651	VRS-CY1JB104J	J AA	100 kohm,1/16W
R1652	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1653	VRS-CY1JB104J	J AA	100 kohm,1/16W
R1654	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1655	VRS-CY1JB124J	J AA	120 kohms,1/16W
R1656	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1657	VRS-CY1JB124J	J AA	120 kohms,1/16W
R1658	VRS-CY1JB153J	J AA	15 kohms,1/16W
R1659	VRS-CY1JB823J	J AA	82 kohms,1/16W
R1660	VRS-CY1JB153J	J AA	15 kohms,1/16W
R1661	VRS-CY1JB823J	J AA	82 kohms,1/16W
R1662	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1663	VRS-CY1JB623J	J AA	62 kohms,1/16W
R1664	VRS-CY1JB103J	J AA	10 kohm,1/16W
R1665	VRS-CY1JB623J	J AA	62 kohms,1/16W
R1666,1667	VRS-CY1JB223J	J AA	22 kohms,1/16W
R1668,1669	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1708	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1733	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1758,1759	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1801	VRS-CY1JB182J	J AA	1.8 kohms,1/16W
R1802	VRS-CY1JB271J	J AA	270 ohms,1/16W
R1804	VRS-CY1JB224D	J AA	220 kohms,1/16W
R1805	VRS-CY1JB104D	J AA	100 kohm,1/16W
R1808	VRS-CY1JB273J	J AA	27 kohms,1/16W
R1809	VRS-CY1JB391J	J AA	390 ohms,1/16W
R1820,1821	VRS-TV2AB1R0J	J AA	1 ohm,1/10W
R1827	VRS-CY1JB271J	J AA	270 ohms,1/16W
R1901	VRS-TV2AB471J	J AA	470 ohms,1/10W
R1902	VRS-TV2AB182J	J AA	1.8 kohms,1/10W
R1903,1904	VRS-TV2AB821J	J AA	820 ohms,1/10W
R1927	VRS-TV2AB220J	J AA	22 ohms,1/10W
R1939	VRS-CY1JB102J	J AA	1 kohm,1/16W
R1940	VRS-CY1JB221J	J AA	220 ohms,1/16W
R1947	VRS-TV2AB470J	J AA	47 ohms,1/10W
R1952,1953	VRS-CY1JB470J	J AA	47 ohms,1/16W
R1961	VRS-CY1JB101J	J AA	100 ohm,1/16W
R1962	VRS-CY1JB224J	J AA	220 kohms,1/16W
R1963	VRS-CY1JB152J	J AA	1.5 kohms,1/16W
R1964	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1967	VRS-CY1JB470J	J AA	47 ohms,1/16W
R1968	VRS-CY1JB221J	J AA	220 ohms,1/16W
R1969	VRS-TQ2BB560J	J AA	56 ohms,1/8W
R1973	VRS-CY1JB682J	J AA	6.8 kohms,1/16W
R1974	VRS-CY1JB221J	J AA	220 ohms,1/16W
R1994	VRS-CY1JB470J	J AA	47 ohms,1/16W
RA902~904	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA908	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA912~914	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA916	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA918,919	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA925~928	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA930	VRD-ST2CD102J	J AA	1 kohm,1/6W
RA931	VRS-TV2AB102J	J AA	1 kohm,1/10W
RA933~937	VRS-TV2AB102J	J AA	1 kohm,1/10W

## OTHER CIRCUITRY PARTS

CN1101	QCNCWY028AFZZ	J AE	Plug,23Pin
CN1252	QCNCM891BAFZZ	J AC	Plug,2Pin
CN1601	QCNCWX05AFZZ	J AC	Plug,5Pin
CN1602	QCNCM890BAF02	J AD	Plug,2Pin
CN1603	QCNCM890BAFZZ	J AC	Plug,2Pin
CN1604	QCNCM890BAF06	J AD	Plug,2Pin
CN1901	QCNCW037EAWZZ	J AH	Socket,5Pin
CN1902	QCNCWZC24AWZZ	J AH	Socket,24Pin
CN1903	QCNCWN1044AWZZ	J AG	Connector Ass'y,2Pin
CN1904	QCNCM891DAFZZ	J AD	Plug,4Pin
CNP301	92LCONPB4BPHK	J AC	Plug,4Pin
CNP471	QCNCWY224AWZZ	J AE	Plug,24Pin
CNP472	QCNCWZM24AWZZ	J AH	Plug,24Pin
CNP473	92LCONPB12BPHK	J AD	Plug,12Pin
CNP902	QCNCWZK24AWZZ	J AE	Plug,24Pin
CNP903,904	92LCONPB3BPHK	J AB	Plug,3Pin
CNS471	QCNCWN1057AWZZ	J AK	Connector Ass'y,24Pin
CNS472	QCNCWN1058AWZZ	J AK	Connector Ass'y,24Pin
CNS901,902	QCNCWN1054AWZZ	J AE	Connector Ass'y,3Pin
CNS903	QCNCWN1056AWZZ	J AM	Connector Ass'y,12Pin
CNS1904/CNW301	QCNCWN6716AFZZ	J AL	Connector Ass'y,4/4Pin
CW1901	QCNCWN1042AWZZ	J AD	Flat Cable,5Pin

NO.	PART CODE	★	PRICE RANK	DESCRIPTION
△ F551,552	92LFUSET102H	J	AD	Fuse,1A
FL901	VVK15BT37G/-1	J	BD	FL Display
J101	92LJACKL1779A	J	AG	Jack,Analog Line Out
J301	QJAK20011AWZZ	J	AE	Jack,Digital In
J981	QJAKJ0006AWZZ	J	AG	Jack,Headphones
M901	RMOTV0012AWZZ	J	AV	MD Spindle Motor Ass'y
M902	RMOTV0013AWM1	J	AQ	MD Sled Motor Ass'y
M903	RMOTV0014AWM1	J	AQ	MD Loading Motor Ass'y
RX302	VHPGP1F32R/-1	J	AP	Optical Fiber Data Link, GP1F32R
SW501	92LSWICH-1385A	J	AC	Switch,Key Type [Reset]
SW901	QSW-Z0003AWZZ	J	AH	Switch,Push Type [Jog]
SW950	QSW-K0006AWZZ	J	AC	Switch,Key Type [Power]
SW951	QSW-K0006AWZZ	J	AC	Switch,Key Type [Play]
SW952	QSW-K0006AWZZ	J	AC	Switch,Key Type [Stop]
SW953	QSW-K0006AWZZ	J	AC	Switch,Key Type [Rec]
SW954	QSW-K0006AWZZ	J	AC	Switch,Key Type [Cue]
SW955	QSW-K0006AWZZ	J	AC	Switch,Key Type [Eject]
SW956	QSW-K0006AWZZ	J	AC	Switch,Key Type [Enter]
SW957	QSW-K0006AWZZ	J	AC	Switch,Key Type [Name]
SW958	QSW-K0006AWZZ	J	AC	Switch,Key Type [Timer]
SW959	QSW-K0006AWZZ	J	AC	Switch,Key Type [Disp]
SW960	QSW-K0006AWZZ	J	AC	Switch,Key Type [Review]
SW961	QSW-K0006AWZZ	J	AC	Switch,Key Type [Aux]
SW962	QSW-K0006AWZZ	J	AC	Switch,Key Type [Program]
SW1952	QSW-P0006AWZZ	J	AG	Switch,Push Type [Direct]
SW1953	QSW-M0157AFZZ	J	AD	Switch,Push Type [Lead In]
SW1954	QSW-M0002AWZZ	J	AD	Switch,Push Type [Play]
SW1955	QSW-M0002AWZZ	J	AD	Switch,Push Type [Rec]
SW1956	QSW-M0001AWZZ	J	AD	Switch,Push Type [Loading]
TX302	VHPGP1F32T/-1	J	AP	Optical Fiber Data Link, GP1F32T
UN970	VHL21043TH2-1	J	AG	Remote Sensor,21043TH2

## MECHANICAL PARTS

1	LANGF0033AWZZ	J	AD	Bracket,MD Guide (A)
2	LANGF0034AWZZ	J	AD	Bracket,MD Guide (B)
3	LANGK0092AWFW	J	AM	Frame
4	LCHSM0060AWM1	J	AP	Chassis,Drive
5	LHLDX3001AWM1	J	AP	Holder,Cartridge Ass'y
6	MLEVF0024AWM1	J	AF	Lever,Cam Plate Ass'y
7	MLEVF0025AWZZ	J	AD	Lever,H/A Shift
8	MLEVF0026AWZZ	J	AF	Lever,Holder Arm
9	MLEVF0029AWM1	J	AL	Lever,Roller Arm Sub Ass'y
10	MLEVP0075AWZZ	J	AD	Lever,Clamp
11	MLEVP0076AWZZ	J	AC	Lever,Catch
12	MLEVP0077AWZZ	J	AC	Lever,Slider
13	MSPRD0103AWFJ	J	AB	Spring,Roller Holder
14	MSPRD0105AWFJ	J	AB	Spring,Spindle
15	MSPRD1318AFFJ	J	AB	Spring,Shift Arm
16	MSPRD1319AFFJ	J	AB	Spring,Holder Arm
17	MSPRD1321AFFJ	J	AB	Spring,Lack
18	MSPRD1334AFFJ	J	AC	Spring,Catch
19	MSPRP0015AWFJ	J	AB	Spring,Plate (A)
20	MSPRP0017AWFJ	J	AB	Spring,Drive Shaft
21	MSPRT1566AFFJ	J	AB	Spring,Roller Arm
22	NGERH0066AWZZ	J	AC	Gear,Loading (B)
23	NGERH0067AWZZ	J	AC	Gear,Drive
24	NGERH0068AWZZ	J	AC	Gear,Loading (A)
25	NGERH0069AWZZ	J	AC	Gear,Roller
26	NGERR0002AWZZ	J	AC	Gear,Rack
29	NROLP0010AWZZ	J	AC	Holder,Roller
30	NROLR0001AWZZ	J	AC	Transfer Roller
31	NSFTD0005AWFT	J	AF	Shaft,Drive
32	NSFTM0017AWFW	J	AC	Shaft,Loading Gear
33	NSFTM0277AFFW	J	AC	Shaft,Pickup Slide
34	NSFTM0278AFFW	J	AC	Shaft,Pickup Guide
35	PCOV3021AWFW	J	AL	Cover,Shield Top
37	PCUSG0531AFSA	J	AD	Cushion (A)
38	PCUSG0531AFSB	J	AD	Cushion (B)
39	PCUSS0041AWZZ	J	AC	Cushion,Head
40	RCILH0108AFZZ	J	AP	Magnetic Head
△ 41	RCTRH8173AF10	J		Pickup Unit
42	QCNWN6715AFM1	J	AM	MD Flat Cable,24Pin
45	PSHEP0024AWZZ	J	AC	Sheet,Head
46	MLEVP0078AWZZ	J	AC	Arm (A)
47	MLEVP0079AWZZ	J	AC	Arm (B)
48	LANGF0036AWZZ	J	AC	Bracket,Cartridge
49	MSPRT0020AWFJ	J	AB	Spring,Arm
50	PSHEP0026AWZZ	J	AC	Sheet,Head Lead Wire
51	LANGZ0020AWFW	J	AM	Bracket,Protect

NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
601	LX-BZ0030AWZZ	J	AB	Screw,ø1.7×9.5mm
602	LX-BZ0031AWZZ	J	AB	Screw,ø1.7×7.5mm
603	LX-BZ0032AWZZ	J	AB	Screw,ø1.7×2mm
604	LX-BZ0804AFFZ	J	AA	Screw,ø1.4×2.2mm
605	LX-BZ0846AFZZ	J	AB	Screw,ø1.7×3mm
606	LX-BZ0851AFZZ	J	AB	Screw,ø1.7×2.5mm
607	LX-BZ0852AFFD	J	AC	Screw,ø1.7×8.9mm
608	LX-BZ0883AFZZ	J	AB	Screw,ø1.7×5mm
609	LX-WZ9268AFZZ	J	AA	Washer,ø1.5×ø3.2×0.5mm
610	LX-WZ9269AFZZ	J	AA	Washer,ø1.2×ø3×0.25mm
611	XBPSD20P04K00	J	AA	Screw,ø2×4mm with Washer
612	XSPSN17P03K00	J	AB	Screw,ø1.7×3mm
613	LX-BZ0034AWZZ	J	AC	Screw,Special Type
M901	RMOTV0012AWZZ	J	AV	MD Spindle Motor Ass'y
M902	RMOTV0013AWM1	J	AQ	MD Sled Motor Ass'y
M903	RMOTV0014AWM1	J	AQ	MD Loading Motor Ass'y
SW1952	QSW-P0006AWZZ	J	AG	Switch,Push Type [Direct]
SW1953	QSW-M0157AFZZ	J	AD	Switch,Push Type [Lead In]
SW1954	QSW-M0002AWZZ	J	AD	Switch,Push Type [Play]
SW1955	QSW-M0002AWZZ	J	AD	Switch,Push Type [Rec]
SW1956	QSW-M0001AWZZ	J	AD	Switch,Push Type [Loading]

## CABINET PARTS

201	92LCAB2627AS1	J	AY	Front Panel Ass'y
201- 1	—	—		Front Panel (Not Replacement Item)
201- 2	92LBADGE1692A	J	AC	Badge,SHARP
203	HDECQ0273AWSA	J	AK	FL Window
204	JKNBK0050AWSA	J	AC	Knob,Jog Volume
205	JKNBK0051AWSA	J	AC	Knob,Rec Volume
206	HDECQ0274AWSA	J	AK	Decoration,Jog
207	HDECQ0275AWSA	J	AK	Decoration,MD
208	GDORF0048AWSA	J	AF	MD Door
209	MSPRT0021AWZZ	J	AB	Spring,MD Door
210	JKNBZ0462AWSA	J	AE	Knob,Power
211	JKNBZ0439AWSA	J	AF	Knob,Operation
212	JKNBZ0441AWSA	J	AE	Knob,Eject
213	PRDAR0041AWFW	J	AG	Heat Sink
214	LHLDZ1168AWZZ1	J	AE	FL Holder
215	GITAR0288AWSA	J	AR	Back Panel
△ 216	QACCD0014AWZZ	J	AK	AC Power Supply Cord
△ 217	LBSHC0002AWZZ	J	AD	Bushing,AC Power Supply Cord
218	92LN-BAND1318A	J	AA	Nylon Band,80mm
219	LCHSM0062AWFW	J	AW	Main Chassis
220	LANGZ0018AWFW	J	AG	Bracket,MD Support
221	GLEGP0006AWSA	J	AE	Insulator
222	GLEGP0006AWSB	J	AG	Insulator
224	PCUSG0029AW00	J		Cushion,PWB
225	92LCAB2627CS1	J	BB	Top Cabinet
△ 226	92LFSHOLD1652T	J	AB	Holder,Fuse
△ 227	92LLUG1746A	J	AA	Lug,Terminal
228	QCNWN1174AWZZ	J	AC	Tip with Wire
229	92LCAUT1472A	J	AA	Caution,Fuse
601	LX-EZ0005AWFD	J	AA	Screw,Special
602	XEBSD26P10000	J	AA	Screw,ø2.6×10mm
603	XJBSD30P08000	J	AA	Screw,ø3×8mm
604	XEBSF26P10000	J	AA	Screw,ø2.6×10mm
605	LX-JZ0010AFFD	J	AA	Screw,ø3×10mm
606	XJBSP30P10000	J	AA	Screw,ø3×10mm
607	XHBSD40P08000	J	AA	Screw,ø4×8mm
608	XWSSD40-11000	J	AA	Washer,ø4mm
609	XJBSD30P06000	J	AA	Screw,ø3×6mm
610	XJSSD30P08000	J	AA	Screw,ø3×8mm
611	XWHFZ32-05070	J	AA	Washer,ø3.2×ø7×0.5mm
612	LX-WZ0014AGFK	J	AA	Washer,ø2.6mm

## ACCESSORIES

	QCNWG0003AWZZ	J	AN	Pin Cord
	TINSE0191AWZZ	J	AG	Operation Manual
	TINSZ0283AWZZ	J	AB	Quick Guide
	TLABM0051AWZZ	J	AC	Feature Label
	RRMCG0123AWSA	J	AY	Remote Control
	92LLID1810A	J	AQ	Battery Lid,Remote Control

## P.W.B. ASSEMBLY (Not Replacement Item)

PWB-A	92LPWB2628MANS	J	—	Main
PWB-B1~3	92LPWB2628DPLS	J	—	Display/Switch/Headphones (Combined Ass'y)

## MD-R2

NO.	PART CODE	★	PRICE RANK	DESCRIPTION
PWB-C	QPWBF0400AWZZ	J	AC	MD Mechanism Switch (PWB Only)
PWB-D	92LPWB2604MDSS	J	—	MD Main

### OTHER SERVICE PARTS

QCNWK0059AFZZ	J	AF	Extension Cable (2Pin)
QCNWK0107AFZZ	J	AH	Extension Cable (6Pin)
QCNWK0108AFZZ	J	AL	Extension Flat Cable (28Pin)
QCNWK0109AFZZ	J	AH	Extension Flat Cable (5Pin)
RRCDT0101AFZZ	J	CB	Test Disc,Low Reflection
RRCDT0103AFZZ	J	BK	Head Adjusting Transparend Disc
RUNTK0457AFZZ	J		Extension PWB
UDSKM0001AFZZ	J	AZ	Recording Mini Disc




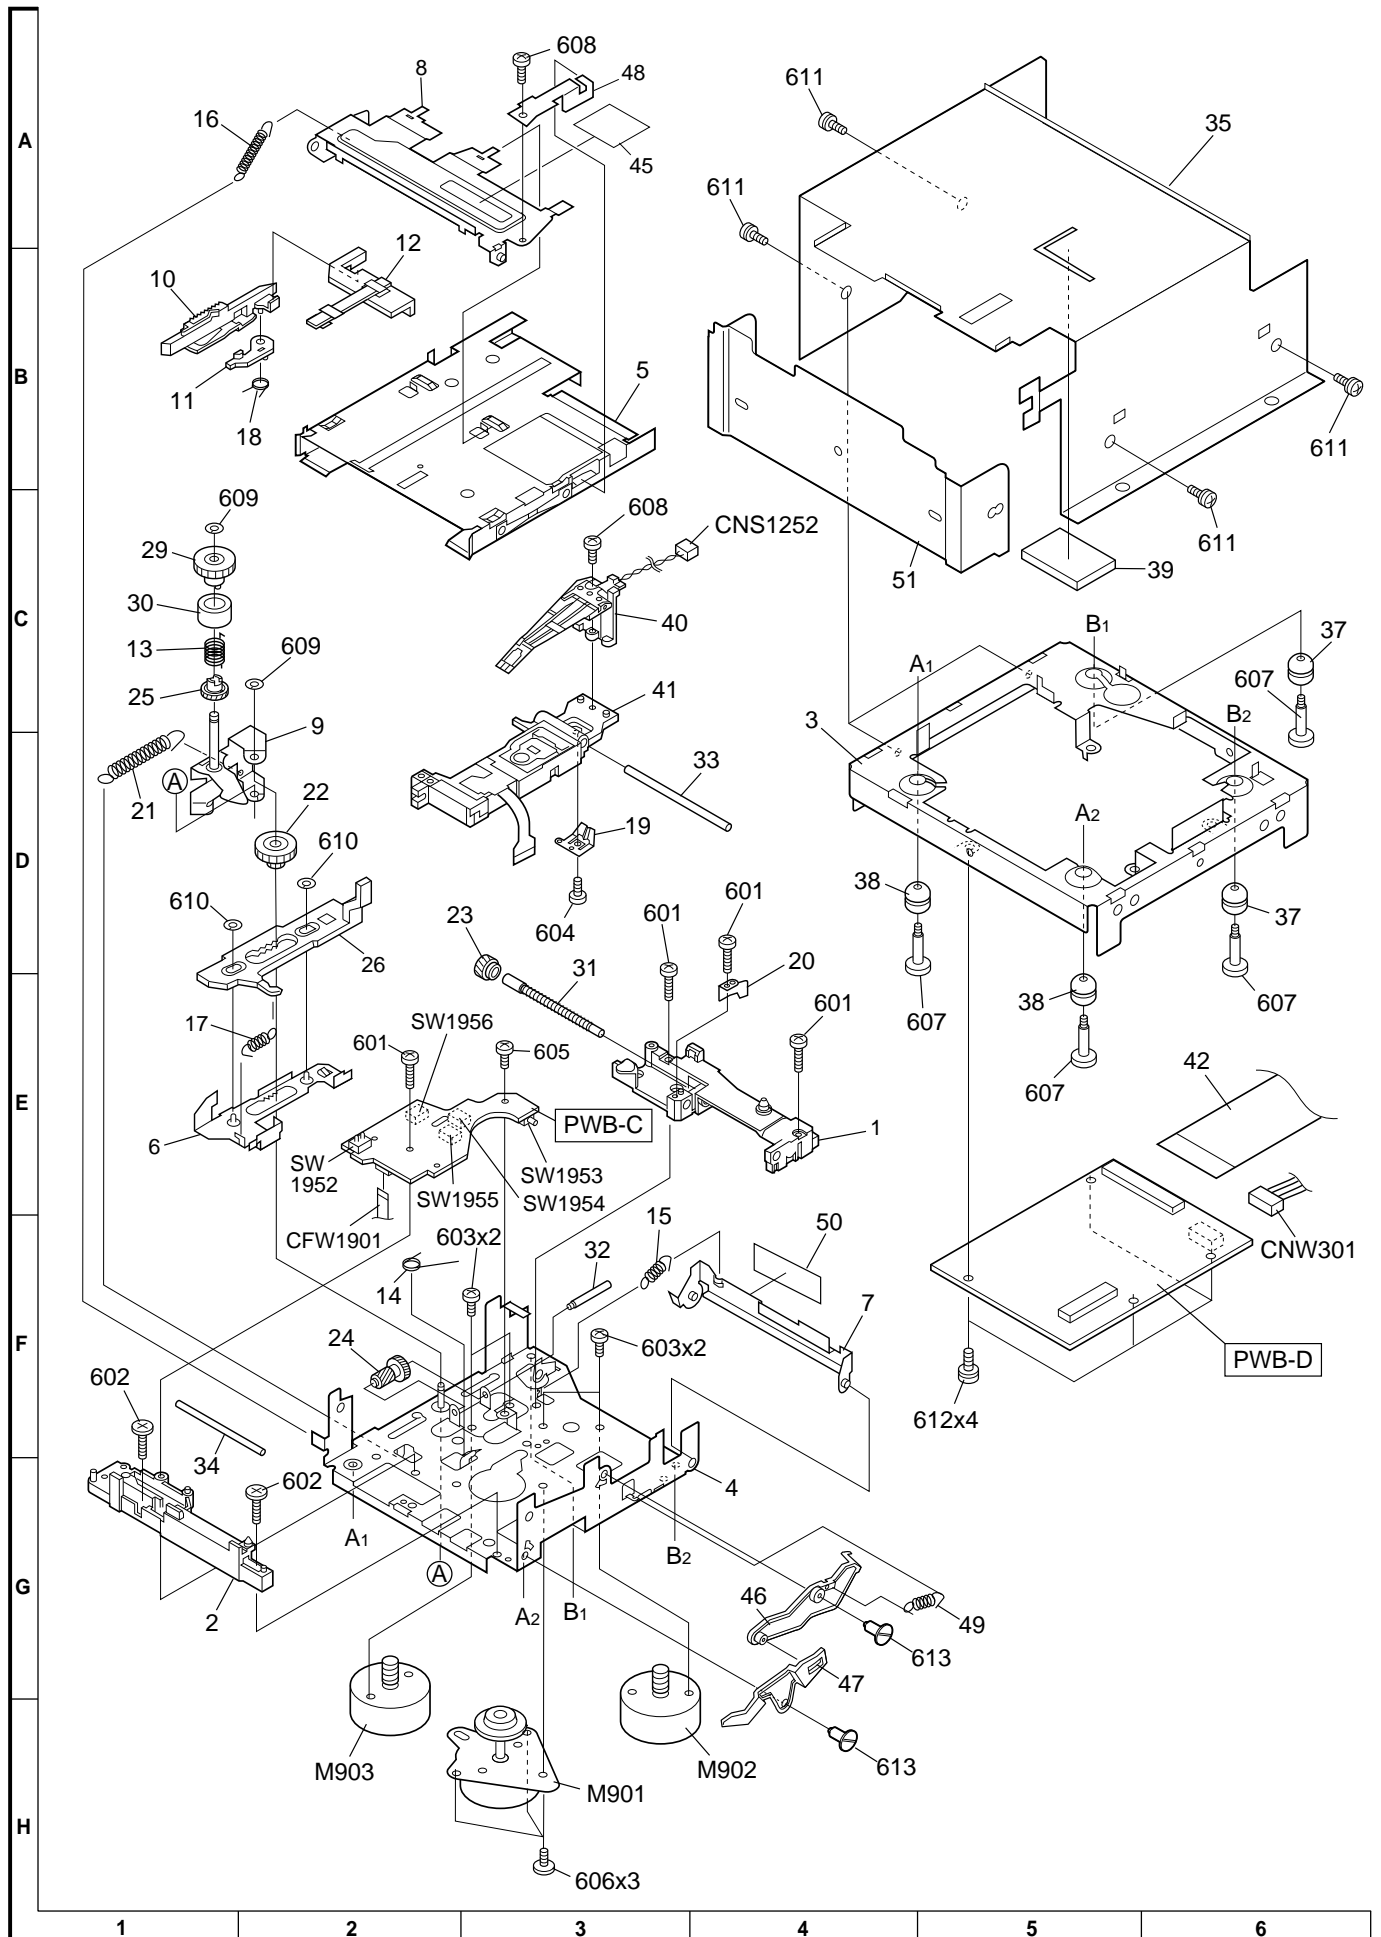


Figure 6 MD MECHANISM EXPLODED VIEW

- 7 -

# PACKING OF THE SET

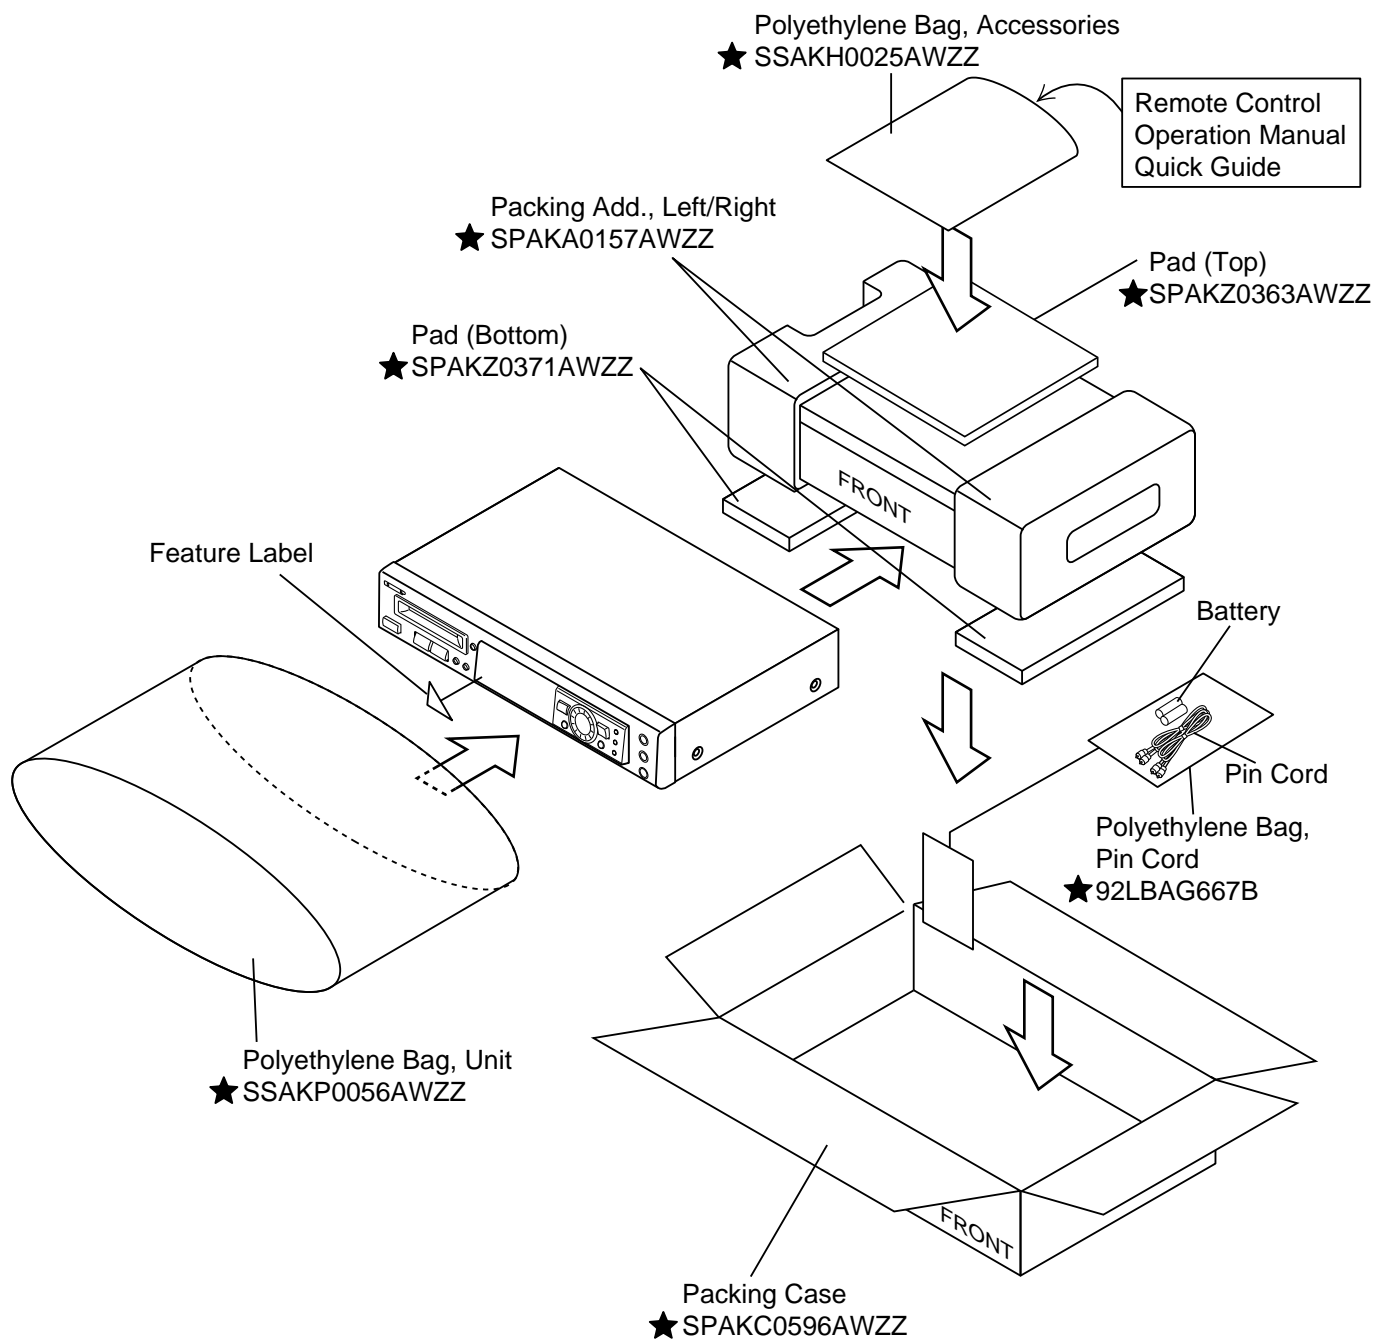

★ : Not Replacement Item

# SHARP

**COPYRIGHT © 1998 BY SHARP CORPORATION**

**ALL RIGHTS RESERVED.**

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

**SHARP CORPORATION**  
**Audio-Visual Systems Group**  
**Quality & Reliability Control Center**  
**Higashihiroshima, Hiroshima 739-01, Japan**  
**Printed in Japan**

A9801-1770NS•HA•M

SC